

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 447-3416  
www.dawn-ent.com

## INSTALLATION INSTRUCTIONS <sup>C</sup>

PART NUMBER: 200C  
FOR: 2011 + Chrysler 200  
EFFECTIVE: 24 MAR 2011

### INSTALLATION PACKAGE INCLUDES:

- A) 5 – Paper Hole Locators (*for the five ((5)) fastening holes – See Diagram B*)
- B) 5 – M-6 x 3/4" Mounting Screws
- C) 5 – Lock Washers
- D) 5 – Flat Washers
- E) 5 – 5/8" Black Hole Caps
- F) Adhesive Pads (*for an unpainted Sportwing<sup>®</sup>*)
- G) Instruction Sheet

### PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Remove trunk liner. **See Diagram A on back of sheet.** Starting on the drivers' side, measure down **6 5/8"** from the tip of the trunk lid toward the rear of the car and place a mark with a grease pencil. Repeat procedure on other side.
2. Leaving paper liner on the bottom of the mounting feet, place the Sportwing<sup>®</sup> on the marks made in Step #1 so that as you face the rear of the car the front tips of the Sportwing<sup>®</sup> rests on the mark. **See Diagram A on back of sheet.** Next, exactly center the Sportwing<sup>®</sup> from left to right. Outline the mounting feet with a grease pencil.
3. Remove the Sportwing<sup>®</sup> from the deck lid and turn the Sportwing<sup>®</sup> upside down (**NOTE: place a soft cloth down so you do not scratch the top painted surface**). **See Diagram B on back of sheet.** Using the five (5) paper hole locators, provided. Perfectly center each hole locator over the five (5) fastening threaded sleeves on bottom of Sportwing<sup>®</sup>.

Carefully flip the Sportwing<sup>®</sup> over, leaving hole locators still fastening to the threaded sleeves. Make sure that none of the hole locators have moved. Place the Sportwing<sup>®</sup> back onto the outline marks that you made in Step #2.

Next, when Sportwing<sup>®</sup> is in alignment with outline marks, tape the hole locators onto the deck lid using masking tape. When the five (5) hole locators are taped in place, carefully lift the Sportwing<sup>®</sup> up off of the deck lid, leaving the hole locators taped on the deck lid. Set the Sportwing<sup>®</sup> aside.

4. Using a 1/8" or similar drill bit, drill a 1/8" pilot hole in the exact center of each of the five (5) paper hole locators (**NOTE: when drilling for each hole on top panel of deck lid, you will need to continue drilling through secondary panel of deck lid. See Diagram C**). After drilling 1/8" pilot holes through top panel and secondary panel of deck lid you will need to open deck lid and using a 5/8" hold saw, you will need to open 1/8" pilot holes in the secondary panel to 5/8". This will allow you access to the top panel of the deck lid when fastening screws later on in the installation. 5/8" black hole caps have been provided for these 5/8" holes upon finishing.
5. Apply zinc chromate primer or touch up paint on the edges of the five (5) 3/8" holes that you drilled in the deck lid.
6. Close the trunk and remove the paper liner from the bottom of all three (3) mounting feet and *place the Sportwing<sup>®</sup> back onto the outline marks that you made in Step #2*). Before pressing firmly into place, make sure that the 3/8" mounting holes align with the threaded sleeves of the mounting area. If satisfied with alignment, press firmly into place. If you need to realign, reposition Sportwing<sup>®</sup> until satisfied with alignment.
7. Using mounting screws, provided, with lock washers and flat washers, install screws into threaded sleeves of all five (5) mounting feet and partially tighten all five (5) mounting screws. After all five (5) are started, tighten evenly until tight. **DO NOT OVER TIGHTEN.**
8. Clean up any metal shavings that might have fallen into the trunk and you are done. Please call the TOLL FREE number at the top of this sheet if you have any questions or would like information about other quality Sportwing products. Thank you for choosing Dawn Enterprises Inc.

**SEE DIAGRAMS ON BACK OF SHEET**

DIAGRAM A

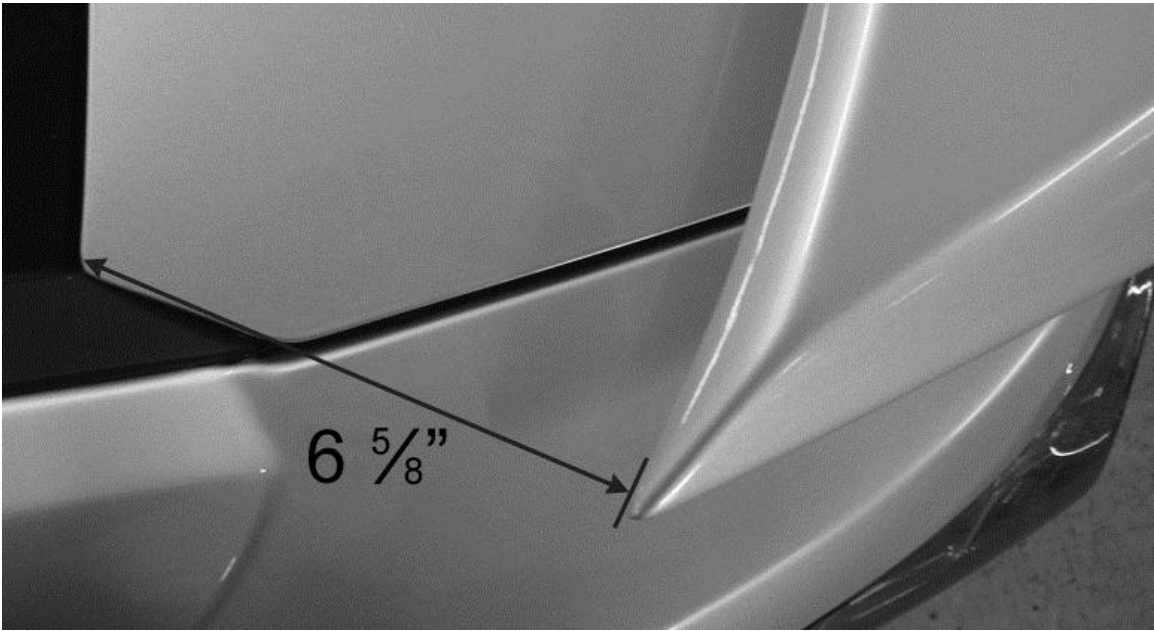


DIAGRAM B

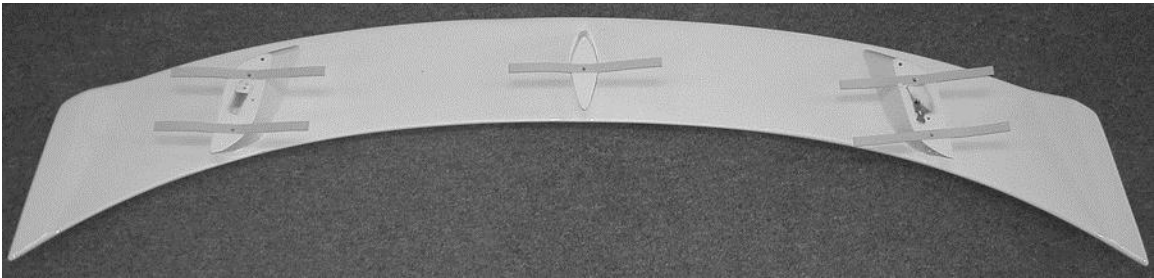


DIAGRAM C

