

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS ^{SS}

PART NUMBER: 300-05
FOR: 2005 + Chrysler 300
EFFECTIVE: 08.23.07

INSTALLATION PACKAGE INCLUDES:

- A) 4 – 1" Mounting Screws
- B) 4 – Lock Washers
- C) Adhesive Pads (for an unpainted Sportwing®)
- D) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **See Diagram A below.** Along the drivers' side, measure down 11 ½" from the tip of the trunk lid back toward the rear of the car and make a mark with a grease pencil. Repeat on passenger side.
2. Leaving paper liner on bottom of mounting feet, place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car, the front tips of the Sportwing® rests on the marks. **See Diagram A below.** Center the Sportwing® exactly from left to right. Using a yellow grease pencil, outline both outside mounting feet. Set Sportwing® aside.
3. Measure down 12" from the front corner of the trunk lid where it meets the rear window glass and make a mark. **See Diagram B below.**
4. Line up the template provided with the edge of the trunk at the 12" mark. **See Diagram B below.**
5. Drill 5/32" holes through the two fastening hole locations on the drivers side template. Repeat this procedure on the passenger side by flipping template over (**NOTE: when drilling these holes, we insist using a drill stopper to prevent from drilling into the rain channel. Only extend drill bit ½" past drill stopper when drilling these holes**).
6. Close the trunk and remove the paper liner from the bottom of all three mounting feet. Place the Sportwing® back onto the outline marks made in Step #2 and press firmly into place (**NOTE: it will not be necessary to use any fastening screws on the center mounting post**). The two-way mounting tape will hold the center post firmly in place.
7. Open the trunk lid, using the same 5/32" drill bit (**NOTE: we insist using a drill stopper to prevent from drilling through the top of the Sportwing®**) only extend the drill bit ¾" past the drill stopper. Holding onto the Sportwing® while drilling, drill up through the two fastening holes per side that you made in Step #5 up into the bottom of the mounting foot of the Sportwing®. Install self-tapping mounting screws with lock washers and tighten firmly using a ratchet with 5/16" socket. **DO NOT OVER TIGHTEN.** Repeat procedure on other side.
8. Clean up any metal shavings that may have fallen into the trunk. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

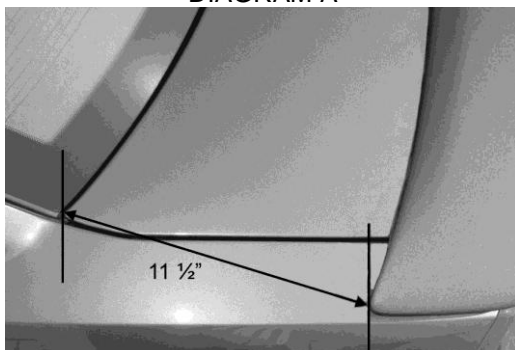


DIAGRAM B

