

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

SS

PART NUMBER: 300-08
FOR: 2008 + Chrysler 300
EFFECTIVE: 02.18.08

INSTALLATION PACKAGE INCLUDES:

- A) 4 – 3/4" Black Stainless Steel Mounting Screws for outside mounting location (*will not rust*)
- B) 4 – Black Stainless Steel Lock Washers (*will not rust*)
- C) 2 – 3/4" Zinc Mounting Screws for inside fastening location
- D) 2 – Zinc Lock Washers for inside mounting location
- E) 2 – 5/8" Black Hole Caps (*to be used to cover 5/8" holes made in secondary panel of deck lid*)
- F) 1 – Template (*drivers' side – flip template over for passenger side*)
- G) Adhesive Pads (*for unpainted Sportwing®*)
- H) Instruction Sheet

EXTRA TOOLS NEEDED:

- 1. 5/32" drill bit
- 2. 5/8" hole saw to open the secondary panel of the inner deck lid to give you access to the top panel of the deck lid for the two center most mounting feet.

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **See Diagram A on back of page.** Along the drivers' side, measure down **13 3/4"** from the tip of the trunk lid, back towards the rear of the car, and make a mark with a grease pencil. Repeat procedure on other side.
2. Leaving paper liner on bottom of mounting feet, place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car, the front tips of the Sportwing® rests on the marks. **See Diagram A on back of sheet.** Center the Sportwing® exactly from left to right. Using a yellow grease pencil, outline both outside mounting feet. Set Sportwing® aside.
3. Open trunk. Remove trunk liner. Place a protective cover inside the trunk to capture any metal shavings.
4. Close the trunk. Starting on the drivers side, measure down **14 1/2"** from the front corner of the trunk lid where it meets the rear window glass and make a mark, **see Diagram B on back of sheet.** Repeat procedure on passenger side.
5. Line up the drivers side template, provided, with the edge of the trunk at the **14 1/2"** mark, **see Diagram B on back of sheet.** Flip template over and repeat procedure on passenger side.
6. Drill 5/32" holes through the three (3) fastening hole locations on the drivers' side template. Repeat this procedure on the passenger side (**NOTE: when drilling these holes, we insist using a drill stopper to prevent from drilling into the rain channel. Only extend drill bit 1/2" past drill stopper when drilling these holes**). When drilling through template for the two inside mounting feet, you will need to drill through top panel of deck lid and continue drilling through the secondary panel of deck lid.
7. Next, open deck lid and using a 5/8" hole saw, you will need to open the two 5/32" pilot holes that you made in the secondary panel of the inside deck lid made in Step #6. This will give you access to the top panel of the deck lid for the two inside mounting feet.
8. Close deck lid. Remove the paper liner from the bottom of all four (4) mounting feet of the Sportwing® and place the Sportwing® back onto the outline marks made in Step #2, press firmly into place. Open the deck lid and using the 5/32" drill bit (**NOTE: we insist using a drill stopper to prevent from drilling through the top of the Sportwing®**) only extend the drill bit 3/4" past the drill stopper. Holding onto the Sportwing® while drilling, drill up into the bottom of the mounting feet of Sportwing® through the three fastening holes per side that you made in Step #6. Using a ratchet with 5/16" socket, install black stainless steel mounting screws and stainless steel lock washers to the four outside mounting locations. Use the two zinc screws with zinc lock washers to fasten the inside mounting foot locations. **DO NOT OVER TIGHTEN.** Repeat procedure on other side.

10. Clean up any metal shavings that may have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

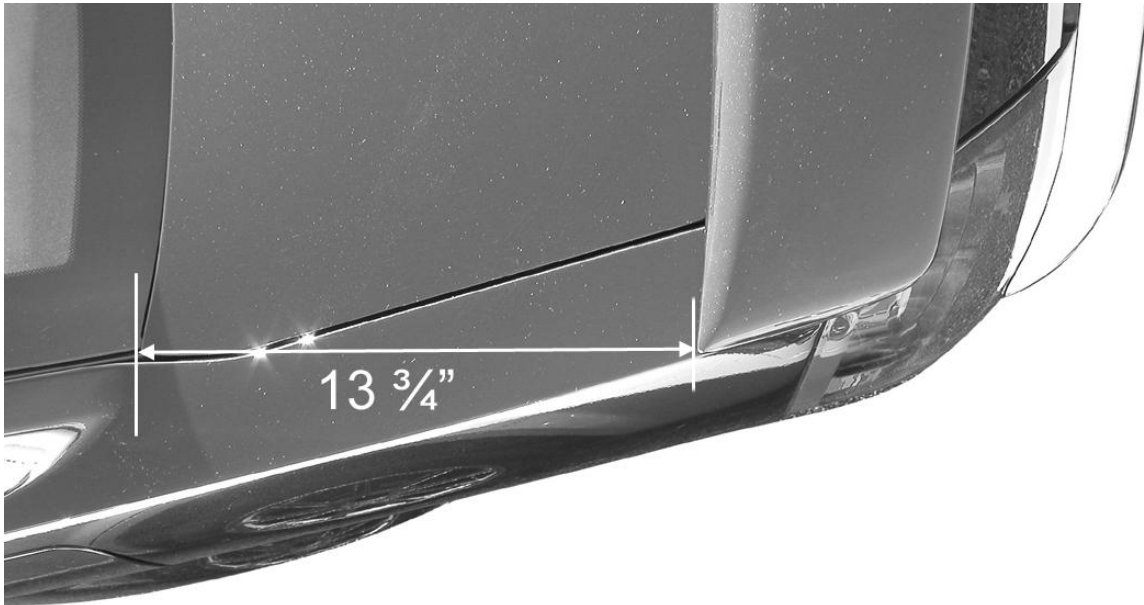


DIAGRAM A



DIAGRAM B