

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: 370Z
FOR: 2010 + Nissan 370z
EFFECTIVE: 03.04.10

INSTALLATION PACKAGE INCLUDES:

- A) 2 – Paper Hole Locators (extra long)
- B) 1 – Alcohol Wipes
- C) 1 – Pro-Bond Applicator
- D) 2 – M-6 x 3/4" Machine Screws
- E) 2 – Lock Washers
- F) 2 – Flat Washers
- G) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

REMOVE PLASTIC HATCH COVER – PRYS OFF – NO FASTENERS OR SCREWS. START IN FRONT, WILL SNAP OFF EASILY. CLOSE DECK LID AND SET PLASTIC COVER ASIDE.

1. **CLEAN AND PREP**

Clean the surface where the Sportwing® is to be installed using the alcohol pads enclosed for proper installation. Wipe off any excess residue with a clean cloth.

2. **See Diagram A on back of sheet.** Starting on the drivers' side, place a mark at the 8 1/2" mark. Repeat on passenger side. Then, center the Sportwing® exactly from left to right.

3. Leaving the liner on bottom of mounting tape of Sportwing®, place the Sportwing® so that it fits flush to the deck lid and the front tips of the Sportwing are aligned to the 8 1/2" marks that you made in Step #2. Next, using a grease pencil and making sure Sportwing® is flush to the deck lid and in desired position, outline completely with the grease pencil around entire Sportwing® so that later on when adhering Sportwing® to the deck lid, you will be able to place the Sportwing® exactly to the desired position. **See Diagram B on back of sheet.**

4. Leaving the liner on the bottom of mounting tape, place the Sportwing® upside-down on a soft cloth, so you do not scratch the painted top surface. Using two (2) paper hole locators, provided, remove the liner from the hole locator to expose the adhesive. Place the cut out hole in the hole locator exactly over the center of the two (2) threaded sleeves of the fastening area of the Sportwing®. **See Diagram C on back of sheet.** Make sure that the hole locators do not move (**NOTE: a small piece of masking tape is helpful in holding the hole locators in place**). Carefully place the Sportwing® back onto the outline marks on deck lid that you made in Step #3. Next, carefully lift the Sportwing® off the deck lid

5. Using 1/8" or similar drill bit, drill a 1/8" hole in the exact center of the paper hole locator, through the top panel only of the deck lid. Repeat procedure on other side.

6. Remove the paper hole locators from the deck lid and using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) open the two (2) 1/8" pilot holes to 7/16".

7. Apply Chromate Primer or touch-up paint to the edges of the two (2) 7/16" holes that you drilled in the deck lid.


8. Next, using the Pro-Bond Adhesive Promoter, provided, squeeze the applicator until you feel it crush. The applicator will become wet on the end and is ready for use. Apply the Pro-Bond where adhesive tape of the Sportwing® will adhere to the deck lid, inside of the outline marks of the Sportwing® that you made in Step #3. Next, make sure the vehicle and Sportwing® is at least 75°F/24°C (**NOTE: if the surface of the vehicle and Sportwing® is cold, use a heat gun or hair dryer to warm**). Peel the liner off the bottom of the mounting area of Sportwing® and lightly place the Sportwing® back onto the outline marks on the deck lid made in Step #3. **Before** pressing the Sportwing® into place, open the deck lid and make sure that the two (2) threaded sleeves of the Sportwing® are aligned with the two (2) 7/16" holes that you made in the deck lid in Step #6. When satisfied with alignment press firmly into place.

9. Open the deck lid and using the mounting screws with lock washers and flat washers, provided, tighten mounting screws until screws are snug – **DO NOT OVER TIGHTEN!**

10. Replace the plastic cover.

11. If you have any questions, problems or if you would like information about other, quality Sportwing products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

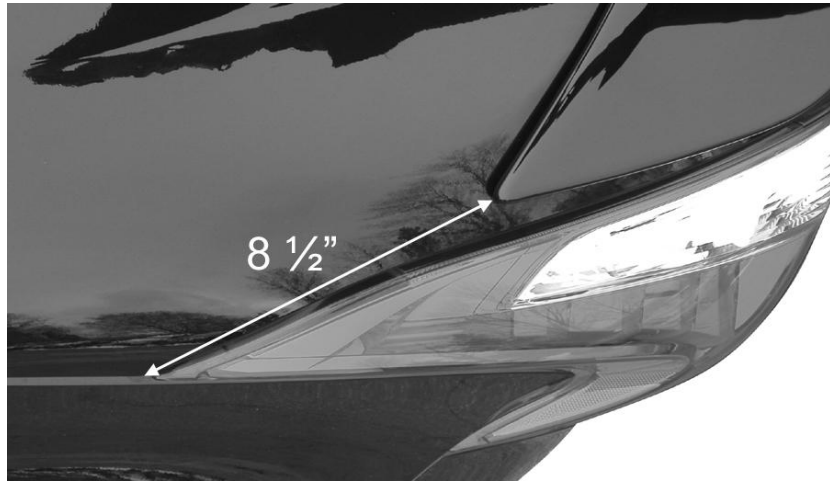

Measure back from tip of lens

DIAGRAM B



DIAGRAM C

