

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: 691550
FOR: 2008 + Ford Focus 2 & 4 Door
EFFECTIVE: 01.29.09

INSTALLATION PACKAGE INCLUDES:

- A) Bottle of Paint Thinner (**IMPORTANT!** Thinner to be used only in Step #4. **DO NOT USE to clean or wipe vehicle, other than inside of grease pencil marks, as shown in Diagram B).**
- B) Pro-Bond Adhesive Promoter (crush swab)
- C) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. CLEAN AND PREP

For proper installation of Sportwing[®], clean the surface where the Sportwing[®] is to be installed using car wash soap and water.

- 2. Close the trunk. Starting on the drivers' side, measure down **9 1/8"** from the front corner of the trunk lid where it meets the window glass and make a mark. **See Diagram A below.** Repeat procedure on passenger side.

- 3. Leaving the Red Liner on bottom of mounting area of Sportwing[®], place the Sportwing[®] so that it fits flush to the deck lid and the front tips of the Sportwing are aligned to the **9 1/8"** marks that you made in Step #2. Then, center Sportwing[®] exactly left to right. **See Diagram A on back of sheet.** Next, using a grease pencil and making sure Sportwing[®] is flush to the deck lid and in desired position, outline completely with the grease pencil around entire Sportwing[®] so that later on when adhering Sportwing[®] to the deck lid, you will be able to place the Sportwing[®] exactly to the desired position. **See Diagram B on back of sheet.**

- 4. **IMPORTANT! See Diagram B on back of sheet before beginning this step!** Using paint thinner in brown bottle, provided, pour thinner onto a soft cloth (**NOTE: pour away from vehicle so thinner does not drop onto the deck lid of the vehicle**) and wipe thinner onto shaded area only, **as shown in Diagram B on back of sheet.** Making sure thinner does not run above or below outline marks that you made in Step #3, wipe immediately if thinner should run outside of outline marks. Wipe dry with clean, soft cloth.

- 5. Next, using the Pro-Bond Adhesive Promoter Crush Swab, provided, squeeze the applicator until you feel the applicator crush. The applicator will become wet on the end and is ready for use. Apply a thin coat of Pro-Bond inside of the outline marks (**NOTE: shaded area as shown in Diagram B**) of the Sportwing[®] that you made in Step #3. Should Pro-Bond run beyond shaded area, wipe immediately (**NOTE: Pro-Bond could dull paint**).

- 6. Next, make sure that the vehicle and Sportwing[®] is at least 75°F – 95°F before installing Sportwing[®].
IN WARMER TEMPERATURES: Place the Sportwing[®] and vehicle in a sunny area before installing. This will allow Sportwing[®] to form and adhere properly to vehicle.
IN COLDER TEMPERATURES: You will need to use a heat gun or hair dryer to warm the surface of the deck lid and also heat the Sportwing[®], this will allow the Sportwing[®] to form and adhere properly to the vehicle.
IMPORTANT! When heating, do not direct heat in one area too long, keep heat gun moving so you do not damage painted surface.

- 7. Peel all of the red liner off from the bottom of the mounting area of Sportwing[®] and place back onto the outline marks on the deck lid made in Step #3 and press firmly into place. Using a soft cloth, apply pressure the entire length of the Sportwing[®].

- 8. If you have any questions, problems or if you would like information about other quality Sportwing[®] products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises, Inc.

DISCLAIMER: Dawn Enterprises, Inc. is not responsible for any damage done by improper installation.

DIAGRAM A

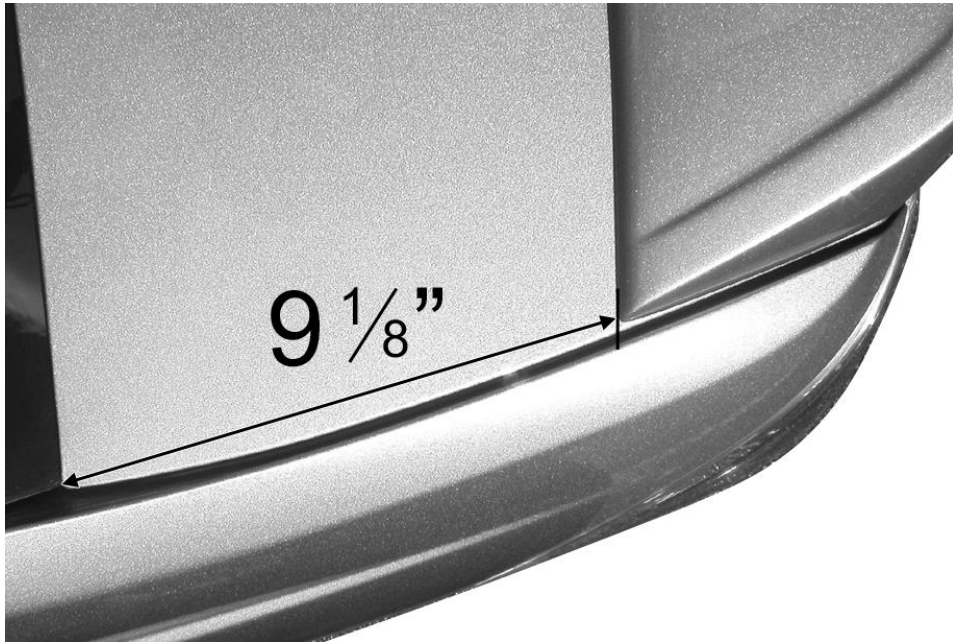


DIAGRAM B



DISCLAIMER: Dawn Enterprises, Inc. is not responsible for any damage done by improper installation.