

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

SS

PART NUMBER: ACC03-2DR
FOR: 2003 + Honda Accord 2 Door
EFFECTIVE: 10.09.02

INSTALLATION PACKAGE INCLUDES:

- A) 4 – 1" Mounting Screws
- B) 4 – Lock Washers
- C) 2 – Electrical Connectors
- D) ¼" Wiring Harness
- E) Template
- F) Adhesive Pads (for an unpainted Sportwing®)
- G) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Close trunk. **See Diagram A on back of sheet.** Along the drivers' side, measure down 7 ½" from the tip of the trunk lid back towards the rear of the car and make a mark with a grease pencil. Repeat on passenger side.
2. Leaving paper liner on bottom of mounting feet, place the Sportwing® on the marks made in Step #1. **See Diagram A on back of sheet.** As you face the rear of the car, the front tip of the Sportwing® will rest on the marks. Center the Sportwing® exactly from left to right. Using a grease pencil, outline both mounting feet. Remove Sportwing from the trunk.
3. Set the Sportwing® aside. Position the template provided on the drivers' side outline made in Step #2. Using a 5/32" drill bit, drill pilot hole through the spot indicated for the wire harness. When drilling for the wire harness hole, drill through the first panel only. Enlarge harness pilot hole to 3/8". We suggest using a uni-bit for a cleaner cut.
4. Close the trunk and remove the paper liner from the bottom of the mounting feet. Feed the brake light wires through the harness hole made in Step #3 (**NOTE: be careful not to crimp the brake light wires as you position the Sportwing® for installation**). Place the Sportwing® on the outline marks made in Step #2 and press firmly into place.
5. Open the trunk lid and notice two (2) small circular indentations in the rain channel of the trunk lid under the area where the mounting feet sit. **See Diagram B on back of sheet (NOTE: drill holes slightly inside of indentations as shown in Diagram B)**. Using a 5/32" drill bit, drill through these indentations and up into the bottom of the mounting feet (**NOTE: when drilling, we insist you use a drill stopper to prevent from drilling through the top of the Sportwing®. Do not extend drill bit more than 1" past drill stopper**). Insert mounting screws with lock washers and tighten. **DO NOT OVER TIGHTEN.** Repeat procedure on other side.
6. Feed the brake light wires from the Sportwing® through the ¼" wire harness provided. Using black electrical tape, fasten this harness neatly along side of factory harness, which runs down the drivers' side trunk hinge. Be sure to leave enough slack for opening and closing trunk lid. Run the wires toward the drivers' side taillight assembly and using the top plug of drivers' side taillight. Connect the Sportwing® hot wires to the white wire with black stripe and silver slashes. Next, connect the ground wire to the black wire with silver slashes. Test the connections by stepping on the brake pedal.
7. Clean up any metal shavings that might have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

SEE DIAGRAMS ON BACK OF SHEET

DIAGRAM A

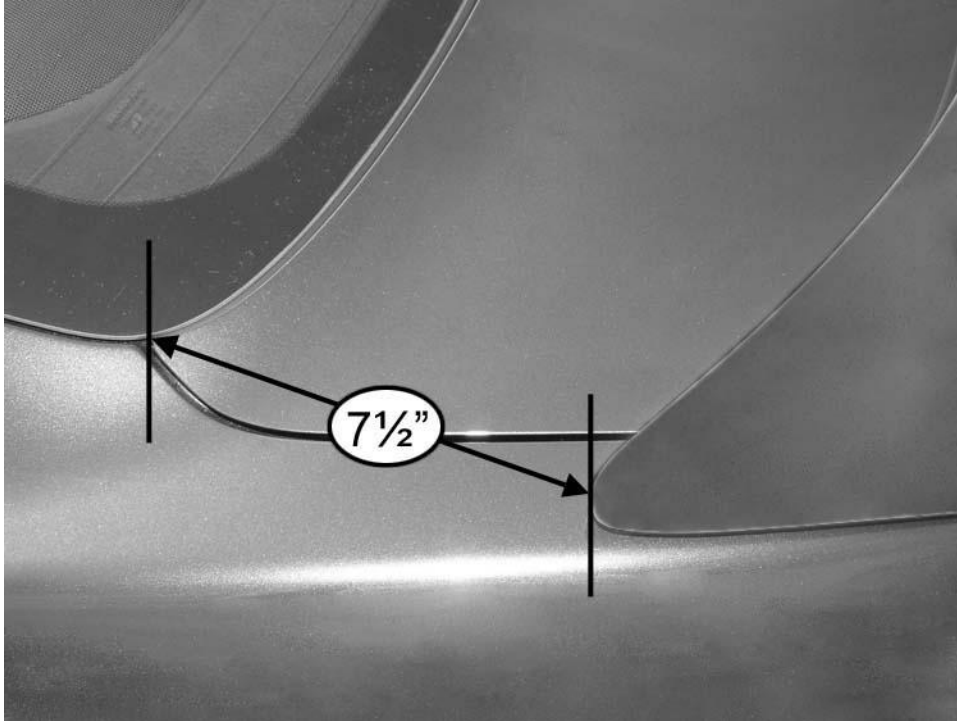


DIAGRAM B

