

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: ACC03F
FOR: 2003 + Honda Accord 4 Door Flush Mount
EFFECTIVE: 10.15.02


INSTALLATION PACKAGE INCLUDES:

- A) 2 – 3/4" Mounting Screws
- B) 2 – 1/4" Lock Washers
- C) 2 – Black Hole Caps
- D) Template
- E) Adhesive Pads (*for an unpainted Sportwing®*)
- F) Instruction Sheet


PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Measure down 12" from the front corner of the trunk lid and make a mark. **See Diagram A on back of sheet.** Repeat on other side.
2. Line up the template provided with the edge of the trunk at the 12" mark. **See Diagram A on back of sheet.**
3. Drill one 5/32" pilot hole through the spot indicated in the template for the fastening hole. When drilling fastening hole, you will need to drill through both panels of deck lid. When Drilling through secondary panel, make sure you are in the flat area so that your black hole cap will be centered on flat area of inner panel. **See Diagram B on back of sheet.**
4. Open the trunk. Using a 5/8" hole saw, open up the mounting hole on the inside trunk secondary panel. This will give you access for your socket wrench later. Repeat procedure on other side. Black hole caps have been provided upon finishing. Close trunk.
5. Leaving paper liner on bottom of mounting area, place the Sportwing® on the deck lid. Next, center the Sportwing® from left to right. Outline the mounting area with a grease pencil. This will allow you to be able to place the Sportwing® back onto the deck lid at your desired position.
6. Remove the paper liner from the bottom of the mounting area and place the Sportwing® back onto the outline marks made in Step #5. Press firmly into place (**NOTE: it will be necessary to use fastener screws on the outer mounting area. The two-way tape itself will hold the center area of Sportwing® in place.**)
7. Open the trunk and switch back to a 5/32" drill bit and drill up into the bottom of the mounting feet using the pilot holes drilled in Step #3 (**NOTE: when drilling, you must use a drill stopper to prevent from drilling through the top of the Sportwing®. Do not extend drill bit more than 3/4" past drill stopper.**) Install mounting screws with lock washers and tighten firmly. **DO NOT OVER TIGHTEN.** Repeat procedure on other side. Place the black hole caps, provided, over your socket wrench access holes in secondary panel when finished.
8. Clean up any metal shavings that might have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

SEE DIAGRAMS ON BACK OF SHEET

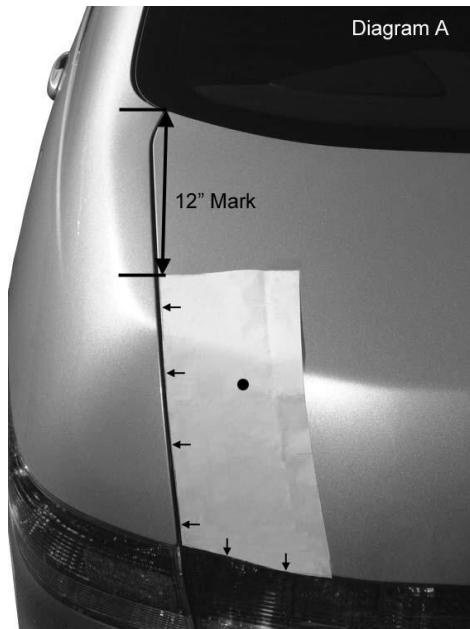

Drill bit should exit through secondary panel at this location.
Then, open this pilot hole to 5/8" using a 5/8" hole saw
(**NOTE:** this opening will allow you to use your socket wrench later on in the installation). Back hole caps have been provided upon finishing.

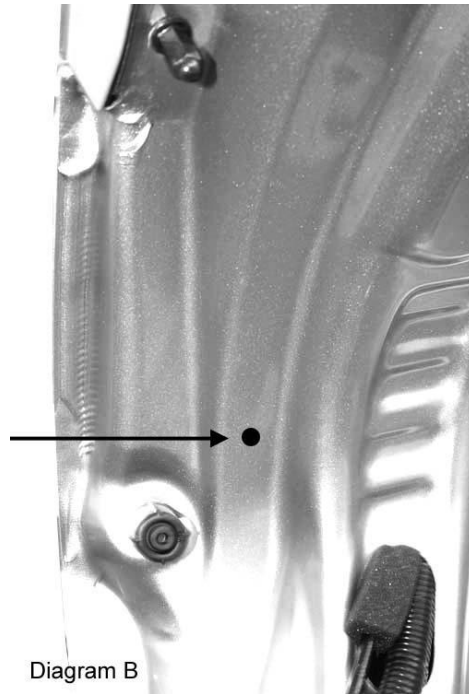

Finished Installation