

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 447-3416  
www.dawn-ent.com

## INSTALLATION INSTRUCTIONS

SS/ZINC

PART NUMBER: ACC08-2DR  
FOR: 2008 + Honda Accord 2 Door  
EFFECTIVE: 02.12.08

### INSTALLATION PACKAGE INCLUDES:

- A) 4 – 3/4" Black Screws (for outer trunk channel mounting location)
- B) 4 – Black Lock Washers (1/4" for **outer trunk** mounting location)
- C) 4 – Black Flat Washers (for **outer trunk** mounting location)
- D) 2 – 3/4" Chrome Screws (for **inside** mounting location)
- E) 2 – 1/4" Chrome Lock Washers (for **inside** mounting location)
- F) 2 – Chrome Flat Washers (for **inside** mounting location)
- G) 2 – Electrical Connectors
- H) 1/4" Wire Harness
- I) 1 – Template (drivers' side – flip template over for passenger side)
- J) Adhesive Pads (for an unpainted Sportwing®)
- K) Instruction Sheet

### PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

**OPEN THE TRUNK AND PLACE A PROTECTIVE COVER INSIDE THE TRUNK TO CAPTURE ANY METAL SHAVINGS.**

1. Close trunk. **See Diagram A on back of sheet.** Along the drivers' side measure down 7 1/2" from the tip of the trunk lid, back toward the rear of the car and make a mark with a grease pencil. Repeat on passenger side.
2. Leaving the paper liner on bottom of mounting feet, place the Sportwing® on the marks made in Step #1. **See Diagram A on back of sheet.** As you face the rear of the car, the front tips of the Sportwing® rests on these marks. Center the Sportwing® exactly from left to right. Using a grease pencil, outline both mounting feet. Remove Sportwing® from the trunk (**NOTE: by outlining mounting feet with grease pencil, when you take the paper liner off the mounting feet tape, you will be able to place the Sportwing® exactly back onto your desired position later in the installation**).
3. **See Diagram B on back of sheet for placement of template.** Measure down 9" from the front corner of the trunk lid where it meets the rear window glass and make a mark.
4. Starting on the drivers' side, line up the DRIVERS' SIDE TEMPLATE, provided, with the edge of the trunk at the 9" mark. **See Diagram B on back of sheet.** Tape TEMPLATE in place. Flip template over for passenger side.
5. Using a 1/8" drill bit or similar size, drill a 1/8" hole through the exact center of the four (4) hole locations marked on TEMPLATE through the top panel of the deck lid only. After drilling all four (4) holes on the DRIVERS' SIDE TEMPLATE, remove the template from the deck lid and using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) you will need to open all four 1/8" pilot holes to 3/8" only drilling through the top panel of the deck lid. Touch up edges of 3/8" holes using touch up paint. Repeat procedure on passenger side by flipping over the drivers' side template (**NOTE: only use the three (3) fastening hole locations to drill on the passenger side, no harness hole is needed**).
6. Remove the paper liner from the bottom of the mounting feet. Starting on the drivers' side, feed the brake light wires from the Sportwing® through the harness wire hole made in Step #5 (**NOTE: be careful not to crimp the brake light wires as you position the Sportwing® for installation**). Lightly tack the Sportwing® onto the outline marks made in Step #2 while holding the Sportwing® in place. Check to see that the 3/8" holes in the deck lid align with the pre-drilled holes in the bottom of mounting feet. When satisfied with placement, press firmly into place. Open deck lid and using 3/4" **BLACK SCREWS** with **BLACK LOCK WASHERS** and **BLACK FLAT WASHERS**, install outer most MOUNTING SCREWS first. Using a ratchet with 5/16" socket, install **SELF-TAPPING SCREWS** into outer most fastening holes of Sportwing® and only tighten approximately half way. Repeat procedure on passenger side using **BLACK SCREWS**, **LOCK WASHERS** and **FLAT WASHERS**. Next, using the 3/4" **ZINC SCREW** with **LOCK WASHER** and **FLAT WASHER**, thread the **SELF TAPPING SCREW** into the inside most mounting hole of the mounting foot through the factory cut out in secondary panel. Tighten all screws evenly. **DO NOT OVER TIGHTEN.** Repeat procedure on passenger side.
7. Feed the brake light wires of the Sportwing® through the 1/4" **WIRE HARNESS**, provided. Using black electrical tape, fasten this harness neatly along side the factory harness, which runs down the drivers' side trunk hinge. Be sure to leave enough slack for opening and closing trunk lid. Run the wires toward the third brake light in rear

window. Connect the Sportwing® (red) hot wire to the light green wire. Connect the (black) ground wire to the black wire. Test the connections by stepping on the brake pedal.

8. Clean up any metal shavings that might have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

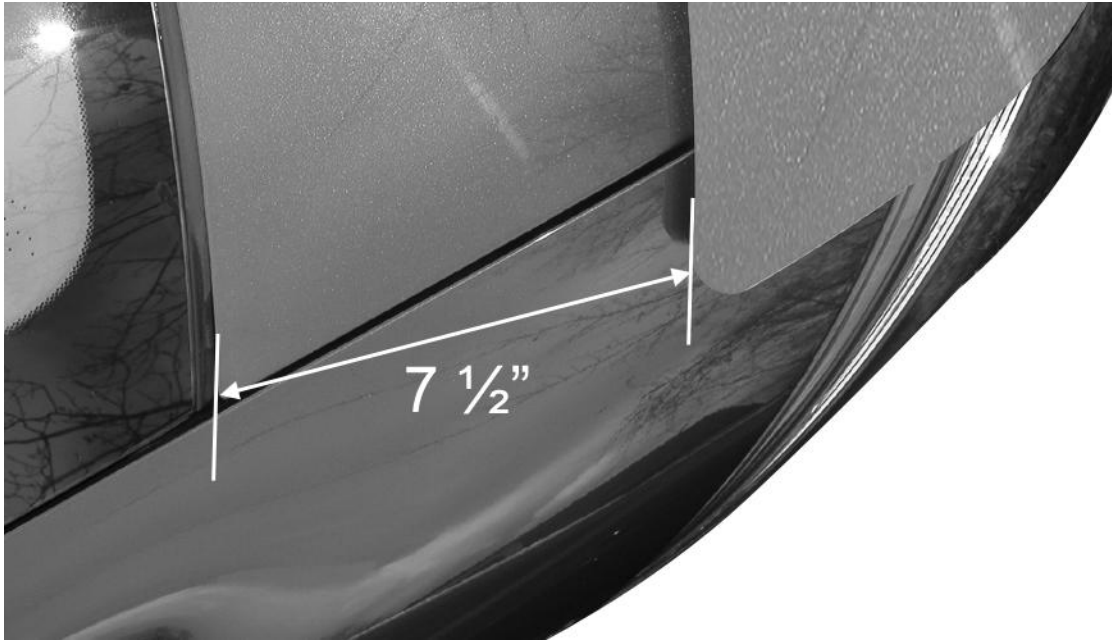


DIAGRAM B

