

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: ACC082DR-LIP
FOR: 2008 + Honda Accord 2 Door
EFFECTIVE: 29 DEC 2010

INSTALLATION PACKAGE INCLUDES:

- A) 3 – Paper Hole Locators
- B) 3 – Round Tape Gaskets
- C) 3 – 3/4" Heavy Threaded Allen Head Mounting Screws
- D) 3 – Flat Washers
- E) Bottle of Paint Thinner (**IMPORTANT!** Thinner to be used only in Step #4. **DO NOT USE to clean or wipe vehicle, other than inside of grease pencil marks, as shown in Diagram C**)
- F) Pro-Bond Adhesive Promoter (crush swab)
- G) 1 – Allen Wrench (**NOTE:** use Allen Wrench in drill at slow speed to install screws into fastening holes of Sportwing®)
- H) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. CLEAN AND PREP

Remove trunk liner. For proper installation of Sportwing®, clean the surface where the Sportwing® is to be installed using car wash soap and water.

- 2. Close the trunk. Starting on the drivers' side, measure down **13-5/8"** from the front corner of the trunk lid where it meets the window glass and make a mark. **See Diagram A on back of sheet.** Repeat procedure on passenger side.
- 3. Leaving the liner on bottom of mounting area of Sportwing®, place the Sportwing® so that it fits flush to the deck lid and the front tips of the Sportwing® are aligned to the **13-5/8** marks that you made in Step #2. **See Diagram A on back of sheet.** Next, using a grease pencil and making sure Sportwing® is flush to the deck lid and in desired position, outline completely with the grease pencil around entire Sportwing® so that later on when adhering Sportwing® to the deck lid, you will be able to place the Sportwing® exactly to the desired position. **See Diagram B on back of sheet.** Set Sportwing® aside.
- 4. **IMPORTANT! See Diagram B on back of sheet before beginning this step!** Using paint thinner in brown bottle, provided, pour thinner onto a soft cloth (**NOTE: pour thinner away from vehicle so thinner does not drop onto the deck lid of vehicle**) and wipe thinner onto shaded area only, **as shown in Diagram B on back of sheet.** Making sure thinner does not run above or below outline marks that you made in Step #3, wipe immediately if thinner should run outside of outline marks. Wipe dry with clean, soft cloth.
- 5. Next, place the Sportwing® upside-down on a soft cloth so you do not scratch the painted top surface. Using three (3) paper hole locators, provided, remove the liner from the hole locator to expose the adhesive. **See Diagram C on back of sheet.** Place the cut out hole in the hole locator centered exactly over the three (3) mounting holes of the fastening area of the Sportwing®. Make sure that the hole locators do not move (**NOTE: a small piece of masking tape is helpful in holding hole locators in place**) carefully place the Sportwing® back onto the outline marks on the deck lid that you made in Step #3.
- 6. When the Sportwing® is centered on the outline marks made in Step #3, and making sure that the three (3) paper hole locators did not move, tape the three (3) hole locators to the deck lid using masking tape. Next, carefully lift the Sportwing® off the deck lid, leaving the hole locators taped to the deck lid. Set the Sportwing® aside.
- 7. Using a 1/8" or similar drill bit, drill a 1/8" pilot hole in the exact center of the three (3) hole locators. Remove the hole locators and using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) open the three (3) 1/8" pilot holes to 3/8".
- 8. Apply Zinc Chromate primer or Touch-Up Paint on the edges of the three (3) 3/8" holes that you drilled in the deck lid.
- 9. **IMPORTANT!** Place the three (3) round tape gaskets, provided, centered over the three (3) 3/8" holes that you made in the deck lid in Step #7.

10. Remove the plastic liner from the double-sided tape on the bottom of the mounting area of the Sportwing® and lightly place the Sportwing® back onto the outline marks that you made in Step #2. Open the deck lid and check to see that the three (3) 3/8" holes that you made in the deck lid align with the three (3) mounting holes of the mounting area of the Sportwing®. If satisfied with the alignment, press the Sportwing® firmly in place. If the holes do not align, you will need to reposition the Sportwing® until satisfied with the alignment. Using self-tapping fastening screw with flat washer, provided, begin by fastening the very center mounting hole until completely tight. Then go to either outer-most fastening hole and tighten. Repeat on other hole. **DO NOT OVER TIGHTEN.**
11. If you have any questions or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises, Inc.

DISCLAIMER: Dawn Enterprises, Inc. is not responsible for any damage done by improper installation.

DIAGRAM A


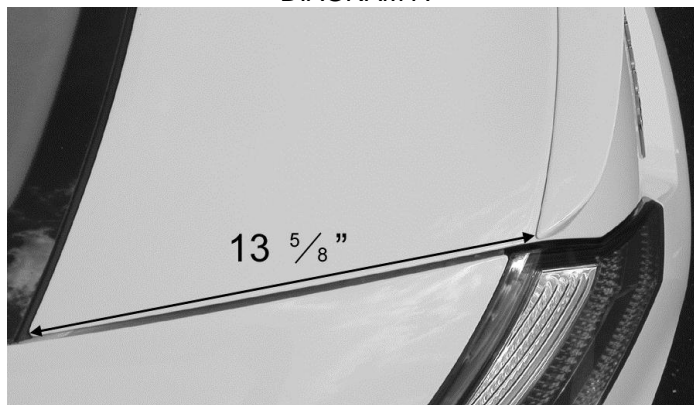


DIAGRAM B



DIAGRAM C

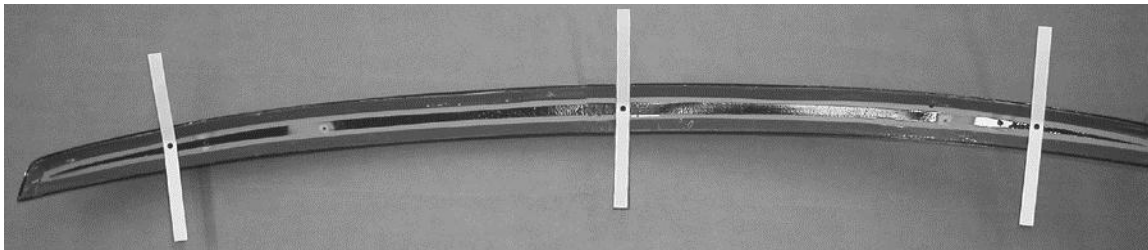

DISCLAIMER: Dawn Enterprises, Inc. is not responsible for any damage done by improper installation.