

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: ACC98-2DR
FOR: 1998 – 2002 Honda Accord 2 Door
EFFECTIVE: 03.12.02

SS

INSTALLATION PACKAGE INCLUDES:

- A) 4 – 1" Mounting Screws
- B) 4 – Lock Washers
- C) 2 – Electrical Connectors
- D) Template
- E) Adhesive Pads (for an unpainted Sportwing®)
- F) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Close trunk. **See Diagram A below.** Along the drivers' side, measure down 12 ¼" from the tip of the trunk lid back toward the rear of the car. Make a mark with a grease pencil. Repeat on passenger side.
2. Leaving paper liner on bottom of mounting feet, place the Sportwing® on the marks made in Step #1. **See Diagram A below.** As you face the rear of the car, the front tip of the Sportwing® will rest on the marks. Center the Sportwing® exactly from left to right. Using a grease pencil, outline both mounting feet. Remove Sportwing® from the trunk.
3. Position the template provided on the drivers' side outline made in Step #2. Using a 5/32" drill bit, drill a pilot hole through the spot indicated for the wire harness. When drilling for the wire harness hole, drill through the first panel only. Enlarge harness pilot hole to 3/8". We suggest using a uni-bit for a cleaner cut.
4. Close the trunk and remove the paper liner from the bottom of the mounting feet. Feed the brake light wires through the harness hole made in Step #3 (**NOTE: be careful not to crimp the brake light wires as you position the Sportwing® for installation**). Place the Sportwing® onto the outline marks made on Step #2 and press firmly into place.
5. Open the trunk lid and notice two (2) small circular indentations in the outer rain channel of the trunk lid under the area where the mounting feet sit. **See Diagram B below (NOTE: drill holes slightly inside of indentations as shown in Diagram B)**. Using a 5/32" drill bit, drill through these indentations and up into the bottom of the mounting feet (**NOTE: when drilling, we insist you use a drill stopper to prevent from drilling through the top of the Sportwing®. Do not extend drill bit more than 1" past drill stopper**). Insert mounting screws with lock washers and tighten. **DO NOT OVER TIGHTEN.** Repeat procedure on other side.
6. Remove gray, rectangular taillight cover located under trunk lid on drivers' side by unscrewing screw in right hand corner. Notice wires coming out of the taillight socket. Guide the Sportwing® brake light wires toward this area. Take the red (*hot*) wire and the red connector provided, connect to the green wire with silver slashes. Connect the black (*ground*) wire from the Sportwing® to the black wire with silver slashes. Replace cover.
7. Clean up any metal shavings that might have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

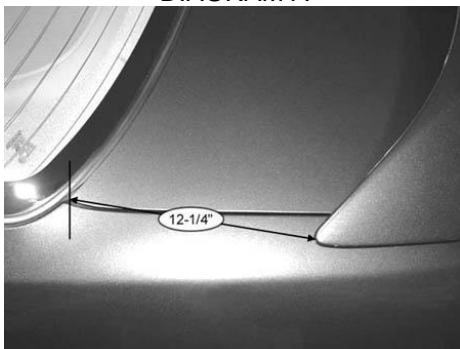


DIAGRAM B

