

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS


PART NUMBER: ACU04-TL
FOR: 2004 + ACURA TL
EFFECTIVE: 02.23.04

INSTALLATION PACKAGE INCLUDES:

- A) 4 – 1" Mounting Screws
- B) 4 – Lock Washers
- C) Adhesive Pads (for an unpainted Sportwing®)
- D) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **REMOVE TRUNK LINER.** Close trunk. **See Diagram A below.** Along the drivers' side, measure down 8 ¾" from the tip of the trunk lid back towards the rear of the car and make a mark with a grease pencil. Repeat on passenger side.
2. Leaving paper liner on the bottom of the mounting feet, place the Sportwing® on the marks made in Step #1, **see Diagram A below.** As you face the rear of the car, the front tip of the Sportwing® rests on the marks. Center the Sportwing® exactly from left to right. Using a yellow grease pencil, outline both mounting feet. Remove Sportwing® from trunk.
3. Remove the paper liner from the bottom of the mounting feet. Place the Sportwing® back onto the outline marks made in Step #2 and press firmly into place.
4. **See Diagram B below for fastening of the Sportwing®.**
5. Clean up any metal shavings that might have fallen into the trunk and you are done. Replace trunk liner. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

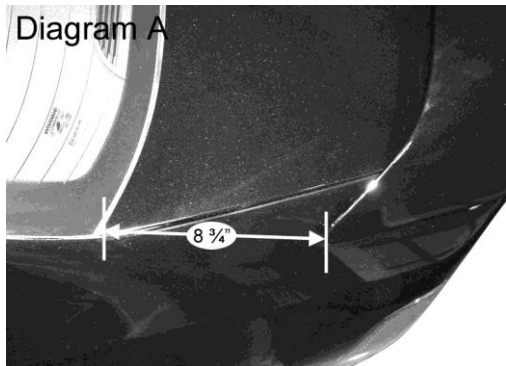

Holding onto the Sportwing® while drilling and using a 5/32" drill bit (**NOTE: we insist that you use a drill stopper, only extending drill bit no more than 1" past drill stopper to prevent from drilling through the top of the Sportwing®**) drill from inside of trunk, drill through the deck lid at the **two designated spots per side on Diagram B** and up into the bottom of the Sportwing® mounting feet. Install mounting screws with lock washers and tighten firmly using a ¼" ratchet with extension and 5/32" socket.

