

 DAWN ENTERPRISES INC.
CORPORATE OFFICE:
9155 Sweet Valley Dr., Valley View, OH 44125
PHONE: (800) 548-4867 or (216) 447-1777
FAX: (800) 437-6058 or (216) 477-6058

INSTALLATION INSTRUCTIONS **S.S.**
PART NUMBER: ACU-TSX
FOR: '04+ ACURA TSX
EFFECTIVE: 10/24/03

INSTALLATION PACKAGE INCLUDES:

- (A) 4 – Mounting Screws
- (B) 4 – Lock Washers
- (C) Adhesive Pads (*if ordering unpainted Sportwing®*)
- (D) 1 – Template for Brake Light Wire
- (E) 2 – Electrical Connectors
- (F) Instruction Sheet

Remove Trunk Liner. See Diagram below. Please read all instructions before beginning installation.

1. Along the drivers' side, measure 9" from the tip of the trunk lid back toward the rear of the car and place a mark with a grease pencil. Repeat procedure on other side. Refer to Diagram A on opposite side.
2. Leaving paper liner on bottom of mounting feet, place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car, the front tips of the Sportwing® rests on the marks. Center the Sportwing® from left to right along the marks made in Step #1. Using a yellow grease pencil, outline both mounting feet.
3. Set the Sportwing® aside and place the template provided on the drivers' side outline, using a unibit, drill (**NOTE: We suggest using a unibit for a cleaner cut through deck lid**) a 3/8" hole through spot indicated on template through top panel only. (**NOTE: This is where you will feed your brake light wires from the Sportwing®**).
4. Remove the paper liner from the bottom of the mounting feet of the Sportwing® and begin feeding the brake light wires through the 3/8" hole drilled in Step #3. (**NOTE: Make sure the wires are centered and not crimped in the hole**). Place the Sportwing® back onto the outline marks made in Step #2 and press firmly into place.
5. Fastening Sportwing®: Open the trunk, see Diagram B for drilling locations. Remove the factory black rubber trunk stopper and follow drilling instructions on Diagram B. When drilling through trunk stopper hole (*rear mounting hole*) drill into the exact center of hole. When drilling front fastening hole drill slightly inside factory indentation making sure screw head will fit on flat area of trunk panel. Replace factory black rubber trunk stopper upon finishing.
6. Remove gray cover on drivers side trunk hinge. Run the Sportwing® wires down towards the drivers' side trunk hinge, and using black electrical tape, fasten the wires neatly along the drivers' side trunk hinge. (**NOTE: Be sure to leave enough slack in the wire to allow opening and closing of the trunk**). Next, run the harness wires of Sportwing towards the drivers' side taillight. Then, pull the drivers' side taillight panel out and you will see a gray taillight plug with three wires. Using the electrical connectors provided, connect the hot wires of the Sportwing® to the white wire with black stripe. Next, ground the black wire of the Sportwing® to the black wire with silver slashes located in that area. Check your connections by stepping on the brake pedal.
7. Replace the trunk liner and gray trunk hinge cover and clean up any metal shavings that might have fallen into the trunk. The installation should take no longer than 50 minutes. If you have any questions for problems, or would like information about any other of our quality Sportwings, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

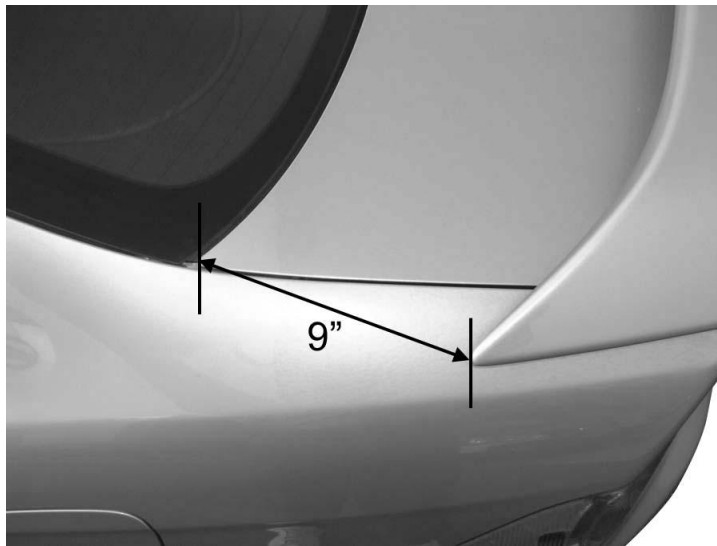


Diagram A

Drill 5/32" hole through deck lid and up into the bottom of the mounting foot. (**NOTE:** we insist that you use a drill stopper to prevent from drilling through the top of the Sportwing®). Hold onto Sportwing® while drilling. Install mounting screws with locks washers and tighten firmly. Do not over-tighten. Repeat procedure on other side. Replace trunk stopper upon finishing.

