

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: ALT08-2DR
FOR: 2008 + Nissan Altima 2 Door
EFFECTIVE: 06.18.08

INSTALLATION PACKAGE INCLUDES:

- A) 3 – ¾" Mounting Screws
- B) 3 – Lock Washers
- C) 3 – Flat Washers
- D) 1 – 1" Black Hole Plug
- E) Adhesive Pads (for an unpainted Sportwing®)
- F) Instruction Sheet

EXTRA TOOLS NEEDED:

- 1. 5/32" Drill Bit
- 2. 1" Hole Saw

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **REMOVE TRUNK COVER.** See Diagram A below. Starting on the drivers side, measure down 17 ¼" from the tip of the trunk lid back toward the rear of the car and place a mark with a grease pencil. Repeat procedure on other side.
2. Leaving the paper liner on the bottom of the mounting area, place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car, the front tips of the Sportwing® rests on the mark. Center the Sportwing® from left to right along the marks made in Step #1. Using a grease pencil, outline each outer mounting foot. Set Sportwing® aside.
3. Open the deck lid and notice the round factory cut out holes in the secondary panel of the deck lid, approximately the size of a nickel. **See Diagram B on back of sheet for drilling locations.** Starting on the drivers side, using a 5/32" drill bit and drilling from inside of the deck lid, drill a 5/32" hole in the approximate center of the factory cut out hole of the deck lid (**NOTE: you may have to push aside the factory harness which runs along side of the cut out hole.** Repeat procedure on passenger side using factory cut out **as shown in Diagram B on back of sheet**).
4. **See Diagram C on back of sheet for drilling measurements for center fastening hole.**
5. Close the trunk and remove the paper liner from the bottom of the mounting feet. Place the Sportwing® back onto the outline marks made in Step #2 and press firmly into place.
6. Open deck lid and drilling from inside of the deck lid, using a 5/32" drill bit (**NOTE: when drilling, you must use a drill stopper to prevent from drilling through the top of the Sportwing®, only extend drill bit no more than 5/8" past drill stopper**). Using the three 5/32" holes made in top panel of deck lid, drill up into the bottom of the mounting area of the Sportwing®. Using a ratchet with 5/16" socket, install mounting screws with LOCK WASHER and FLAT WASHER and tighten firmly. **DO NOT OVER TIGHTEN.**
6. Clean up any metal shavings that might have fallen into the trunk and you are finished. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

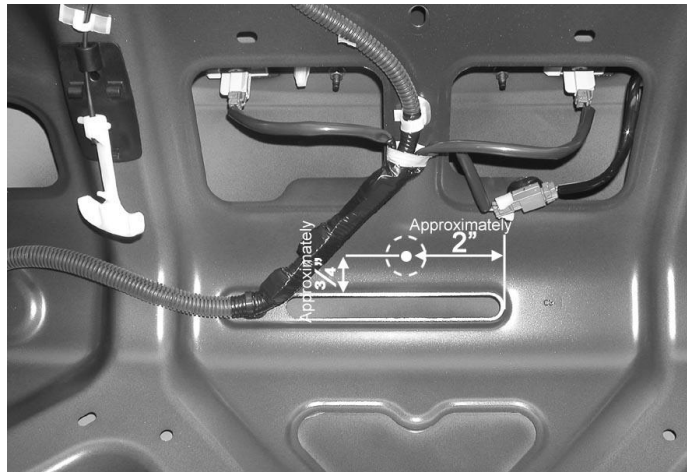


DIAGRAM B




Drill 5/32" hole in the approximate center of these factory cut out holes.

DIAGRAM C



Drill 5/32" pilot hole in secondary panel as per measurements above. Then, using a 1" hole saw open secondary panel only to 1"

DIAGRAM D

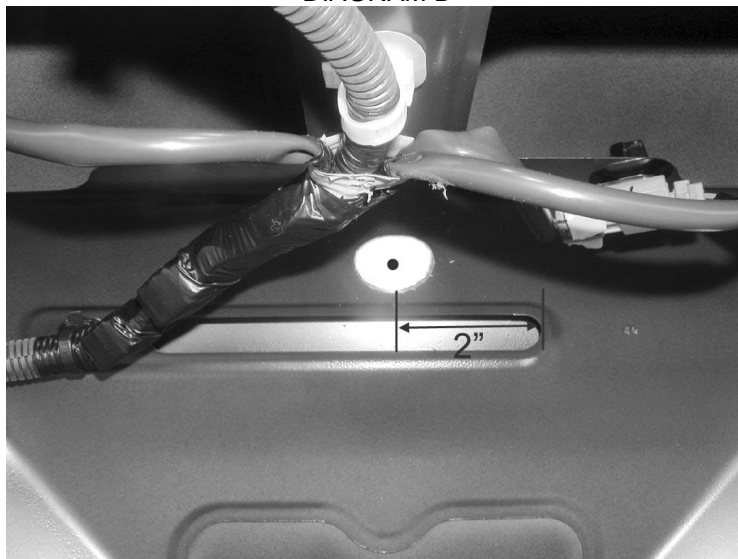

Drilling from inside of trunk. Drill a 5/32" hole in the approximate center of the 1" hole that you made in secondary panel. **See DIAGRAM D above.** A 1" black hole cap has been provided to cover this hole upon finishing.