

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

SS

PART NUMBER: CIV01-2DR
FOR: 2001 + Honda Civic 2 Door
EFFECTIVE: 05.10.05

INSTALLATION PACKAGE INCLUDES:

- A) 4 – ¼ - 20 x 5/8" Mounting Screws
- B) 4 – Lock Washers
- C) 4 – Hole Locators
- D) 2 – Electrical Connectors
- E) ¼" Wire Harness
- F) Template
- G) Adhesive Pads (for an unpainted Sportwing®)
- H) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Close trunk. **See Diagram A on back of sheet.** Along the drivers' side, measure down 10 ¾" from the tip of the trunk lid, back towards the rear of the car and make a mark with a grease pencil. Repeat on passenger side.
2. Place the Sportwing® on the marks made in Step #1. **See Diagram A on back of sheet.** As you face the rear of the car, the front tip of the Sportwing® rests on the mark. Center the Sportwing® exactly from left to right. Using a grease pencil, outline both mounting feet. Remove Sportwing® from the trunk.
3. Position the template provided on the passenger side outline made in Step #2. Using a 5/32" drill bit, drill pilot hole through the spot indicated for the wire harness. When drilling for the wire harness hole, drill through the first panel only. Next, enlarge harness pilot hole to 3/8". We suggest using a uni-bit for a cleaner cut.
4. Using four (4) black hole locators provided, place hole locators into the threaded sleeves of both mounting feet and place the Sportwing back onto the outline marks made in Step #2 (**NOTE: make sure hole locators are in threaded sleeves. Using electrical tape or making tape, tape hole locators to the deck lid so that when you lift the Sportwing® off the hole locators, the hole locators stay in place on the deck lid.**)
5. Using a 1/8" or similar drill bit, drill into the center of each hole locator through the top panel of the deck lid. After drilling all four holes, open each hole to 3/8" (**NOTE: we suggest using a uni-bit for a cleaner cut.**) To prevent from drilling into the trunk gasket, slightly lift deck lid while drilling.
6. Feed the Sportwing® brake light wires through the harness wire hole that you made in Step #3. Holding Sportwing® in place on deck lid and using fastening screws with lock washers, provided, thread the screws into each threaded sleeve only slightly tightening each screw until all four (4) are started. Then, using a ratchet with 10m or 3/8" socket, tighten all screws evenly until tight. **DO NOT OVER TIGHTEN.**
7. Feed the brake light wires of the Sportwing® through the ¼" wire harness provided. Using black electrical tape, fasten this harness neatly along side the factory harness, which runs down the passenger side trunk hinge. Be sure to leave enough slack for opening and closing trunk lid. Run the wires toward the passenger side taillight assembly and using the lower plug of taillight, connect the Sportwing® hot wire to the white wire with black stripe and silver slashes. Connect the ground wire to the black wire with silver slashes. Test the connections by stepping on the brake pedal.
8. Clean up any metal shavings that might have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

SEE DIAGRAMS ON BACK OF SHEET

Diagram A

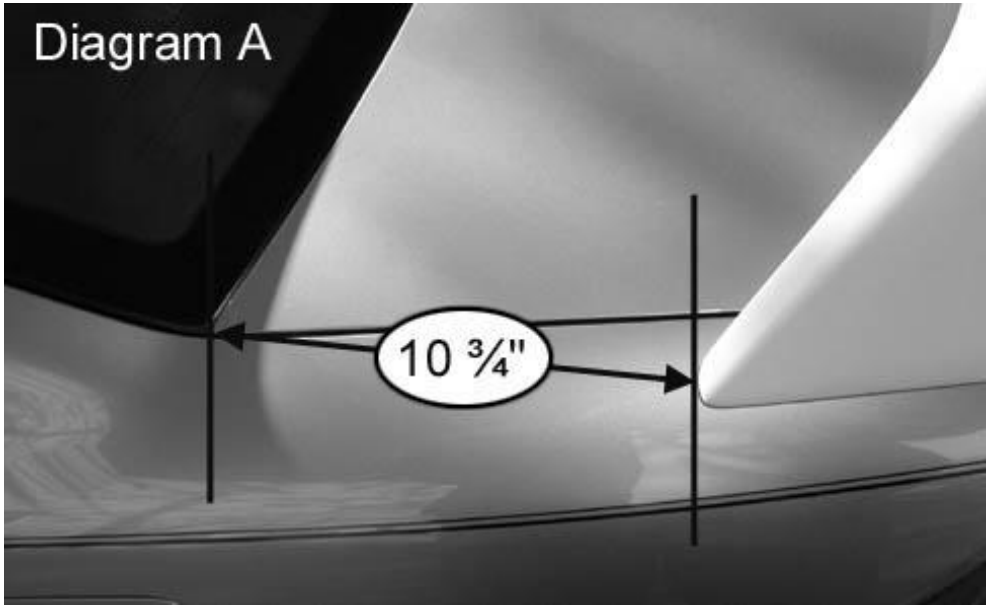


Diagram B

