

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

SS/ST/ZINC

PART NUMBER: CIV06-4DR
FOR: 2006 + Honda Civic 4 Door
EFFECTIVE: 07.18.07

INSTALLATION PACKAGE INCLUDES:

- A) 2 – ¾" Black Screws (for **front** outer trunk channel mounting location)
- B) 2 – Black Lock Washers (¼" for **front** mounting location)
- C) 2 – Black Flat Washers (for **front** mounting location)
- D) 2 – ¾" Chrome Screws (for **rear** mounting location)
- E) 2 – ¼" Chrome Lock Washers (for **rear** mounting location)
- F) 2 – Chrome Flat Washers (for **rear** mounting location)
- G) 2 – Electrical Connectors
- H) ¼" Wire Harness
- I) 2 – Templates (1 for drivers' side – 1 for passenger side)
- J) Adhesive Pads (for an unpainted Sportwing®)
- K) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

OPEN THE TRUNK AND PLACE A PROTECTIVE COVER INSIDE THE TRUNK TO CAPTURE ANY METAL SHAVINGS.

1. Close trunk. **See Diagram A on back of sheet.** Along the drivers' side measure down 4 ¼" from the tip of the trunk lid, back toward the rear of the car and make a mark with a grease pencil. Repeat on passenger side.
2. Leaving the paper liner on bottom of mounting feet, place the Sportwing® on the marks made in Step #1. **See Diagram A on back of sheet.** As you face the rear of the car, the front tips of the Sportwing® rests on these marks. Center the Sportwing® exactly from left to right. Using a grease pencil, outline both mounting feet. Remove Sportwing® from the trunk (**NOTE: by outlining mounting feet with grease pencil, when you take the paper liner off the mounting feet tape, you will be able to place the Sportwing® exactly back onto your desired position later in the installation.**)
3. **See Diagram B on back of sheet for placement of template.** Measure down 8" from the front corner of the trunk lid where it meets the rear window glass and make a mark.
4. Starting on the drivers' side, line up the DRIVERS' SIDE TEMPLATE, provided. with the edge of the trunk at the 8" mark. **See Diagram B on back of sheet.** Tape TEMPLATE in place.
5. Using a 1/8" drill bit or similar size, drill a 1/8" hole through the exact center of the hole locations marked on TEMPLATE through the top panel of the deck lid only. After drilling all three (3) holes on the DRIVERS' SIDE TEMPLATE, remove the TEMPLATE from the deck lid and using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) you will need to open all three 1/8" pilot holes to 3/8" only drilling through the top panel of the deck lid. Repeat procedure on passenger side only using PASSENGER SIDE TEMPLATE (**NOTE: there will be two fastening hole locations to drill on the passenger side, no harness hole is needed.**)
6. Starting on the drivers' side, feed the brake light wires from the Sportwing® through the harness wire hole made in Step #5 (**NOTE: be careful not to crimp the brake light wires as you position the Sportwing® for installation.**) Lightly tack the Sportwing® onto the outline marks made in Step #2 while holding the Sportwing® in place. Check to see that the 3/8" holes in the deck lid align with the pre-drilled holes in the bottom of mounting feet. When satisfied with placement, press firmly into place. Open deck lid and using ¾" **BLACK SCREWS** with **BLACK LOCK WASHER** and **BLACK FLAT WASHER**, install front MOUNTING SCREW first. Using a ratchet with 5/16" socket, thread SELF-TAPPING SCREW into front fastening hole of Sportwing® and only tighten approximately half way. Repeat procedure on passenger side using **BLACK SCREW**, **LOCK WASHER** and **FLAT WASHER**.
7. Next, notice just inside the deck lid just below where the rear mounting foot of the Sportwing® sits there are black factory trunk stoppers on each side. Remove the stoppers and you will see the 3/8" rear fastening holes in the deck lid that you made in Step #5. Using **ZINC (CHROME) SCREWS** with **LOCK WASHERS** and **FLAT WASHERS**. Tighten screws approximately half way. After all screws are started, tighten firmly using a ratchet. **DO NOT OVER TIGHTEN.** Replace trunk stoppers.
8. Feed the brake light wires of the Sportwing® through the ¼" **WIRE HARNESS**, provided. Using black electrical tape, fasten this **HARNESS** neatly along side the factory harness, which runs down the passenger side trunk

hinge. Be sure to leave enough slack for opening and closing trunk lid. Run the wires toward the drivers' side taillight assembly and using top plug of taillight. Connect the Sportwing® hot wire to the green wire with silver slashes. Connect the ground wire to the black wire with silver slashes. Test the connections by stepping on the brake pedal.

9. Clean up any metal shavings that might have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

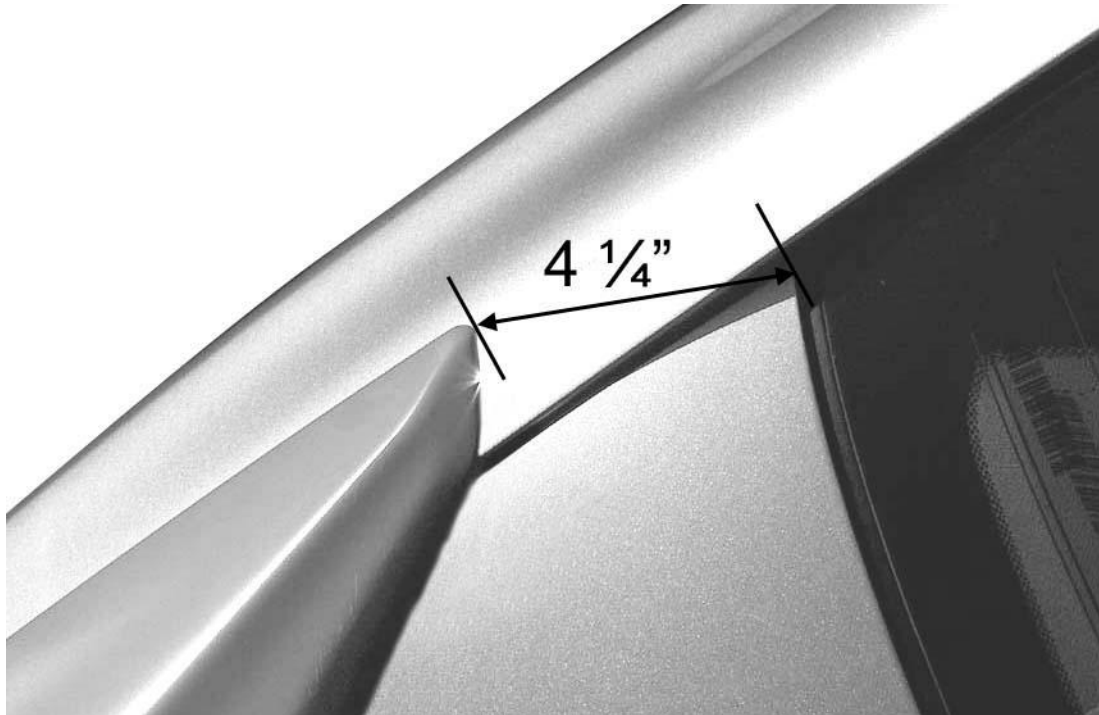


DIAGRAM B

