

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: CRUZE
FOR: 2011 + Chevrolet Cruze
EFFECTIVE: 02 FEB 2011

INSTALLATION PACKAGE INCLUDES:

- A) Alcohol Wipes
- B) 2 – Paper Hole Locators
- C) 2 – Round Tape Gaskets (to place over the 3/8" holes)
- D) 2 – Lock Washers
- E) 2 – Flat Washers
- F) 2 – Threaded Allen Bolts
- G) Flange Nuts
- H) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Using the alcohol wipes, provided, clean the surface of deck lid where Sportwing® will be installed.
2. Leaving the red liner on the bottom of the mounting area, set the Sportwing® onto the rear area of the deck lid where the Sportwing is to be seated into position. Center the Sportwing® left to right. Using a grease pencil, outline each mounting area to place the Sportwing® back to the desired position later in the installation. **See Diagram A on back of sheet.**
3. Remove the Sportwing® from the deck lid and turn the Sportwing® upside down (**NOTE: place a soft cloth down so you do not scratch the top painted surface**). **See Diagram B on back of sheet.** Remove the liner from the paper hole locators, provided, to expose adhesive. Perfectly center each hole locator over each threaded mounting sleeve on the bottom of the Sportwing® (**NOTE: a small piece of masking tape is helpful in holding the hole locators in place**).
4. Carefully flip the Sportwing® over, leaving the hole locators still fastening to the threaded sleeves. Make sure that none of the hole locators have moved. Place the Sportwing® back onto the outline marks that you made in Step #2. Next, when Sportwing® is in alignment with outline marks, tape the hole locators onto the deck lid using masking tape. When the hole locators are taped in place, carefully lift the Sportwing® up off the deck lid, leaving the hole locators taped on the deck lid. Set the Sportwing® aside.
5. Using a 1/8" or similar drill bit, drill a 1/8" pilot hole in the exact center of each of the hole locations. After drilling 1/8" pilot holes, remove the hole locators. Next, using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) you will need to open the 1/8" pilot holes to 3/8".
6. Apply zinc chromate primer or touch-up paint on the edges of the 3/8" holes that you drilled in the deck lid.
7. Notice the two (2) threaded Allen Bolts, provided. Using a flat head screw driver, insert the threaded Allen Bolts into the two (2) threaded sleeves located on the bottom of the Sportwing®. Tighten Allen Bolts just where they stop threading. **DO NOT OVER TIGHTEN.**
8. Leaving the red liner on the bottom of Sportwing®, place the threaded bolts that you installed in Step #7 through the two (2) 3/8" holes that you made in the deck lid (**NOTE: proper clearance must be maintained to avoid bolts from binding with the 3/8" holes in the deck lid**). Locate the Sportwing® onto the deck lid and check hole alignments before installing to insure that the flange nuts can easily threaded without forcing them. Set Sportwing® aside.
9. Close the deck lid. **IMPORTANT!** Place the round tape gaskets, provided, centered over the 3/8" holes that you made in the deck lid.

DISCLAIMER: Dawn Enterprises, Inc. is not responsible for any damage done by improper installation.


10. Proper temperature of the deck lid and Sportwing® should be 75°F/24°C, we suggest using a heat gun or hair dryer to activate adhesive on Sportwing before installing. Next, remove the red liner from the mounting tape and lightly place the Sportwing® back onto the deck lid using the outline marks made in Step #2. Before pressing firmly into place, open the deck lid and check that the alignment of the 3/8" holes are aligned with the threaded bolts. Once you are satisfied with the alignment, press the Sportwing® firmly into place.
11. There is an opening in the secondary panel you will be able to easily fit your hand into, using flange nut, provided, with lock washer and flat washer, install flange nuts onto threaded Allen Bolts and tighten until tight. **DO NOT OVER TIGHTEN**. Tighten evenly until tight. Repeat on passenger side.
12. Clean up any metal shavings that might have fallen into the trunk and you are done. If you have any questions or if you would like information about other quality Sportwing® products please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A



Outline marks on deck lid made in Step #2. Repeat on passenger side.

DIAGRAM B

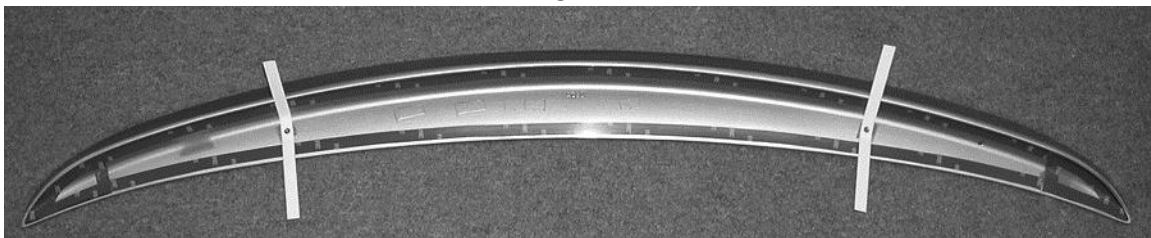

DISCLAIMER: Dawn Enterprises, Inc. is not responsible for any damage done by improper installation.

