

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 447-3416  
www.dawn-ent.com

## INSTALLATION INSTRUCTIONS

PART NUMBER: CUS-CAM  
FOR: 2007+ TOYOTA CAMRY  
EFFECTIVE: 11.16.06

### INSTALLATION PACKAGE INCLUDES:

- A) 2 – ¾" Mounting Screws
- B) 2 – Lock Washers
- C) Template
- D) Adhesive Pads (*for an unpainted Sportwing®*)
- E) Instruction Sheet

### PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **REMOVE TRUCK COVER.** Along the drivers side, measure 11 ½" from the tip of the trunk lid back toward the rear of the car and place a mark with a grease pencil. Repeat procedure on other side. See Diagram A below.
2. Leaving the paper liner on bottom of mounting feet, place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car, the front tips of the Sportwing® rests on the marks. Center the Sportwing® from left to right along these marks. Using a yellow grease pencil, outline both outer mounting feet. Set the Sportwing® aside.
3. Next, measure down 12" from the front corner of the trunk lid where it meets the rear window glass and make a mark. See Diagram B on back of sheet. Next, using template marked "drivers side", line up the template with the edge of the trunk at the 12" mark. Tape template in place. See Diagram C on back of sheet.
4. See template for drilling instructions. Using a 5/32" drill bit, drill down through the spot indicated on the template. When drilling the fastening hole on the template you will only need to drill through the top panel of the deck lid, there is a factory cut out hole already in secondary panel of deck lid. See Diagram D on back of sheet. Repeat procedure on passenger side by flipping template over.
5. Close the trunk and remove the paper liner from the bottom of the mounting feet. Place the Sportwing® back onto the outline marks made in Step #2 and press firmly into place.
6. Open the trunk. Using a 5/32" drill bit and drilling from inside of the trunk, drill up into the bottom of the mounting foot using the mounting hole drilled in Step #4 (**NOTE: when drilling, we insist you use a drill stopper to prevent from drilling up through the top of the Sportwing®.**) Using a ratchet with 5/16" socket, install mounting screw with lock washer and tighten firmly. **DO NOT OVER TIGHTEN!** Repeat procedure on other side.
7. Clean up any metal shavings that might have fallen into the trunk and you are done. The installation should take no longer than 30 minutes. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

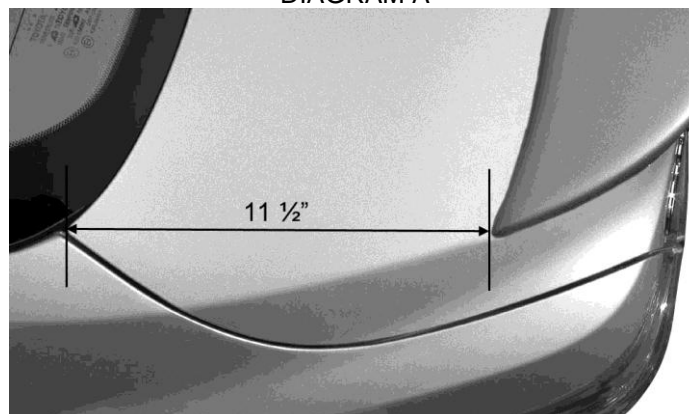


DIAGRAM B

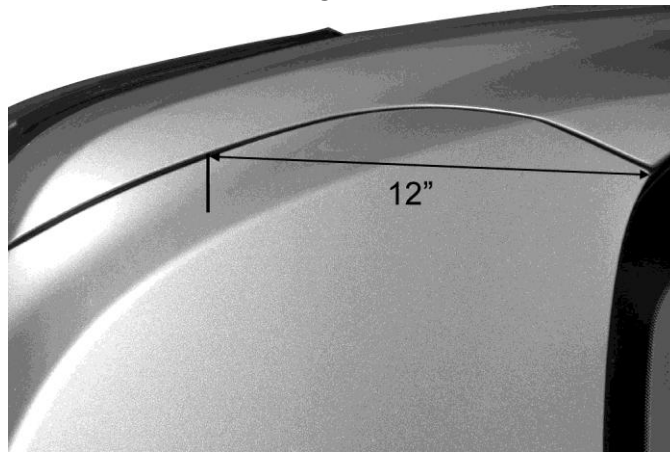


DIAGRAM C


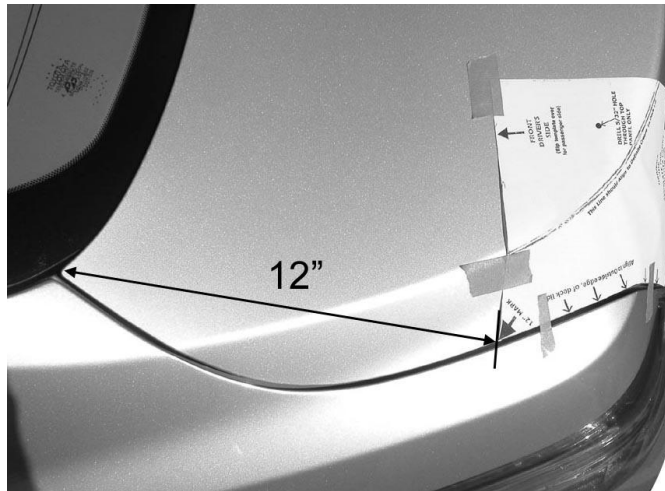


DIAGRAM D

5/32" fastening hole drilled through top panel of deck lid made in Step #4.

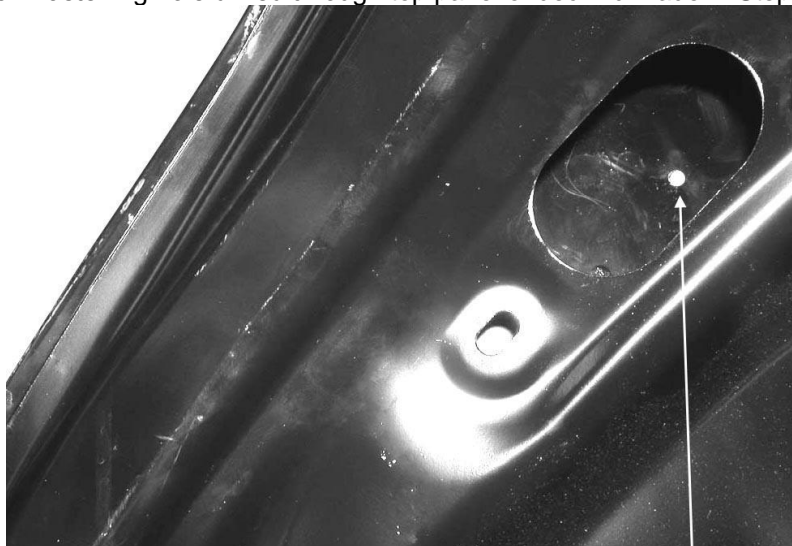

Fastening Hole