

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: CUS-SEN07
FOR: 2007 + NISSAN SENTRA
EFFECTIVE: 05.10.07

INSTALLATION PACKAGE INCLUDES:

- A) 4 – 3/4" Mounting Screws
- B) 4 – Lock Washers
- C) 1 – Template
- D) 4 – 5/8" Black Hole Caps (*flex*)
- E) Adhesive Pads (*for an unpainted Sportwing®*)
- F) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. See Diagram A below. Starting on the drivers' side, measure down 5 3/4" from the tip of the trunk lid toward the rear of the car and place a mark with a grease pencil. Repeat procedure on other side.
2. Leaving paper liner on the bottom of the mounting feet, place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car the front tips of the Sportwing® rests on the mark. See Diagram A below. Next, exactly center the Sportwing® from left to right. Outline both mounting feet with a grease pencil.
3. Set the Sportwing® aside. Starting on the drivers' side, position the drivers side template provided on the drivers side outline made in Step #2. Drill two 5/32" holes, holding the drill in a **STRAIGHT DOWN** position, through the spots indicated on the template through the top panel of the deck lid and continue drilling through the secondary panel, which is slightly below the top panel of the deck lid. See Diagram B on back of sheet for where drill bit should exit secondary panel. Repeat procedure on passenger side by flipping template over (**NOTE: when drilling through secondary panel, slightly lift deck lid when drilling so that you DO NOT drill into the trunk gasket**).
4. Open the trunk. Using a 5/8" hole saw, open the mounting holes in secondary panel to give you access to the top panel for your socket wrench later. Repeat procedure on other side. Hole caps have been provided upon finishing.
5. Close the trunk and remove the paper liner from the bottom of the mounting feet and place the Sportwing® back onto the outline marks made in Step #2. Press firmly into place.
6. Open the trunk and switch back to a 5/32" drill bit and drill up into the bottom of the mounting feet of the Sportwing® using the 5/32" holes drilled in top panel in Step #3 (**NOTE: when drilling, you must use a drill stopper to prevent from drilling through the top of the Sportwing®**). Using a ratchet with 5/16" socket, install the mounting screws and lock washers and tighten firmly. **DO NOT OVER TIGHTEN.** Repeat procedure on other side. Place the place hole caps provided over your 5/8" holes made in secondary panel.
7. Clean up any metal shavings that may have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

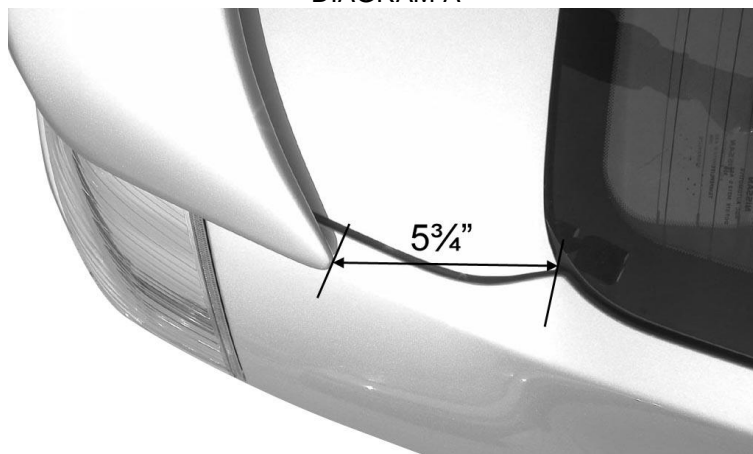


DIAGRAM B



DRIVERS' SIDE DECK LID

5/32" drill bit should exit at these approximate areas of secondary panel of deck lid when drilling through spots on template. Next, using a 5/8" hole saw, open these 5/32" pilot holes to 5/8". Open to give you access to the top panel of the deck lid. Black hole caps have been provided for these holes upon finishing.