

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: DTS06
FOR: 2001 + Cadillac DTS
EFFECTIVE: 01.19.06

INSTALLATION PACKAGE INCLUDES:

- A) 3 – 1" Mounting Screws
- B) 3 – Lock Washers
- C) Adhesive Pads (for an unpainted Sportwing®)
- D) Instruction Sheet

EXTRA TOOLS NEEDED:

1. ¼" Drive Ratchet with 5/16" socket (**NOTE: must use ¼" ratchet with socket so that socket will fit in narrow trunk stopper hole in Step #7**)

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **REMOVE TRUNK LINER!!!** See Diagram A below for placement of Sportwing® on deck lid.
2. Leaving the paper liner on the bottom of the mounting feet, place the Sportwing® on the deck lid and center left to right. Measure ¾" from definite body crease toward the front of the car and place a mark with a grease pencil. Place rear most edge of Sportwing® on the grease pencil marks and re-center the Sportwing® left to right. Outline all three mounting feet with a grease pencil. Set the Sportwing® aside.
3. See Diagram B on back of sheet. Remove factory black trunk stopper.
4. See Diagram C on back of sheet for outside fastening locations of Sportwing®.
5. See Diagram D on back of sheet for center fastening location. Remove factory trunk cover. Notice the three (3) round cut outs in the secondary panel of the deck lid just below where the center mounting foot of Sportwing® sits. Using the center round hole, you will need to measure 1 1/8" forward of the definite trunk crease and using a 5/32" drill bit (**NOTE: see Diagram D on back of sheet for drilling location**) drill a 5/32" hole from inside of deck lid through the top panel of deck lid. Before drilling, make sure center mounting foot will cover the hole that you are about to drill.
6. Close the trunk and remove the paper liner from the bottom of all three mounting feet and place the Sportwing® back onto the outline marks made in Step #2. Press firmly into place.
7. Open the trunk and using a 5/32" drill bit, drill up into the bottom of the mounting feet using the 5/32" holes drilled in Steps #3 and #4 (**NOTE: when drilling, you must use a drill stopper to prevent from drilling through the top of the Sportwing®**). Using a ¼" drive ratchet with 5/16" socket, install the mounting screws with lock washers at all three (3) mounting locations and tighten firmly. **DO NOT OVER TIGHTEN**. Replace the factory black rubber trunk stoppers and trunk liner.
8. Clean up any metal shavings that may have fallen into the trunk and you are done. Replace trunk liner. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

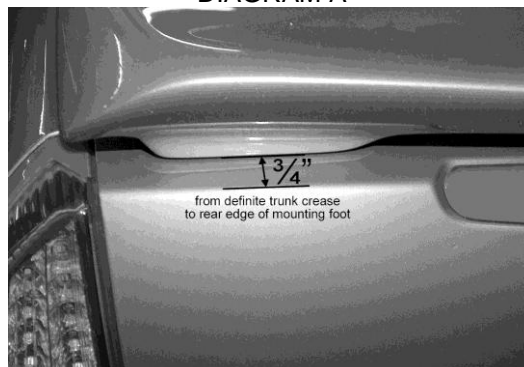


DIAGRAM B

Remove factory black trunk stopper (*replace upon finishing*)



DIAGRAM C

Remove factory black trunk stopper. Starting on the drivers' side and drilling from inside of deck lid, drill a 5/32" hole through the top panel of the deck lid through the exact center of the factory trunk stopper hole. Deburr top panel if needed. Repeat on passenger side.



DIAGRAM D

