

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 447-3416  
www.dawn-ent.com

## INSTALLATION INSTRUCTIONS SS

PART NUMBER: DUR  
FOR: 2004 + Dodge Durango  
2007 + Chrysler Aspen  
EFFECTIVE: 10.20.04

### INSTALLATION PACKAGE INCLUDES:

- A) 2 – 1" Mounting Screws
- B) 2 – Lock Washers
- C) Adhesive Pads (for an unpainted Sportwing®)
- D) Instruction Sheet

### PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Wear proper eye protection and make sure area where Sportwing® is to be installed is clean.
2. **See Diagram A below for placement of Sportwing®.** Leaving paper liner on the bottom of the mounting feet, center the Sportwing® left to right on vehicle and position the Sportwing® for installation. Using a grease pencil, outline both mounting feet (**NOTE: it is advisable to have someone hold the Sportwing® in place while you outline mounting feet**). After outlining, set Sportwing® aside.
3. **See Diagram B below** for drilling instructions and fastening of Sportwing®.
4. Next, peel the paper liner from the bottom of the mounting feet and place the Sportwing® back onto the outline marks made in Step #2. Press firmly into place.
5. Open the hatch (NOTE: prior to drilling, it is important to protect the installation area. Place a drop cloth on this area to prevent shavings from accumulating in drip well channel and bumper area. Failure to do so may cause rust spots to develop). Holding onto the Sportwing while drilling and using a 5/32" drill bit, drill up into the bottom of the mounting feet using the same hole in the hatch that you drilled in Step #3, holding Sportwing in place while drilling (NOTE: when drilling, you must use a drill stopper to prevent from drilling through the top of the Sportwing. Only extend drill bit no more than 1" past drill stopper). Using a ratchet with 5/16" socket, install mounting screws with lock washers and tighten. **DO NOT OVER TIGHTEN.**
5. Clean up any metal shavings that may have fallen into the trunk. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.


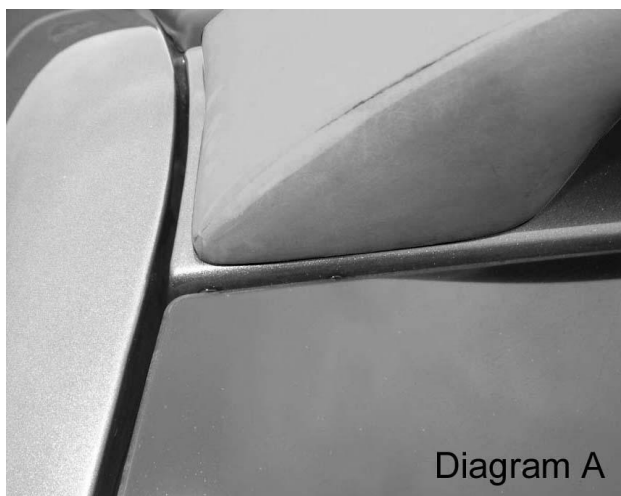


Diagram A

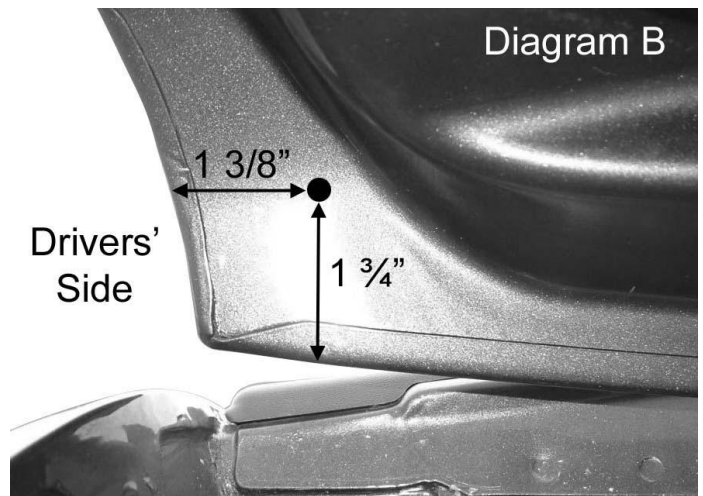

Drill 5/32" hole through hatch at designated spot. Repeat procedure on passenger side.