

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 447-3416  
www.dawn-ent.com

## INSTALLATION INSTRUCTIONS


PART NUMBER: EXT  
FOR: 2002 + Cadillac Escalade EXT  
EFFECTIVE: 03.18.02

### INSTALLATION PACKAGE INCLUDES:

- A) 2 – 5/32" Allen Head Screws (longer)
- B) 2 – Flat Washers
- C) Instruction Sheet

### PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Notice flat panel just above the third brake light held on with six (6) torque bolts.
2. Using a 5/32" Allen Wrench, remove the two (2) torque bolts **as seen in Diagram below**. Discard these bolts.
3. Leaving the paper liner on the bottom of the Sportwing<sup>®</sup>, place the Sportwing<sup>®</sup> onto the flat panel, lining up the two (2) fastening holes of the Sportwing<sup>®</sup> to the holes where you removed the bolts (**NOTE: if the fastening holes in the Sportwing<sup>®</sup> do not line up to the holes in the panel, it may be necessary to slightly elongate these holes so that the torque bolts will be able to thread**). Replace the torque bolts with the 5/32" Allen Head Screws provided and place through the fastening holes of the Sportwing<sup>®</sup> just enough to hold in place. Once the Sportwing<sup>®</sup> is in place, outline the Sportwing<sup>®</sup> with a yellow grease pencil.
4. Remove the two (2) 5/32" Allen Head Screws, lift the Sportwing<sup>®</sup> off the vehicle and remove the tape liner from the bottom of the Sportwing<sup>®</sup> and place back onto the outline marks that you made in Step #3. Make sure the two (2) fastening holes of the Sportwing<sup>®</sup> align with the torque screw holes. Press firmly into place. Install the two 5/32" Allen Head Screws provided with flat washers and tighten firmly. **DO NOT OVER TIGHTEN.**
5. If you have any questions, problems or if you would like information about other quality Sportwing<sup>®</sup> products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

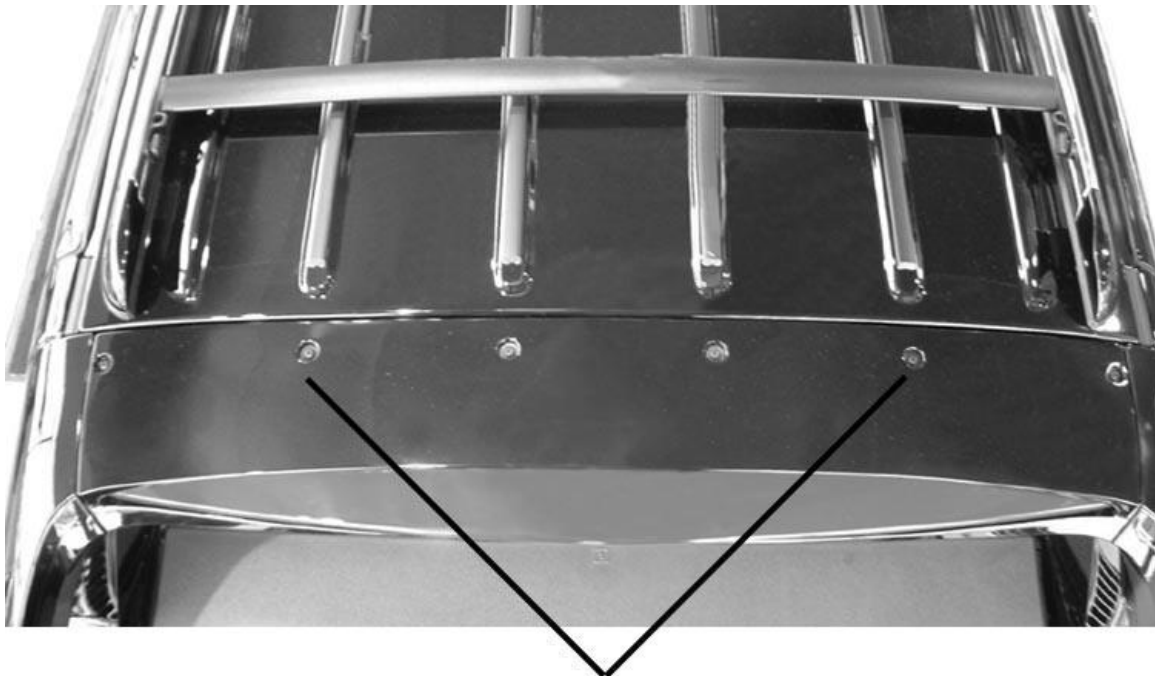

Remove these two torque screws and replace with two longer 5/32" Allen Head Screws provided when installing Sportwing<sup>®</sup>.