

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

NT

PART NUMBER: G6
FOR: 2005 + Pontiac G6
EFFECTIVE: 12.01.04

INSTALLATION PACKAGE INCLUDES:


- A) 4 – 5/8" Mounting Screws
- B) 4 – Lock Washers
- C) 4 – Black Hole Caps
- D) Adhesive Pads (*for an unpainted Sportwing®*)
- E) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Starting on the driver's side, measure 13 – 5/8" from the tip of the trunk lid where it meets the rear window and make a mark with a grease pencil. Repeat procedure on passenger side. **See Diagram A below.**
2. Leaving paper liner on the bottom of the mounting area, place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car, the front edge of the Sportwing® rests on these marks. Next, center the Sportwing® from left to right. Outline both mounting feet with a grease pencil. **See Diagram B on back of sheet.**
3. Remove the paper liner from the bottom of the mounting area. Place the Sportwing® back onto the outline marks made in Step #2. Press firmly into place.
4. Open the trunk. **See Diagram C on back of sheet where to drill mounting holes. IMPORTANT: Before drilling holes, we insist that you use a drill stopper to prevent from drilling through the top of the Sportwing®. Do not allow more than 5/8" of your drill bit to extend past the drill stopper because of the narrow front of Sportwing®.**
5. Using a 5/32" drill bit (**NOTE: with a drill stopper**) and holding onto the Sportwing® down on the deck lid. The first hole you drill will be the inside hole. Drill through the deck lid at designated spots **in Diagram C on back of sheet**, through the deck lid and up into the bottom of the mounting area of the Sportwing®. Install mounting screw with lock washer and flat washer and tighten firmly using a ratchet with 5/16" socket. Next, repeat procedure on outer fastening hole. Repeat on passenger side.
6. Clean up any metal shavings that may have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number on the top of this sheet. Thank you for choosing Dawn Enterprises Inc.




Diagram B

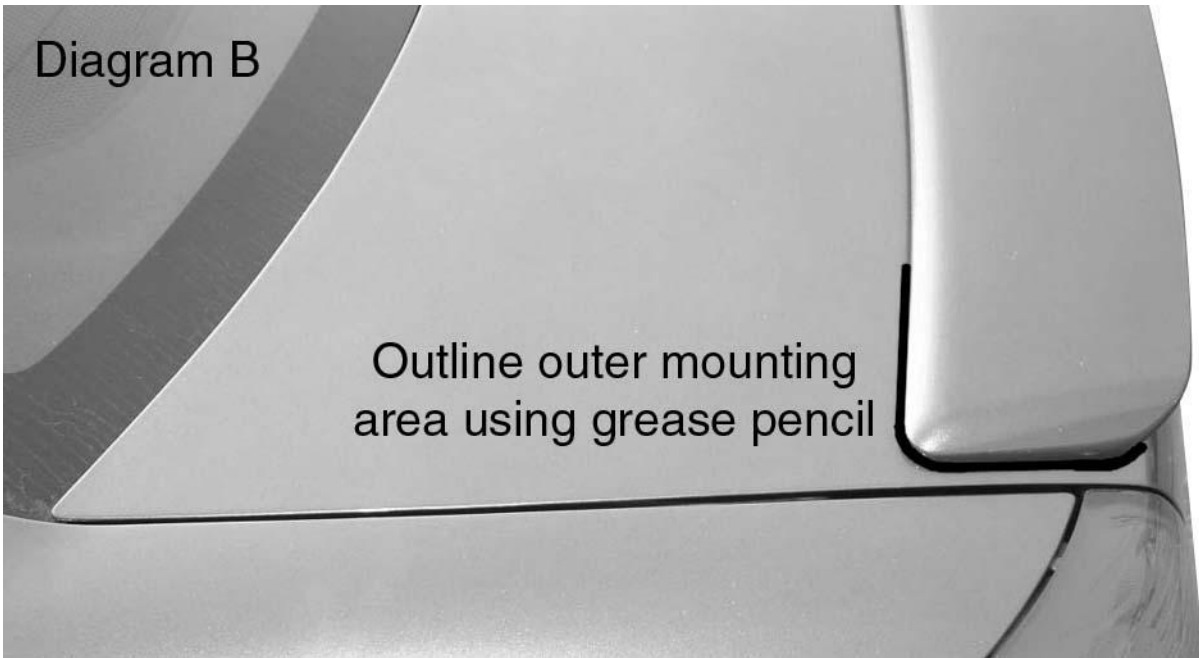

Outline outer mounting area using grease pencil

Drivers Side Deck Lid in Open Position

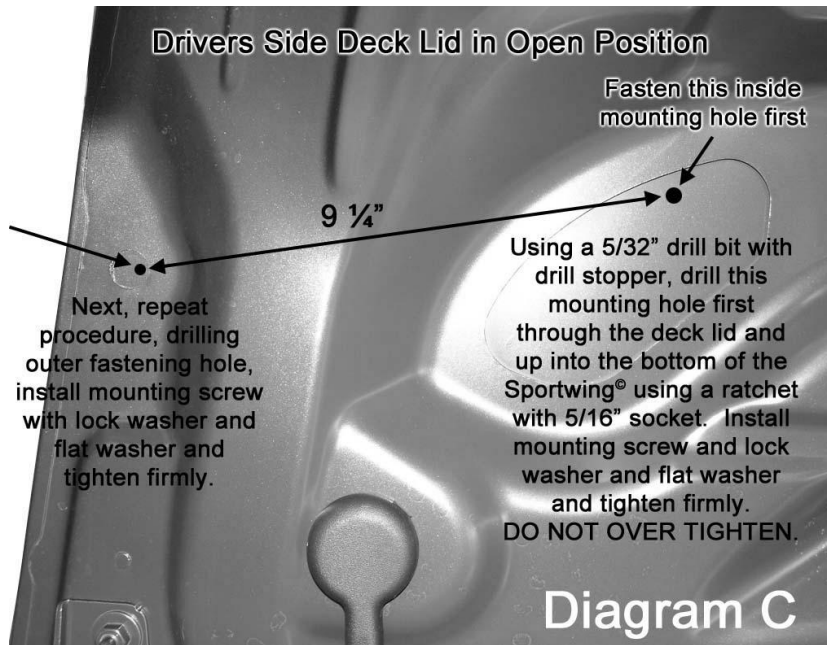

NOTE: when drilling this fastening hole, drill slightly towards the inside of the factory recessed hole as shown in Diagram.

Next, repeat procedure, drilling outer fastening hole, install mounting screw with lock washer and flat washer and tighten firmly.

Fasten this inside mounting hole first

9 1/4"

Using a 5/32" drill bit with drill stopper, drill this mounting hole first through the deck lid and up into the bottom of the Sportwing® using a ratchet with 5/16" socket. Install mounting screw and lock washer and flat washer and tighten firmly. DO NOT OVER TIGHTEN.

Diagram C