

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

SS

PART NUMBER: HHR
FOR: 2006 + Chevrolet HHR
EFFECTIVE: 11.04.05

INSTALLATION PACKAGE INCLUDES:

- A) 4 – 3/4" Mounting Screws
- B) 4 – Lock Washers
- C) 2 – Black Hole Caps
- D) Adhesive Pads (for unpainted Sportwing®)
- E) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Wear proper eye protection and make sure the area where Sportwing® will be installed is clean.
2. **See Diagram A below for measurement.** Leaving paper liner on tape, center the Sportwing® left to right on vehicle and position the Sportwing® for installation. Using a grease pencil, outline both mounting feet. Set Sportwing® aside.
3. **See Diagram B on back of page for placement of template on hatch.** Using the drivers' side template first, align arrows on template exactly to top and side of hatch. Tape in place using masking tape. Repeat on passenger side by flipping template over.
4. Open the hatch. **See Diagram C on back of page.** Remove the plug from the drivers' side and passenger side before drilling. Using a 5/32" drill bit, drill down through the top panel only of the hatch at the more inside fastening location of template. Next, you will need to drill the outer fastening hole of the template through both panels of the hatch (**NOTE: see Diagram C on back of sheet as to where you will want your drill bit to exit the secondary panel**). Make sure when drilling that you slightly open the hatch when drilling through the secondary panel so you do not drill into the rain channel of the hatch. After drilling through the secondary panel, you will need to open the one hole that you made in the secondary panel to 5/8" using a 5/8" hole saw. Black hole caps have been provided for these holes upon finishing. Repeat procedure on passenger side by flipping template over.
5. Peel liner from tape and place the Sportwing® back onto the outline marks made in Step #2. Press firmly into place.
6. Open hatch. Using a 5/32" drill bit, drill from inside of hatch and up into the bottom of the mounting feet and drill up through the 5/32" holes that you made in Step #4 into the bottom of the mounting feet of Sportwing® (**NOTE: when drilling, we insist that you use a drill stopper to prevent from drilling through the top of the Sportwing®. Only extend the drill bit no more than 3/4" past drill stopper. Electrical tape, wrapped tightly around drill bit will work as a drill stopper**). Install mounting screws with lock washers and tighten using a ratchet with 5/16" socket. **DO NOT OVER TIGHTEN.**
7. Clean up any metal shavings that may have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A



DIAGRAM B

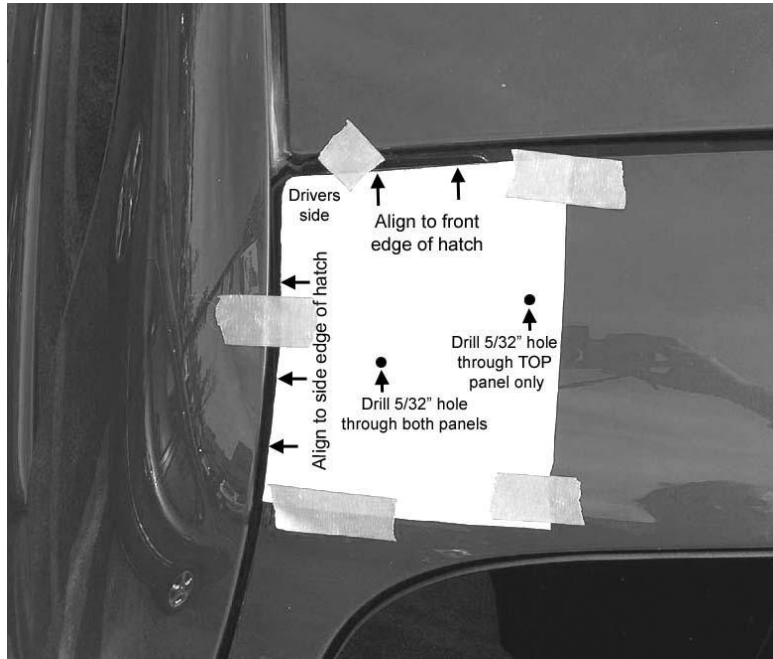


DIAGRAM C

Open secondary panel to 5/8" using a 5/8" hole saw. This will give you access to the top panel. Black hole caps have been provided upon finishing.

5/32" holes in hatch drilled from template in Step #4.

