

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 447-3416  
www.dawn-ent.com

## INSTALLATION INSTRUCTIONS

PART NUMBER: INFG3507  
FOR: 2007 + Infiniti G35 - 4 Door / Infiniti G37 - 4 Door  
EFFECTIVE: 01.29.09

### INSTALLATION PACKAGE INCLUDES:

- A) 2 – ¾" Mounting Screws
- B) 2 – Lock Washers
- C) 2 – Electrical Connectors
- D) Template (for harness wire hole)
- E) Adhesive Pads (for an unpainted Sportwing®)
- F) Instruction Sheet

### PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **REMOVE TRUNK COVER.** See Diagram A on back of sheet. Starting on the drivers side, measure down **10 ½"** from the tip of the trunk lid back toward the rear of the car and place a mark with a grease pencil. Repeat procedure on other side.
2. Leaving the paper liner on the bottom of the mounting area, place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car, the front tips of the Sportwing® rests on the mark. Center the Sportwing® from left to right along the marks made in Step #1. Using a grease pencil, outline each outer mounting foot.
3. Drilling hole for harness wires, set the Sportwing® aside. Position the harness hole template provided on the passenger side outline made in Step #2. Using a 5/32" drill bit, drill pilot hole through the spot indicated for the wire harness. When drilling for the wire harness hole, drill through the first panel only. Then, enlarge harness pilot hole to 3/8". We suggest using a uni-bit for a cleaner cut.
4. Close the trunk and remove the paper liner from the bottom of the mounting feet and feed the brake light wires through the hole made in Step #3 (**NOTE: be careful not to crimp the brake light wires as you position the Sportwing® for installation**). Place the Sportwing® back onto the outline marks made in Step #2 and press firmly into place.
5. Open the deck lid and notice the round factory cut out in the secondary panel of the deck lid, see Diagram B on back of sheet for drilling and fastening locations. Starting on the drivers side, using a 5/32" drill bit and drilling from inside of the deck lid, drill a 5/32" hole in the center of the factory cut out hole of the deck lid and continue drilling up into the bottom of the mounting foot (**NOTE: we insist that when drilling you use a drill stopper to prevent from drilling through the top of the Sportwing®**) as shown in Diagram B on back of sheet. Use only the cut out hole specified in Diagram B. **DO NOT** drill hole in upper most cut out hole. Repeat procedure on passenger side.
6. Connecting Sportwing® harness wires, run Sportwing® wires towards the white factory plug as shown on Diagram C on back of sheet.
7. Clean up any metal shavings that might have fallen into the trunk and you are finished. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

Diagram A

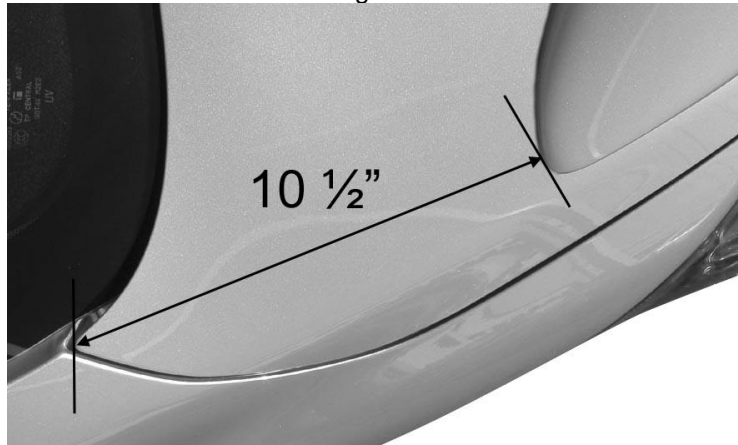


Diagram B

Using this factory cut out hole only and drilling from inside of the deck lid using a 5/32" drill bit, drill through the top panel of the deck lid and into the bottom of the mounting foot (**NOTE: we insist that you use a drill stopper to prevent from drilling through the top of the Sportwing®**). **DO NOT** extend drill bit tip no more than 5/8" past drill stopper. Using a ratchet with 5/16" socket, tighten screw with lock washer provided. **DO NOT OVERTIGHTEN**. Repeat on other side.


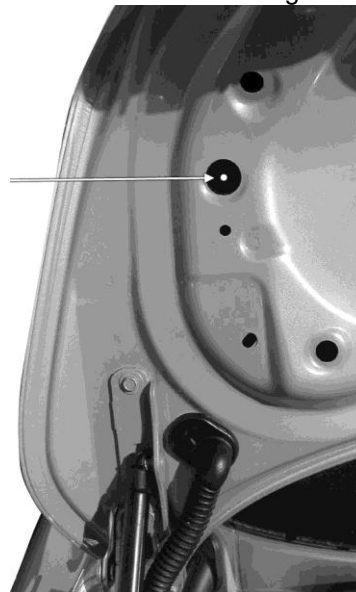


Diagram C

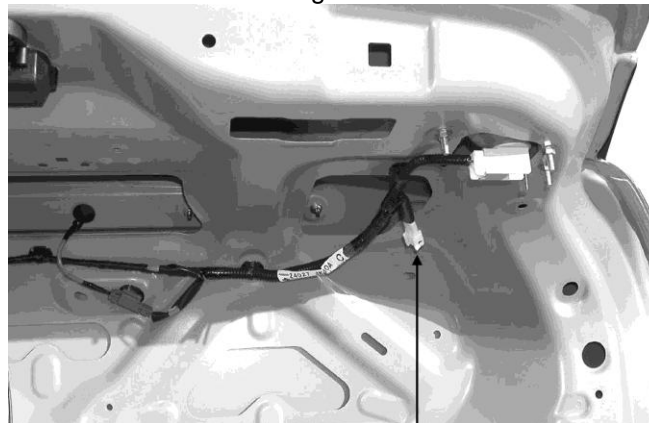

**Sportwing® Harness Wire Hook Up:**

Cut back black casing behind white factory plug. Using electrical connectors provided, connect the red (*hot*) wire of the Sportwing® to the light green wire. Connect the black (*ground*) wire of the Sportwing® to the black wire. Tape any loose wires to the trunk panel for factory harness. Check connections by stepping on the brake pedal.