

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: MAL-CUT
FOR: 1997 - 2003 Chevrolet Malibu
EFFECTIVE: 07.08.98

INSTALLATION PACKAGE INCLUDES:

- A) 2 – 1" Mounting Screws
- B) 2 – Lock Washers
- C) 2 – Black Hole Caps
- D) 1 – Electrical Lug
- E) 1 – Electrical Connector
- F) Ground Screw
- G) Template
- H) Adhesive Pads (*for unpainted Sportwing®*)
- I) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Starting from the definite crease along the drivers' side back edge, measure $\frac{1}{4}$ " toward the front of the car and place a mark with a grease pencil along the side edge. Repeat procedure on other side.
2. Place the rear most part of the mounting feet of the Sportwing® on the grease pencil marks made in Step #1. Center the Sportwing® from left to right and outline all mounting feet with a grease pencil.
3. Remove the Sportwing® and position the template provided on the drivers' side outline made in Step #2. Using a $\frac{3}{16}$ " drill bit, drill down through the spots indicated for both the brake light wire and your mounting holes. Open up the harness hole only with a $\frac{3}{8}$ " drill bit (**NOTE:** *for passenger side, flip template over and drill only the holes needed for mounting the Sportwing®*).
4. Open the trunk and using a $\frac{5}{8}$ " hole saw, open up the mounting holes drilled in Step #3 to give you access for your socket wrench. Repeat procedure on other side.
5. Close the trunk and remove the paper liner from the bottom of the mounting feet. Feed the brake light wires through the hole made in Step #3 (**NOTE:** *be careful not to crimp the brake light wires as you position the Sportwing® for installation*). Place the Sportwing® on the outline marks made in Step #2 and press firmly into place.
6. Open the trunk and switch back to the $\frac{3}{16}$ " drill bit and drill up into the bottom of the mounting feet using the mounting holes drilled in Step #3 (**NOTE:** *when drilling, we insist using a drill stopper to prevent from drilling up through the top of the Sportwing®*). Install mounting screw with washer and tighten firmly. **DO NOT OVER TIGHTEN.** Repeat procedure on other side.
7. Run the Sportwing® wires down toward the drivers' side trunk hinge and using black electrical tape, fasten the harness neatly along the drivers' side trunk hinge (**NOTE:** *be sure to leave enough slack in the wire to allow opening and closing of the trunk*). Next, pull the drivers' side trunk panel out and you will see a group of taped wires. Using the electrical connector provided, connect the hot wires of the Sportwing® to the light blue wire. Next, using the electrical lug and screw provided, ground the black wire to a secondary panel in the same area. Test your connections by stepping on the brake pedal.
8. Clean up any metal shavings that may have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

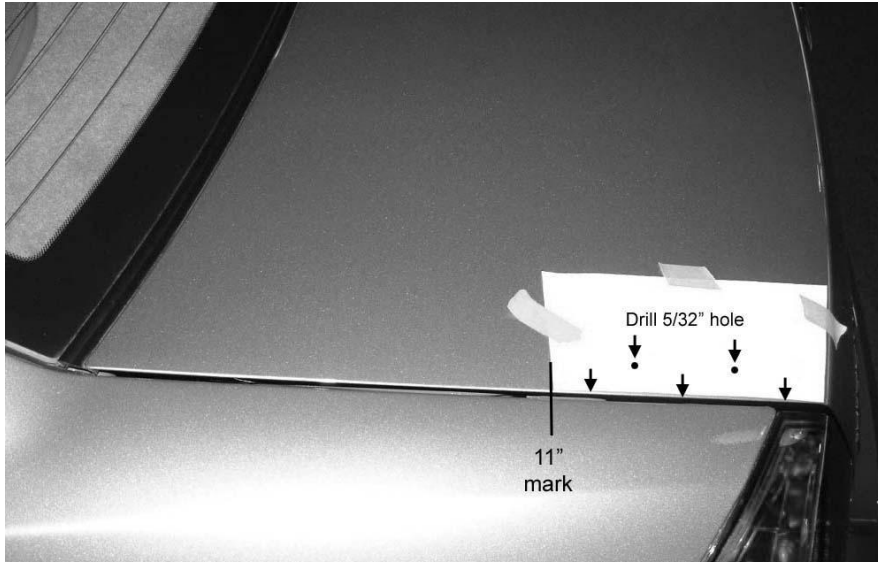


DIAGRAM B

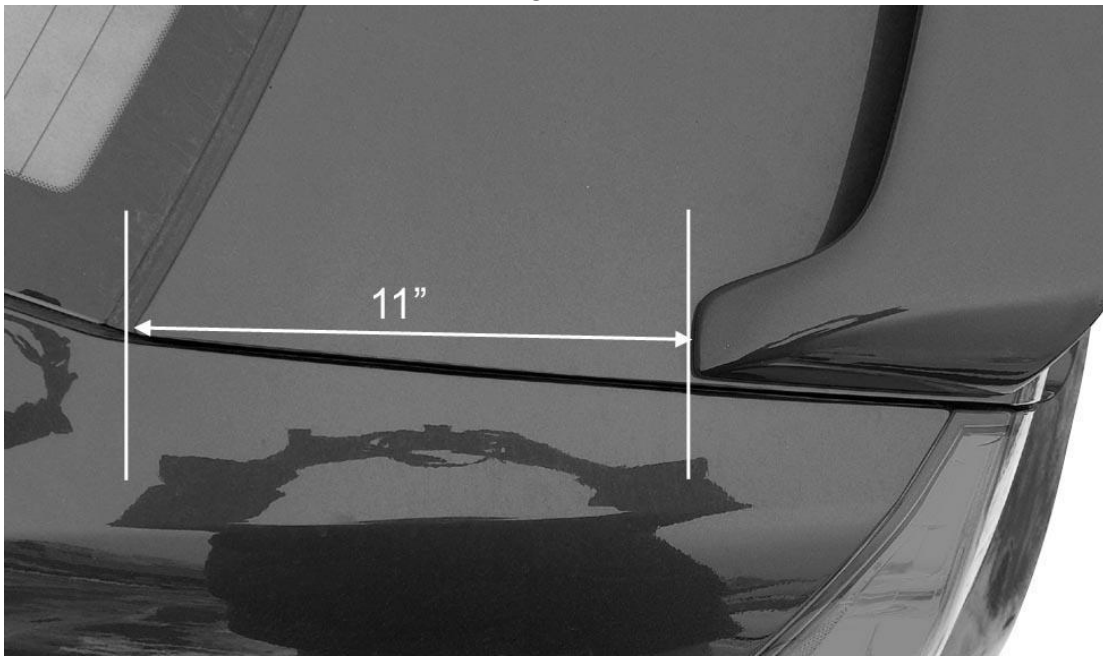


DIAGRAM C

5/32"
holes
drilled
from
template in
Step # 4.

