

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS


PART NUMBER: MAXX-F
FOR: 2004 + Chevrolet Malibu Maxx
EFFECTIVE: 12.06.04



INSTALLATION PACKAGE INCLUDES:

- A) 3 – 5/8" Mounting Screws
- B) 3 – Flat Washers (*small*)
- C) 3 – Lock Washers
- D) 1 – Template (*flip template over for passenger side*)
- E) Adhesive Pads (*for unpainted Sportwing®*)
- F) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Wear proper eye protection and make sure area where Sportwing® will be installed is at room temperature, clean and free of wax.
2. Open hatch. **See Diagram A below.** Notice five (5) black factory plugs, remove only the three (3), shown in Diagram A. This will give you access to the top panel of hatch. Replace plugs upon finishing.
3. Close hatch. Starting on the drivers' side, line up the template, provided, with the front edge of the hatch, **shown on Diagram B on back of sheet.** Next, drill a 5/32" hole through the fastening spot on the template through the top panel of the hatch. Flip template over and repeat on passenger side. **See Diagram C on back of sheet** as to where to drill center fastening hole.
4. Close hatch. Leaving paper liner on the bottom of the mounting area of the Sportwing®. **See Diagram D on back of sheet** for placement of Sportwing on hatch. When Sportwing is in correct position, outline the outer mounting area using a grease pencil.
5. Peel the paper liner from the bottom of the mounting area of the Sportwing® and place the Sportwing® back onto the outline marks made in Step #4. Press firmly into place.
6. Open hatch. Drill from inside of hatch and using a 5/32" drill bit with drill stopper (**NOTE: we insist that you use a drill stopper to prevent from drilling through the top of the Sportwing®**), only extend drill bit no more than 3/4" past the drill stopper. Using the 5/32" pilot holes that you drilled through the hatch in Step #3. Holding onto the Sportwing® and drilling the **center** fastening hole first, drill up through the 5/32" hole in hatch and up into the bottom of the Sportwing. Install mounting screws with lock washers and flat washers, provided, and tighten firmly. **DO NOT OVER TIGHTEN.** Next, repeat procedure on drivers' and passenger side fastening holes.
7. Clean up any metal shavings that may have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

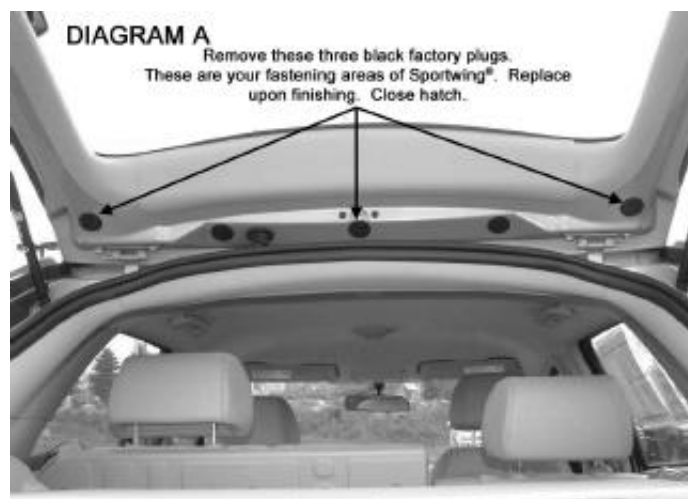

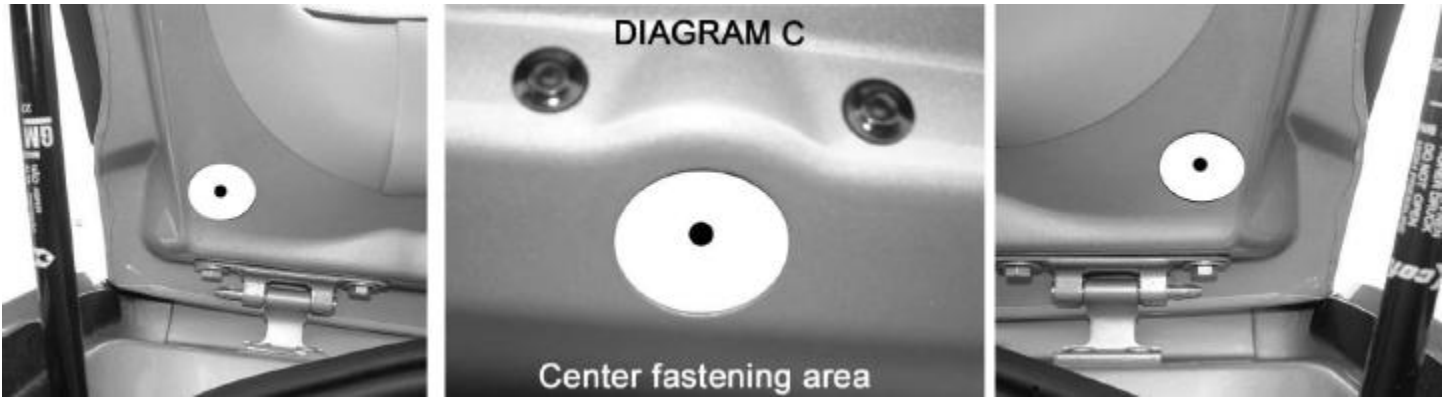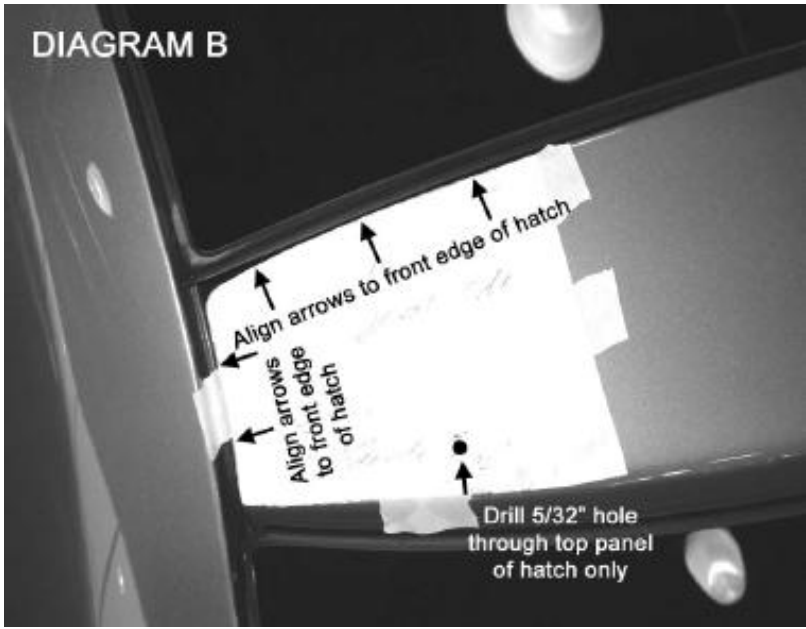

No template necessary for center fastening hole. Drill 5/32" hole from inside of hatch through this approximate spot.

