

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: MAXX
FOR: 2004 + Chevrolet Malibu Maxx
EFFECTIVE: 05.07.04

INSTALLATION PACKAGE INCLUDES:

- A) 4 – 3/4" Mounting Screws
- B) 4 – Lock Washers
- C) Adhesive Pads (for unpainted Sportwing®)
- D) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION REMOVE TRUNK COVER!

1. Close trunk. **See Diagram A below.** Along the drivers' side, measure down 1 1/4" from the tip of the trunk lid back toward the rear of the car and make a mark with a grease pencil. Repeat on passenger side.
2. Leaving the paper liner on the bottom of the mounting feet, place the Sportwing® on the marks made in Step #1, **see Diagram A below**, so that as you face the rear of the car, the front tip of the Sportwing® rests on these marks. Center the Sportwing® exactly from left to right. Using a yellow grease pencil, outline both mounting feet. Remove the Sportwing® from trunk.
3. Close the trunk and remove the paper liner from the bottom of the mounting feet. Place the Sportwing back onto the outline marks made in Step #2 and press firmly into place.
4. Open the trunk lid, **see Diagram B on back of sheet.** Two (2) small circular indentations in the rain channel of the trunk lid under the area where the mounting feet sit (**NOTE: drill holes slightly inside of indentations as show in Diagram B**). Using a 5/32" drill bit, drill through these marks, through the deck lid and up into the bottom of the mounting feet (**NOTE: when drilling, we insist that you use a drill stopper to prevent from drilling through the top of the Sportwing. DO NOT over extend the drill bit more than 1" past drill stopper**). Insert mounting screw with lock washers and tighten. **DO NOT OVER TIGHTEN.** Repeat procedure on other side.
5. Open deck lid, **see Diagram B on back of sheet for drilling locations (IMPORTANT NOTE: before drilling, we insist using a drill stopper to prevent from drilling through the top of the Sportwing®. Extend drill bit no more than 1" past drill stopper using electrical tape tight around drill bit will work as a drill stopper)**. Holding onto the Sportwing® while drilling, drill from inside of trunk using a 5/32" drill bit, **see Diagram B on the back of sheet**, drill through the two (2) spots designated on **Diagram B**. Drill through the deck lid and up into the bottom of the mounting feet. Install mounting screws with lock washers using a ratchet with 5/16" socket and tighten firmly. **DO NOT OVER TIGHTEN.** Repeat procedure on other side.
6. Clean up any metal shavings that may have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

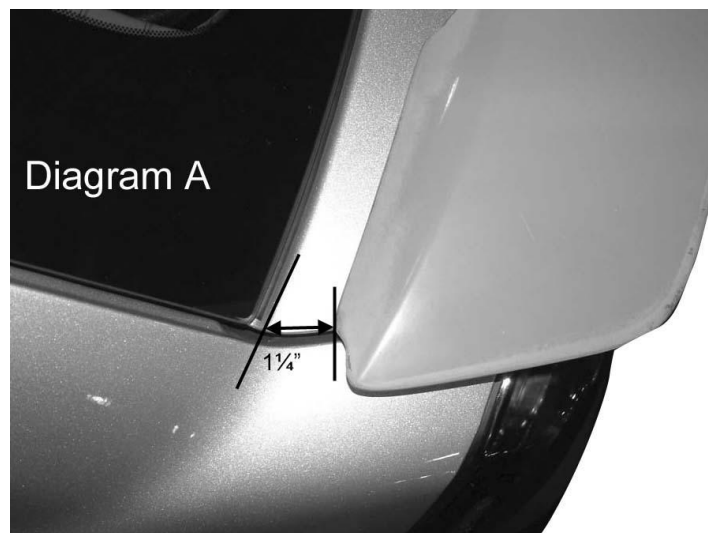


Diagram B

Drill 5/32" hole through the deck lid and into the bottom of the mounting feet of Sportwing® at these two (2) fastening locations. Install screws with lock washers and tighten firmly using a ratchet with 5/16" socket.

