

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: MAZ-RX8
FOR: 2004 + Mazda RX8
EFFECTIVE: 09.19.03

INSTALLATION PACKAGE INCLUDES:

- A) 4 – 3/4" Mounting Screws
- B) 4 – Lock Washers
- C) Template
- D) Adhesive Pads (for unpainted Sportwing®)
- E) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Open the trunk and place a protective cover inside the trunk to capture any metal shavings.
2. Measure down **10"** from the front corner of the trunk lid where it meets the rear window glass and make a mark. **See Diagram A below.**
3. Line up the **TEMPLATE**, provided, with the edge of the trunk at the **10"** mark. **See Diagram A below.**
4. Drill 5/32" holes through the two (2) fastening hole locations on the drivers' side **TEMPLATE**. Repeat this procedure on the passenger side by flipping **TEMPLATE** over (**NOTE: when drilling these holes, we insist using a drill stopper to prevent from drilling into the rain channel. Only extend drill bit 1/2" past drill stopper when drilling these holes.**)
5. Close the trunk. **See Diagram B on back of sheet.** Along the drivers' side, measure down **9"** from the top of the trunk lid back towards the rear of the car and make a mark with a grease pencil on outer panel. Repeat on passenger side.
6. Leaving paper liner on the bottom of the mounting feet, place the Sportwing® on the marks made in Step #5. **See Diagram B on back of sheet**, so that as you face the rear of the car, the front tips of the Sportwing® rests on the marks. Center the Sportwing® exactly from left to right. Using a grease pencil, outline both mounting feet. Set the Sportwing® aside.
7. Close the trunk and remove the paper liner from the bottom of the mounting feet of the Sportwing® and place the Sportwing® back onto the outline marks made in Step #6, press firmly into place.
8. Open the trunk lid, using the same 5/32" drill bit (**NOTE: we insist using a drill stopper to prevent from drilling through the top of the Sportwing®**) only extend the drill bit 3/4" past the drill stopper. Holding onto the Sportwing® while drilling, drill up through the two (2) fastening holes per side that you made in Step #4, up into the bottom of the mounting foot of the Sportwing®. Install **SELF TAPPING MOUNTING SCREWS** with **LOCK WASHERS** and tighten firmly using a ratchet with 5/16" socket. **DO NOT OVER TIGHTEN.** Repeat procedure on other side.
9. Clean up any metal shavings that might have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

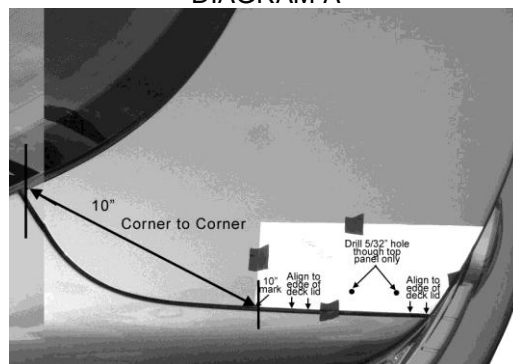


DIAGRAM B

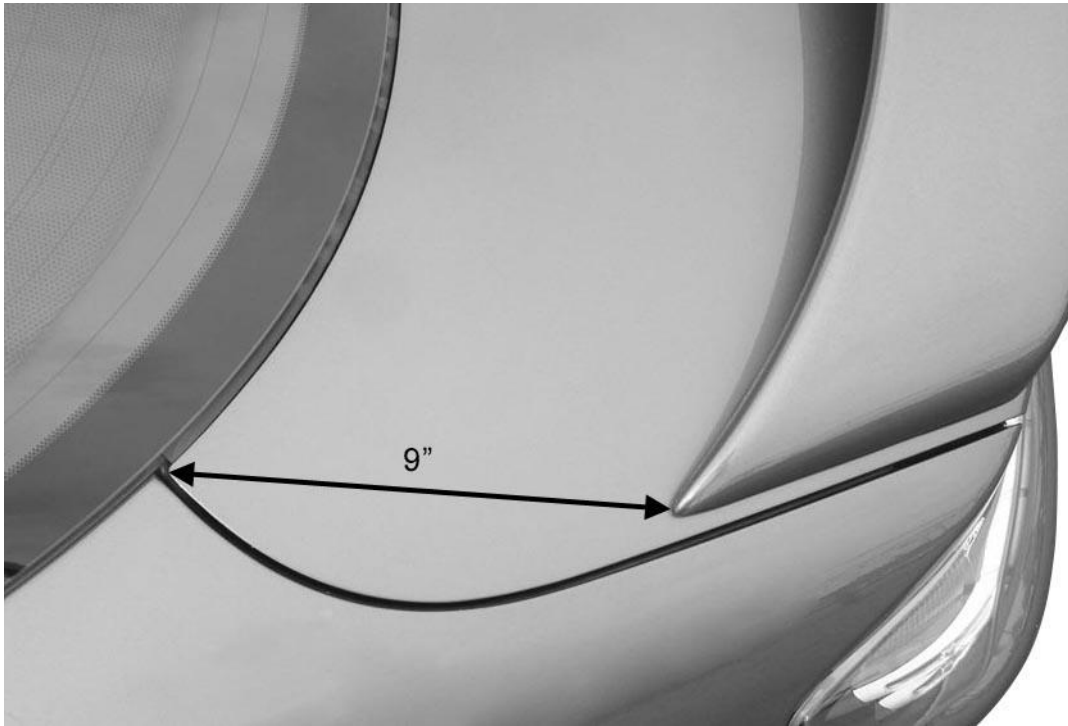


DIAGRAM C

