

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

SS

PART NUMBER: MAZDA3
FOR: 2004 + Mazda 3
EFFECTIVE: 02.06.04

INSTALLATION PACKAGE INCLUDES:

- A) 4 – 3/4" Mounting Screws
- B) 4 – Lock Washers
- C) Adhesive Pads (for unpainted Sportwing®)
- D) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Close trunk. **See Diagram A below.** Along the drivers' side, measure down 5" from the tip of the trunk lid back toward the rear of the car and make a mark with a grease pencil. Repeat on passenger side.
2. Leaving paper liner on bottom of mounting feet, place the Sportwing® on the marks made in Step #1, **see Diagram A below**, so that as you face the rear of the car, the front tip of the Sportwing® rests on these marks. Center the Sportwing® exactly from left to right. Using a grease pencil, outline both mounting feet. Remove Sportwing® from the trunk.
3. Close the trunk and remove the paper liner from the bottom of the mounting feet. Place the Sportwing® back onto the outline marks made in Step #2 and press firmly into place.
4. **See Diagram B below for fastening of Sportwing®.**
5. Clean up any metal shavings that might have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

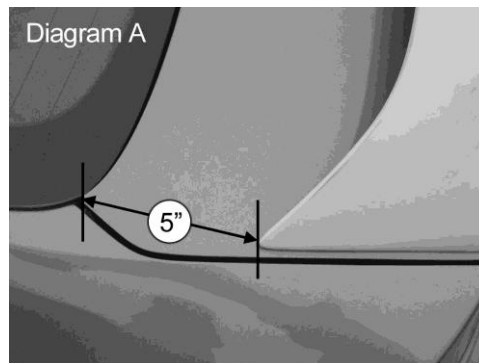


DIAGRAM B

Open deck lid (**IMPORTANT NOTE:** before drilling, we insist using a drill stopper to prevent from drilling through the top of the Sportwing®. Extend drill bit no more than 3/4" past drill stopper). Holding onto the Sportwing® while drilling, drill from inside of trunk using a 5/32" drill bit, drill through the two (2) spots designated on Diagram. Drill up through the deck lid and up into the bottom of the mounting feet. Install MOUNTING SCREWS with LOCK WASHERS and tighten firmly. **DO NOT OVER TIGHTEN.** Repeat procedure on other side.

