

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com


INSTALLATION INSTRUCTIONS

PART NUMBER: MONT2000
FOR: 2000 + Chevrolet Monte Carlo
EFFECTIVE: 06.05.00

INSTALLATION PACKAGE INCLUDES:

- A) 2 – 1/4 x 20 x 3/4" Mounting Screws for Fastening Rear of Sportwing®
- B) 2 – 1/4 x 20 x 1/2" Mounting Screws for Fastening Front of Sportwing®
- C) 4 – Flat Washers
- D) 2 – 5/16" Lock Washers to be used on longer 3/4" Screws
- E) 2 – Templates – Drivers' side and Passenger side
- F) Adhesive Pads (for unpainted Sportwing®)
- G) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

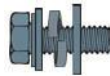

1. Starting on the drivers' side, measure 21" from the tip of the deck lid where it meets the rear window. **See Diagram A below.** Place a mark on the deck lid with a grease pencil. Repeat procedure on other side.
2. Line up the drivers' side template provided with the edge of the trunk lid at the 21" mark. **See Diagram B below.**
3. Drill 1/8" pilot holes through the two (2) locations on the drivers' side template. Repeat procedure on passenger side using the passenger side template provided.
4. Remove the templates and open the 1/8" pilot hole to 3/8". We suggest using a uni-bit for a cleaner cut. Set the Sportwing® on the trunk and align the 3/8" clearance holes in the trunk lid with the tapped holes in the Sportwing®.
5. Proper clearance must be maintained to avoid any bolts from binding with the trunk lid. Locate the Sportwing® on the trunk lid and check hole alignments before installing to insure that the 1/4" – 20 screw can easily thread onto each insert without forcing them.
6. Remove the Sportwing® and apply zinc chromate primer to the edges of the holes in the trunk lid.
7. Install longer 1/4 x 20 x 3/4" screw first using additional 5/16" lock washer and flat washer. **See Diagram C below.** This is the round cut out hole in the second panel. Only tighten this first hole enough so that if you need to adjust the Sportwing® to line up with other holes, you will be able to do so. **FINGER TIGHTEN ONLY.** Tighten the screws after all four (4) have been started. **DO NOT OVER TIGHTEN.**
8. Remove the protective cover from inside the trunk. Clean up any metal shavings that may have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

