

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 447-3416  
www.dawn-ent.com

## INSTALLATION INSTRUCTIONS

GT

PART NUMBER: MUS10  
FOR: 2010 + Ford Mustang  
EFFECTIVE: 08.11.09

### INSTALLATION PACKAGE INCLUDES:

- A) 5 – Paper Hole Locators (*to be centered on 5 mounting holes on bottom of Sportwing<sup>®</sup>. See Diagram C on back of page*)
- B) 5 – 3/4" Mounting Screws (*Self-Tapping*)
- C) 5 – Flat Washers
- D) 1 – 5/8" Plug for 5/8" hole in Secondary Panel
- E) Instruction Sheet

### **PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION WEAR PROPER EYE PROTECTION**

1. Open deck lid. Remove trunk liner. Remove the black factory plugs, **as shown in Diagram A on back of sheet**, on drivers' and passenger side.
2. Close the deck lid. **See Diagram B on back of sheet.** Along the drivers side measure down 12 1/2" from the tip of the trunk lid where it meets the rear window glass, back towards the rear of the car. Repeat on passenger side.
3. Leaving the paper liner on the bottom of the mounting area of the Sportwing<sup>®</sup>. Place the Sportwing<sup>®</sup> on the deck lid so that the front tips of the Sportwing<sup>®</sup> will rest on these marks. Center the Sportwing<sup>®</sup> exactly from left to right. **See Diagram B on back of sheet.** Using a grease pencil, outline both outside mounting areas so that you will have a guide to place the Sportwing<sup>®</sup> on later in the installation to the desired position.
4. Next, place the Sportwing<sup>®</sup> upside-down on a soft cloth so you do not scratch the painted top surface. Using five (5) paper hole locators, provided, remove the liner from the hole locator to expose the adhesive, place the cut out hole in the hole locator centered exactly over the five (5) mounting holes of the fastening area of the Sportwing<sup>®</sup>. **See Diagram C on back of sheet.** Making sure that the hole locators do not move (**NOTE: a small piece of masking tape is helpful in holding hole locators in place**) carefully place the Sportwing<sup>®</sup> back onto the outline marks on deck lid that you made in Step #3.
5. When Sportwing<sup>®</sup> is centered on the outline marks made in Step #3, and making sure that the five (5) paper hole locators did not move, tape all five (5) hole locators to the deck lid using masking tape. Next, carefully lift the Sportwing<sup>®</sup> off the deck lid, leaving the hole locators taped to the deck lid.
6. Using a 1/8" or similar drill bit, drill a 1/8" pilot hole in the exact center of all five (5) hole locators, through the top panel of the deck lid (**NOTE: on the very center hole on the deck lid, you will need to drill through the top panel of the deck lid and continue drilling through the secondary panel of the deck lid**). Open the deck lid, notice that the four (4) outermost holes that you drilled in the deck lid have factory cut outs in secondary panel that you will have access to, the top panel when fastening screws later on in the installation. For the center most hole you will need to open the secondary panel using a 5/8" hole saw, this will give you access to the top panel. A 5/8" black hole plug has been provided for this hole upon finishing.
7. Remove the hole locators from the deck lid and using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) open the five (5) 1/8" pilot holes to 3/8".
8. Apply Zinc Chromate Primer or touch-up paint on the edges of the five (5) 3/8" holes that you drilled in the deck lid.
9. Remove the paper liner from the five tape pads on the bottom of mounting area of Sportwing<sup>®</sup> and lightly tack the Sportwing<sup>®</sup> back onto the outline marks that you made in Step #3. The five (5) mounting holes on bottom of Sportwing<sup>®</sup> should align with the five (5) 3/8" mounting holes that you made in top panel of the deck lid. If 3/8" holes do not align with mounting holes of Sportwing<sup>®</sup>, lift Sportwing<sup>®</sup> off of car and re-align. If holes do not align, you may need to lift Sportwing<sup>®</sup> off car and open 3/8" holes to next size, 7/16".

10. Using mounting screws with flat washers, provided, install self-tapping mounting screws into mounting holes and partially tighten all five (5) mounting screws. After all five (5) have been started, tighten evenly until all screws are tight. DO NOT OVER TIGHTEN.
11. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises, Inc.

DIAGRAM A



Remove factory plug on drivers' and passenger sides.

DIAGRAM B


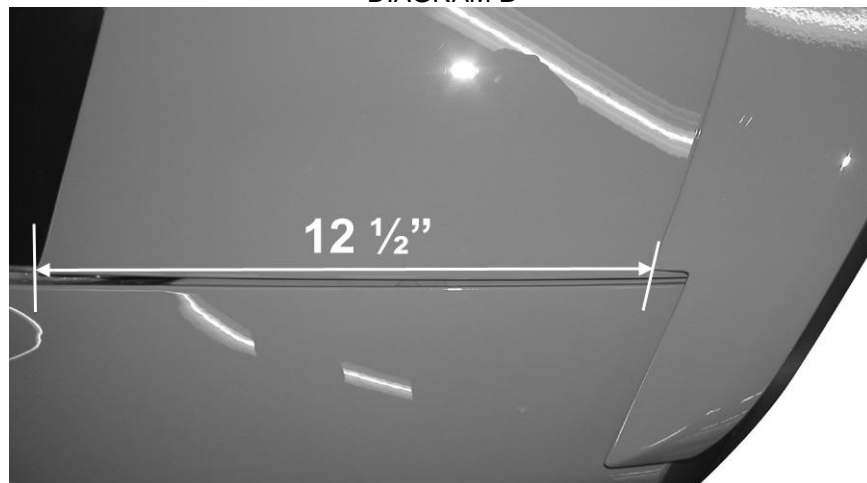


DIAGRAM C

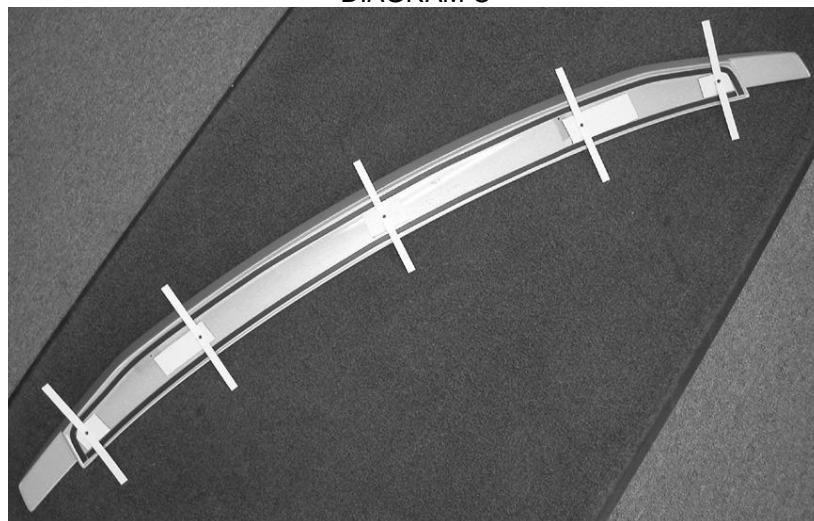

Hole locator locations