

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

GT

PART NUMBER: MUS10PED
FOR: 2010 + Ford Mustang
EFFECTIVE: 03.17.10

INSTALLATION PACKAGE INCLUDES:

- A) 8 – Paper Hole Locators (*to be centered on 8 mounting holes on bottom of Sportwing®. See Diagram C on back of page*)
- B) 8 – 3/4" Mounting Screws (M-6)
- C) 8 – Flat Washers
- D) 8 – Lock Washers
- E) 4 – 5/8" Plug for 5/8" hole in Secondary Panel
- F) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION WEAR PROPER EYE PROTECTION

1. Open deck lid. Remove trunk liner. Remove the black factory plugs, **as shown in Diagram A on back of sheet**, on drivers' and passenger side.
2. Close the deck lid. **See Diagram B on back of sheet.** Along the drivers' side measure down **8 - 5/8"** from the tip of the trunk lid where it meets the rear window glass, back towards the rear of the car. Repeat on passenger side.
3. Place the Sportwing® on the deck lid so that the front tips of the Sportwing® will rest on these marks. Center the Sportwing® exactly from left to right. **See Diagram B on back of sheet.** Using a grease pencil, outline all four (4) mounting feet so that you will have a guide to place the Sportwing® on later in the installation to the desired position.
4. Next, place the Sportwing® upside-down on a soft cloth so you do not scratch the painted top surface. Using the eight (8) paper hole locators, provided, remove the liner from the hole locator to expose the adhesive, place the cut out hole in the hole locator centered exactly over the eight (8) mounting holes of the fastening area of the Sportwing®. **See Diagram C on back of sheet.** Making sure that the hole locators do not move (**NOTE: a small piece of masking tape is helpful in holding hole locators in place**) carefully place the Sportwing® back onto the outline marks on deck lid that you made in Step #3.
5. When Sportwing® is centered on the outline marks made in Step #3, and making sure that the eight (8) paper hole locators did not move, tape all eight (8) hole locators to the deck lid using masking tape. Next, carefully lift the Sportwing® off the deck lid, leaving the hole locators taped to the deck lid.
6. Using a 1/8" or similar drill bit, drill a 1/8" pilot hole in the exact center of all eight (8) hole locators, through the top panel of the deck lid (**NOTE: when drilling the 4 front most holes you will need to drill through the top panel and continue drilling through the secondary panel of the deck lid. Notice that the 4 rear most holes that you drilled have factory cut-out holes to give you access to the top panel when installing screws later on in the installation**). You will need to open the deck lid and using a 5/8" hole saw, open the four (4) front most fastening holes to 5/8" so this will give you access to the front most mounting holes later in the installation. Four (4) 5/8" black hole caps have been provided to cover these holes in secondary panel upon finishing.
7. Remove the hole locators from the deck lid and using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) open the eight (8) 1/8" pilot holes to 3/8".
8. Apply Zinc Chromate Primer or touch-up paint on the edges of the eight (8) 3/8" holes that you drilled in the deck lid.
9. Place the Sportwing® back onto the outline marks that you made in Step #3. The eight (8) mounting holes on bottom of Sportwing® should align with the eight (8) 3/8" mounting holes that you made in top panel of the deck lid. If 3/8" holes do not align with mounting holes of Sportwing®, re-align. If holes do not align, you may need to lift Sportwing® off car and open 3/8" holes to next size, 7/16".

10. Using mounting screws, lock washers and flat washers, provided, install mounting screws into mounting holes and partially tighten all eight (8) mounting screws. After all eight (8) have been started, tighten evenly until all screws are tight. DO NOT OVER TIGHTEN. Place hole caps over secondary panel openings.
11. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises, Inc.

DIAGRAM A




Remove factory plug on drivers' and passenger sides.

DIAGRAM B



DIAGRAM C

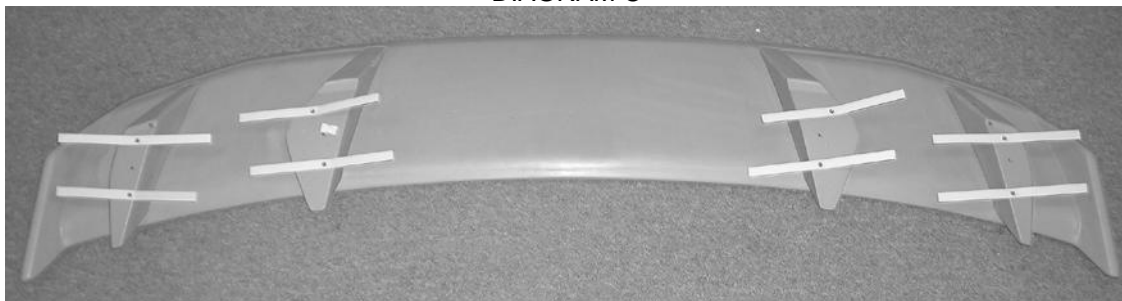

Hole locator locations