

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 642-5505
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

FOR: 2011 + Chevrolet Cruze Front and Rear Ground Effects
PART NO: RFX-6-CRUZE (6 Pc. Kit)
EFFECTIVE: 16 DEC 2010

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

Front Ground Effect Installation-

1. **CLEAN AND PREP:**

Using alcohol wipes, provided, clean the area where Front Ground Effects are to be installed.

Where cooler temperatures prevail, make sure that the Front Ground Effects are at room temperature. When installing, the recommended surface of the vehicle should be at least 75°/24°C for proper installation. If the surface is cold, use a heat gun or hair dryer to warm before proceeding with the installation.

2. **INSTALLATION:**

All Ground Effects are marked for which corner of car they belong on. Using Pro-Bond Adhesive Promoter in the crush-swab self-applicator, squeeze the applicator until you feel the applicator crush, the applicator will become wet at the end and is ready for use. **DO NOT APPLY PRO-BOND ON SURFACE THAT WILL NOT BE COVERED** by the Ground Effect because Pro-Bond may dull the surface. Quickly apply a thin coat of Pro-Bond from the wheel well edge of the splash guard (black in color) moving towards the front of the car being careful not apply Pro-Bond further than the Front Ground Effect will cover. Allow Pro-Bond to dry approximately one to two minute. (See *Diagram A*)

3. Peel back approximately half of the red liner, removing the rest of the liner as you install. (**Note: Do not touch tape adhesive with fingers**) Start at the wheel well end and lightly tack the Front Splitter onto the black splash guard keeping the top edge flush against the lower bumper. The front edge of the Front Ground Effect should line up with the factory bumper crease above. (See *Diagram B*)

4. When satisfied with the install, use a soft cloth to press the Front Ground Effect permanently into place.

5. Repeat procedure on opposite side.

DIAGRAM A



DIAGRAM B



Finished Installation

Rear Ground Effect Installation-

1. CLEAN AND PREP:

Using alcohol wipes, provided, clean the area where Rear Ground Effects are to be installed.

Where cooler temperatures prevail, make sure that the Rear Ground Effects are at room temperature. When installing, the recommended surface of the vehicle should be at least 75°/24°C for proper installation. If the surface is cold, use a heat gun or hair dryer to warm before proceeding with the installation.

2. ALIGNMENT:

Near the wheel well opening use a measuring tape to measure UP 1" from lower crease on rear bumper panel and make a mark. This is shown as POINT A (See Diagram C)

3. On the rear of the bumper use measuring tape to measure UP 1 1/8" from crease on rear bumper panel and make a mark. This is shown as POINT B (See Diagram C)

4. Next, using 3/4" or 1" masking tape, stretch the tape from POINT A to POINT B so that the bottom of masking tape is aligned to the marks you made in steps 2 and 3. (See Diagram C)

5. INSTALLATION:

All Ground Effects are marked for which corner of car they belong on. Using Pro-Bond Adhesive Promoter in the crush-swab self-applicator, squeeze the applicator until you feel the applicator crush, the applicator will become wet at the end and is ready for use. Quickly apply a thin coat of Pro-Bond from POINT A to POINT B. DO NOT APPLY PRO-BOND ANY LOWER THAN 1 1/2" below the tape line because Pro-Bond could dull the paint surface. Allow Pro-Bond to dry approximately one to two minutes.

6. Peel back approximately half of the red liner, removing the rest of the liner as you install. (**Note: Do not touch tape adhesive with fingers**). Start at the back bumper crease where POINT B mark was made and gently tack the Rear Ground Effect on while moving towards the wheel well opening being careful to stay just below the tape line. (See Diagram D)

7. When satisfied with the install, use a soft cloth to press the Front Splitter permanently into place.

8. Repeat procedure on opposite side.

8. If you have any questions or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises, Inc.

DIAGRAM C


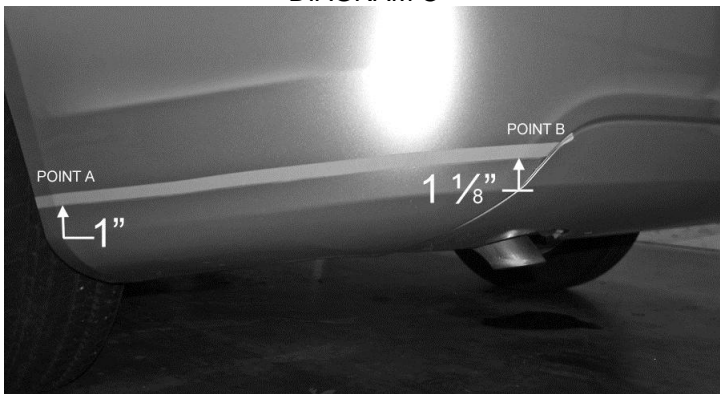


DIAGRAM D

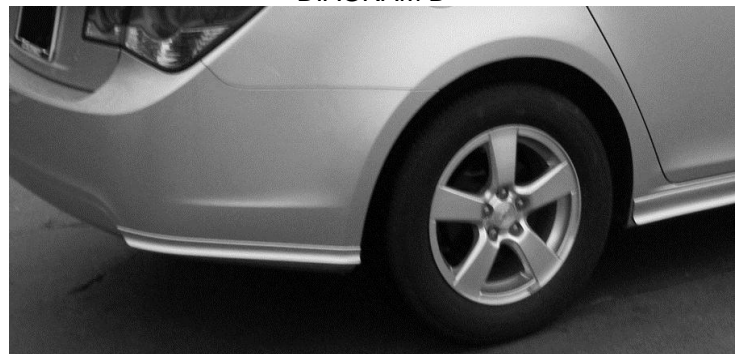

Finished Installation