

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 642-5505
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

FOR: 2011 + Chevrolet Cruze Side Ground Effects
PART NO: RFX-CRUZE (2 Pc kit)
RFX-6-CRUZE (6 Pc kit)
EFFECTIVE: 16 DEC 2010

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

Side Ground Effect Installation:

1. **CLEAN AND PREP:**

Using alcohol wipes, provided, clean the area where Ground Effects are to be installed.

2. **ALIGNMENT**

Use a measuring tape to measure down ½" from the top of rocker panel near front wheel and make a mark (POINT A). Near rear wheel well, measure down ½" from top of rear rocker panel and make a mark (POINT B). (See *Diagram A on back of sheet*)

3. Next, using ¾" or 1" masking tape, stretch the tape from POINT A to POINT B so that the bottom of masking tape is aligned to the ½" marks you made in Step #2. Make sure that when the masking tape is pressed into place along the entire rocker panel, you will have approximately ½" along the entire rocker panel from top of rocker panel to the bottom edge of masking tape. (See *Diagram B on back of sheet*)

Where cooler temperatures prevail, make sure that the Ground Effects are at room temperature. When installing, the recommended metal surface of the vehicle should be at least 75°/24°C for proper installation. If the surface is cold, use a heat gun or hair dryer to warm before proceeding with the installation.

4. Using Pro-Bond Adhesive Promoter in the crush-swab self applicator, squeeze the applicator until you feel the applicator crush, the applicator will become wet at the end and is ready for use. Quickly apply a thin coat of Pro-Bond BELOW the masking tape line. Allow Pro-Bond to dry approximately one to two minutes.

5. **INSTALLATION:**

IMPORTANT! Make sure the Ground Effects are at least 75°/24°C before adhering to the vehicle. **See Diagram C for starting point**, before installing, so that you will be able to center the Ground Effects on the vehicles' rocker panel.

Peel back approximately 12" of red liner, removing the rest of the liner as you install. (Note: Do not touch tape adhesive with fingers) Start at whichever end is best for you, making sure you leave approximately 1/8" starting space, **as shown in Diagram C** (NOTE: leaving approximately 1/8" on the opposite end when you finish). Lightly tack the Ground Effect onto the vehicle, so that the top of the Ground Effect follows the bottom of the masking tape line. This will allow the Ground Effect to follow a nice straight line matching the top edge of the vehicles' rocker panel.

6. When satisfied with the install, use a soft cloth to press the Ground Effect permanently into place.
7. Repeat procedure on opposite side.
8. If you have any questions or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises, Inc.

SEE DIAGRAMS ON BACK OF SHEET

DIAGRAM A



DIAGRAM B

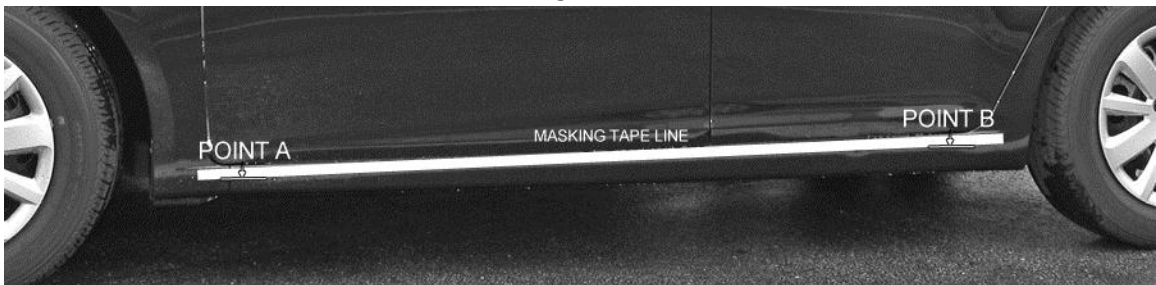


DIAGRAM C

