

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 447-3416  
www.dawn-ent.com

## INSTALLATION INSTRUCTIONS

PART NUMBER: RLUR-CHARGER  
FOR: 2006 + DODGE CHARGER  
EFFECTIVE: 11.21.06

### INSTALLATION PACKAGE INCLUDES:

- A) Alcohol Wipes
- B) Adhesive Promoter
- C) Instruction Sheet

### PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **LOCATION:**


See Diagram below.

2. **CLEAN & PREP:**

For proper installation of roofline spoiler, clean the surface where the roof line spoiler is to be installed using alcohol wipes enclosed. Wipe off excess residue with a clean cloth. Apply Pro-Bond adhesive promoter in the crush swab self-applicator to the shaded areas of rear glass as shown below. Squeeze the applicator until you feel the applicator crush. The applicator will become wet on the end and is ready for use. Quickly apply a coat of Pro-Bond only on each end of the rear window that will be covered by the roofline spoiler. The coat of Pro-Bond will dry quickly. Where cooler temperatures prevail, make sure that the roofline spoiler is at room temperature. The recommended glass surface and roof line spoiler should be at least 75°F/24°C for proper installation. If the surface is cold, use a heat gun or hair dryer to warm before proceeding with the installation.

3. **INSTALLATION:**

Starting on whichever side is best for you, and leaving the liner on the bottom of roof line spoiler, place the spoiler in the starting position on rear glass, making sure each end of the roof line spoiler ends up evenly on drivers and passenger side. Before starting, peel back approximately 12" of the red liner, removing the rest of the liner as you install. Lightly tack the roofline spoiler to the glass and install. If not satisfied with alignment, re-install. **DO NOT TOUCH THE EXPOSED ADHESIVE** with your fingers as the installation is being done (**NOTE: excess skin oil will affect adhesion**). After the roofline spoiler has been installed, use a soft cloth and apply pressure along the entire length of the spoiler to insure proper adhesion.

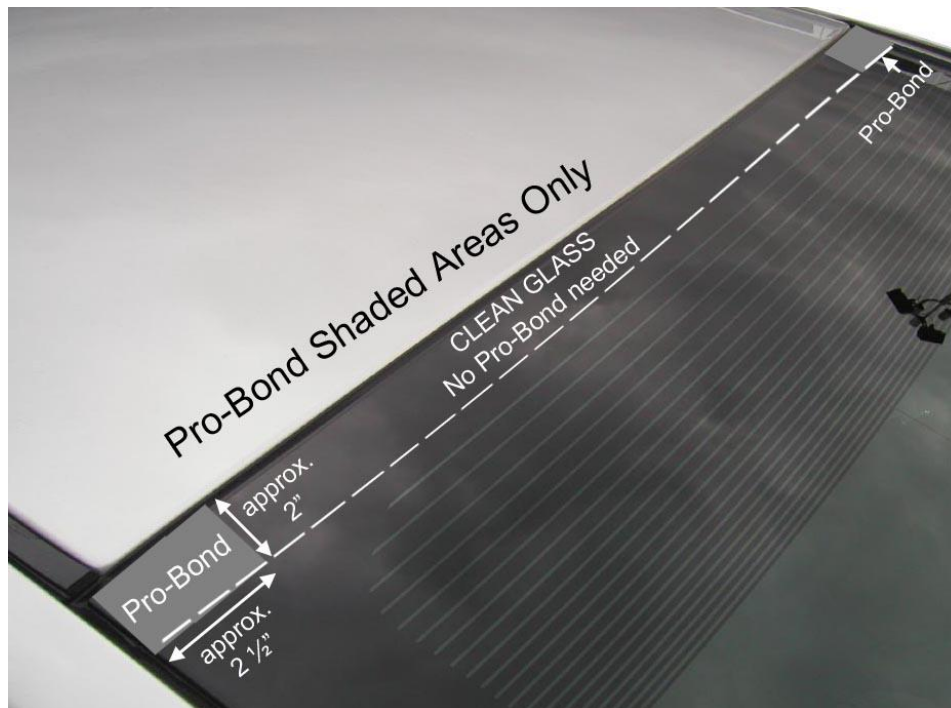

FINISHED INSTALLATION ON BACK OF SHEET

