

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

GT/SW

PART NUMBER: ROGUE
FOR: 2009 + Nissan Rogue
EFFECTIVE: 03.22.10

INSTALLATION PACKAGE INCLUDES:

- A) 4 – M-6 x 3/4" Mounting Screws
- B) 4 – Lock Washers
- C) 4 – Flat Washers
- D) 4 – Black Round Tape Gaskets
- E) 1 – Drivers' Side Template – Flip template over for passenger side
- F) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Open rear hatch and remove the clipped on panel **shown in Diagram A on back of page**, this panel pries off rather easily. After removing trim panel, locate factory cut out holes in the secondary panel of hatch where the two (2) center most fastening holes of the Sportwing® will fasten later on in the installation.
2. Next, locate the two (2) oval black rubber factory wire harness plugs, one on each side, **as shown in Diagram A on back of page**. Unplug each plug and this will give you access to the top panel of the hatch when fastening each outermost fastening location of Sportwing® later on in the installation. Replace factory oval plugs upon finishing.
3. Close the hatch. Leaving the red liner on the bottom of the mounting area of Sportwing®, place the Sportwing® onto the hatch to where the Sportwing® fits flush to the hatch. Center the Sportwing® left to right. Using a grease pencil, outline each outer mounting area so that later in the installation when removing red liner from mounting tape, you will be able to place the Sportwing® back to your desired position.
4. Place the drivers' side template, provided, onto the hatch, **as shown in Diagram B**. When placing the template on hatch, make sure that you follow all the directions explained on the template when template is centered exactly on the hatch. Tape in place. Next, using a 1/8" or similar drill bit, drill a 1/8" pilot hole through the two (2) designated spots on the template. When drilling these holes only extend your drill bit 1/2" past the drill stopper so drill bit does not hit the rain channel of hatch. Masking tape, wrapped tightly around drill bit will work as a drill stopper. Repeat procedure on passenger side by flipping the drivers' side template over. Remove the template when finished. Next, you will need to open the four (4) 1/8" pilot holes that you made in the top panel of the hatch to 3/8". We suggest using a uni-bit when drilling these holes to make a cleaner cut.
5. Apply Zinc Chromate Primer or touch-up paint on the edges of the four (4) 3/8" holes that you drilled in the hatch.
6. **IMPORTANT! DO NOT FORGET THIS STEP!** Next, peel the paper liner from the four (4) black round tape gaskets, provided, and center them on the four (4) 3/8" holes in the hatch that you made in Step #3. Press gaskets in place. **See Diagram C on back of sheet.**
7. Remove the red liner from the mounting tape and lightly tack the Sportwing® onto the hatch, holding onto the Sportwing®, open the hatch and check to see that the four (4) 3/8" holes in the hatch align with the four (4) threaded mounting holes in the bottom of the Sportwing®. If holes do not align, remove Sportwing® and realign until satisfied with alignment or open the 3/8" holes in the hatch to the next size, 7/16".
8. Using mounting screws with lock washers and flat washers, provided, install mounting screws into threaded sleeves of Sportwing® and partially tighten all four (4) mounting screws. After all four (4) have been started, tighten evenly until all screws are tight. **DO NOT OVER TIGHTEN.**
9. Clean up all metal shavings and you are done. Please call the TOLL FREE number at the top of this sheet if you have any questions or would like information about other quality Sportwing® products. Thank you for choosing Dawn Enterprises, Inc.

DIAGRAM A



Four openings in secondary panel for fastening of Sportwing®

DIAGRAM B

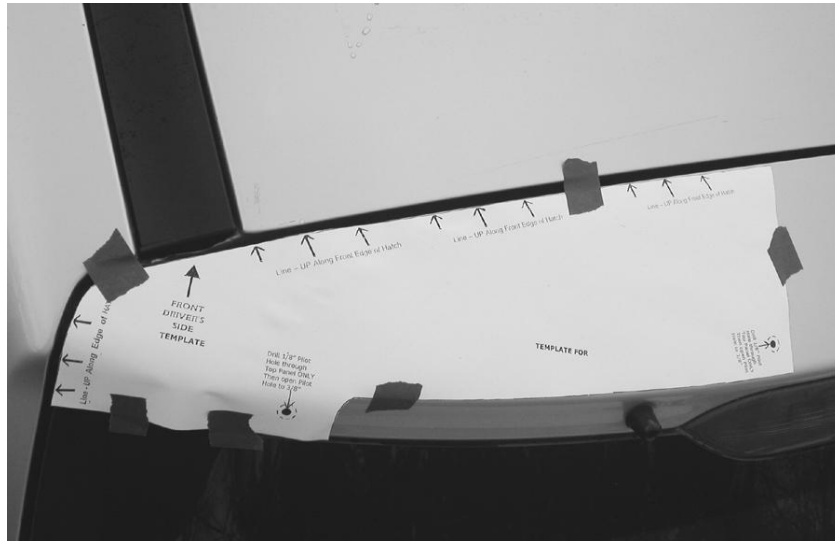


DIAGRAM C



After drilling 3/8" holes in hatch, apply chromate primer or touch-up paint to edges of 3/8" holes then adhere for (4) black round tape gaskets, provided, centered on each 3/8" hole.