

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: SOUL-PED
FOR: 2010 + KIA Soul
EFFECTIVE: 19 JUL 2010

INSTALLATION PACKAGE INCLUDES:

- A) 4 – Mounting Screws
- B) 4 – Paper Hole Locators
- C) 4 – ¼ Lock Washers
- D) 4 – Flat Washers
- E) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Open hatch, **see Diagram A on back of sheet**. Locate the four (4) factory black plugs as shown. Remove the four (4) black factory plugs. Set the plugs aside, you will need them upon finishing installation.
2. Close hatch. **See Diagram B on back of sheet** for measurements as to where to place the Sportwing® on hatch. Next, place the Sportwing® on these marks, centering Sportwing® from left to right. Outline all four (4) mounting feet using a grease pencil. Remove Sportwing® from hatch.
3. Next, place the Sportwing® upside-down on a soft cloth so you do not scratch the painted top surface. Using the four (4) paper hole locators provided, remove the liner from the hole locator to expose the adhesive, place the cut out hole in hole locator centered exactly over the four (4) threaded sleeves of the fastening area of the Sportwing®. **See Diagram C on back of sheet**. Making sure that the hole locators do not move (**NOTE: a small piece of masking tape is helpful in holding hole locators in place**) carefully place the Sportwing® back onto the outline marks on hatch that you made in Step #2.
4. When Sportwing® is centered on outline marks made in Step #2, and making sure that the four (4) paper hole locators did not move, tape all four (4) hole locators to the hatch using masking tape. Next, carefully lift the Sportwing® off the hatch, leaving the hole locators taped to the hatch.
5. Using a 1/8" or similar drill bit, drill a 1/8" pilot hole in the exact center of all four (4) hole locators. Remove the hole locators and using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) open the four (4) 1/8" pilot holes to 3/8".
6. Apply Zinc Chromate Primer or touch-up paint on the edges of the four (4) 3/8" holes that you drilled in the hatch.
7. The four (4) threaded sleeves of mounting area of Sportwing® should align with the four (4) 3/8" mounting holes that you made in hatch. If 3/8" holes do not align with threaded sleeves of Sportwing®, you may need to open 3/8" holes to the next size up.
8. Using mounting screws with lock washers and flat washers, provided, install mounting screws into threaded sleeves and partially tighten all four (4) mounting screws. After all four (4) have been started, tighten evenly until all screws are tight. **DO NOT OVER TIGHTEN.**
9. Clean up any metal shavings and you are finished. Please call the TOLL FREE number at the top of this sheet if you have any questions or if you would like more information about other quality Sportwing® products. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A



DIAGRAM B

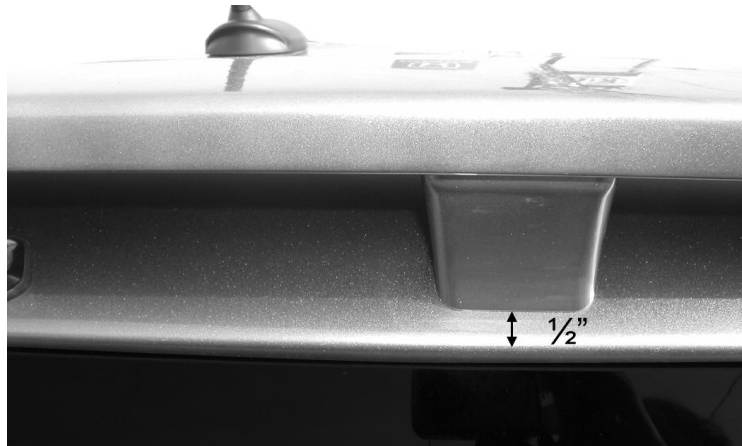


DIAGRAM C

