

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: STS
FOR: 2006 + Cadillac STS
EFFECTIVE: 08.03.06

INSTALLATION PACKAGE INCLUDES:

- A) 4 – 3/4" Mounting Screws
- B) 4 – Lock Washers
- C) 4 – Flat Washers
- D) 2 – Black Hole Caps
- E) Adhesive Pads (for an unpainted Sportwing®)
- F) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Remove trunk cover. Starting on the drivers' side, measure 11 1/4" from tip of the deck lid where it meets the rear window. Mark with a grease pencil. Repeat procedure on other side. **See Diagram A below.**
2. Leaving the paper liner on bottom of mounting area, place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car, the front edge of the Sportwing® rests on these marks. Next, center the Sportwing® from left to right. Outline Sportwing® with a grease pencil (**NOTE: because of curvature of Sportwing® when holding down drivers' side, passenger side will be slightly up from vehicle. After fastening drivers' side, passenger side will pull down flush**). Set Sportwing® aside.
3. **FOR 2006 + MODELS ONLY: See Diagram B on back of sheet.** For the two (2) outer fastening hole measurements, the factory has made a cut out hole in the deck lid, covered with a black plug. Starting on the drivers side, remove the plug for access to the top panel of the deck lid. Using a 5/32" drill bit and drilling from underside of deck lid, drill a 5/32" hole through top panel of deck lid at the **designated spot on Diagram B on back of sheet**. Repeat on outer most fastening hole on passenger side.
4. For the two (2) inside fastening hole drilling locations, **see Diagram C on the back of sheet**.
5. Close deck lid and remove the paper liner from the bottom of the mounting area of the Sportwing® and place Sportwing® back onto the outline marks that you made in Step #2. Press firmly into place.
6. **IMPORTANT! READ STEP #5 COMPLETELY BEFORE DRILLING!!**
Open deck lid and switch back to a 5/32" drill bit. Holding onto the Sportwing® while drilling, drill up into the bottom of the Sportwing® from inside of trunk using the four (4) pilot holes in top panel drilled in Step #3 and #4 (**NOTE: when drilling, you must use a drill stopper to prevent from drilling through the top of the Sportwing®, masking tape or electrical tape wrapped tightly around drill bit works as a drill stopper**) only extend drill bit past drill stopper no more than 5/8". Using a ratchet with 5/16" socket, install mounting screws with lock washers and flat washers and tighten firmly. **DO NOT OVER TIGHTEN.** Place the black hole caps over your access holes when finished. Repeat procedure on other side.
7. Clean up any metal shavings that might have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A


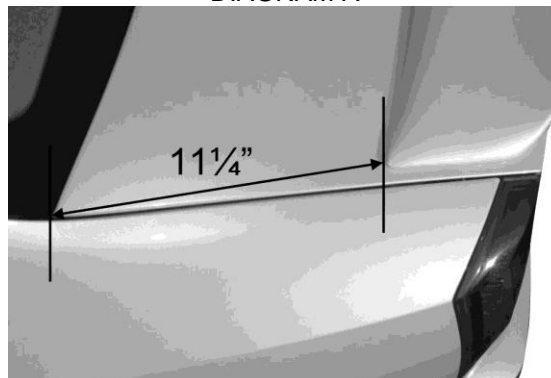


DIAGRAM B

DRIVERS SIDE

Open deck lid, measure 2 3/8" in from the outside edge of the deck lid and using a 5/32" drill bit, drill a 5/32" hole through the top panel of the deck lid.

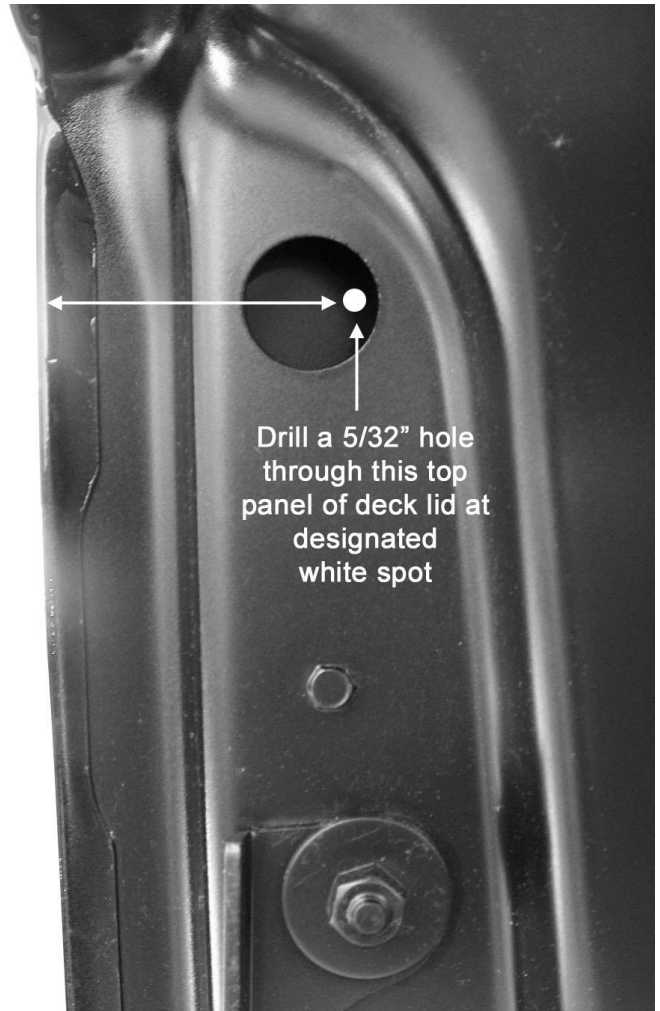

Drill a 5/32" hole through this top panel of deck lid at designated white spot



Drill 5/32" hole through top panel only. Repeat on passenger side.

16"

2-1/8"

DIAGRAM C