

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

GT

PART NUMBER: VERSA-HB
FOR: 2007 + Nissan Versa Hatchback
EFFECTIVE: 03.18.10

INSTALLATION PACKAGE INCLUDES:

- A) 4 – Paper Hole Locators (*to be centered on 4 threaded sleeve mounting holes on bottom of Sportwing®. See Diagram C on back of page*)
- B) 4 –Mounting Screws (*M6 x 3/4"*)
- C) 4 – Flat Washers
- D) 4 – Lock Washers
- E) 1 – 5/8" Plug for 5/8" hole in Secondary Panel (drivers' side)
- F) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION **WEAR PROPER EYE PROTECTION**

1. **Open hatch.** Remove the black factory plugs and trim panel, **as shown in Diagram A on back of sheet**, on drivers' and passenger side.
2. Close the hatch. Place the Sportwing® onto the hatch. Center the Sportwing® from left to right, making sure the Sportwing® is lying flush to the hatch. When the Sportwing® is in desired position, outline the Sportwing® using a grease pencil. This will allow you to place the Sportwing® exactly back to the desired position later in the installation.
3. Next, place the Sportwing® upside-down on a soft cloth so you do not scratch the painted top surface. Using four (4) paper hole locators, provided, remove the liner from the hole locator to expose the adhesive, place the cut out hole in the hole locator centered exactly over the four (4) mounting holes of the fastening area of the Sportwing®. **See Diagram B on back of sheet.** Making sure that the hole locators do not move (**NOTE: a small piece of masking tape is helpful in holding hole locators in place**) carefully place the Sportwing® back onto the outline marks on hatch that you made in Step #2.
4. When Sportwing® is centered on the outline marks made in Step #2, and making sure that the four (4) paper hole locators did not move, tape all four (4) hole locators to the hatch using masking tape. Next, carefully lift the Sportwing® off the deck lid, leaving the hole locators taped to the deck lid.
5. Using a 1/8" or similar drill bit, drill a pilot hole on the exact center of all our (4) hole locators, through the top panel of the hatch. Remove the hole locators from the hatch and using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) open the four (4) 1/8" pilot holes to 3/8".
6. Apply Zinc Chromate Primer or touch-up paint on the edges of the four (4) 3/8" holes that you drilled in the hatch.
7. Open the hatch and notice that you will have access to three of the four 3/8" mounting holes that you drilled in the hatch through the openings in the secondary panel of the hatch. **IMPORTANT!** The only mounting hole that does not line up with the factory cut-out in secondary panel is the drivers' side, where you removed the black factory oval rubber plug. Using a 5/8" hole saw, you will need to make an additional 5/8" opening on the secondary panel of hatch. **See Diagram C on back of sheet** as to the approximate location you should make this 5/8" hole. A 5/8" black hole cap has been provided to cover this hole upon finishing (**NOTE: on passenger side, where black factory oval plug was removed, it looks like you will not have access to the threaded sleeve or the mounting area of the Sportwing®, but because of the angle of the threaded sleeve, you will be able to thread the screw into this hole without making an additional hole**).
8. Place the Sportwing® on the hatch and install mounting screws with lock washers and flat washers. When all four (4) have been started, tighten evenly until all screws are tight, but **DO NOT OVERTIGHTEN!**
9. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises, Inc.

DIAGRAM A

Remove plastic trim panel (removes easily) for access to the top panel of hatch through factory cut out holes in secondary panel. This will give you access to the inside fastening holes of the Sportwing®.



Remove black factory oval rubber plugs from secondary panel.

DIAGRAM B


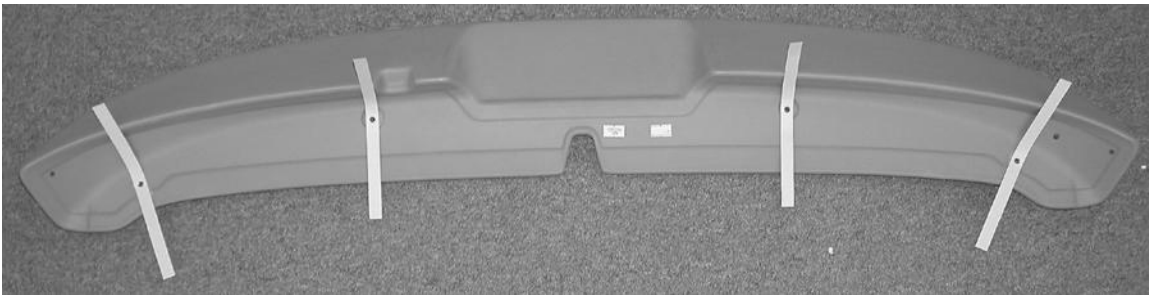


DIAGRAM C

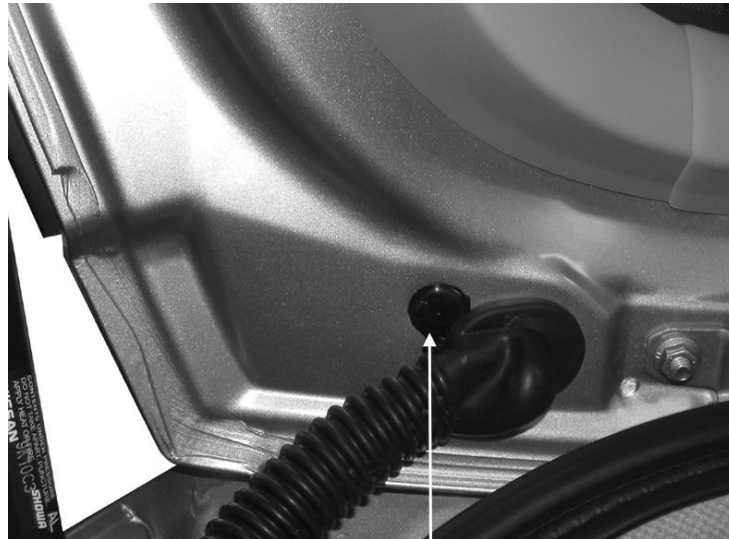

See Step #7. You will need to make an additional 5/8" hole in secondary panel of the hatch at this approximate location for access to tighten screw later in the installation.