

DAWN ENTERPRISES INC.
9155 Sweet Valley Dr.,
Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 642-5505
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: BSL-OPT11

FOR: Kia Optima 2011 & UP

EFFECTIVE: 16 June 2015



Finished Product

PARTS INCLUDED:

See label on back of moldings for placement location

- 2) – 14" Black Pieces (top)
- 2) – 10" Chrome Pieces (middle)
- 2) – 6" Black Pieces (bottom)
- 2) – Pro Bond sticks
- 2) – Alcohol Pads

***NOTE:** Use only 3/4" Masking Tape when installing this product.*

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

Parts are not returnable if installed.

1. **LOCATION** (See Diagram below for placement)

Run masking tape **as shown in the diagram below**. Press tape against the vehicle, making sure that the tape is straight. **Repeat on other side of vehicle.**



2. **CLEAN AND PREP:**

For a proper installation, clean the surface where the molding is to be installed using the included alcohol pads. Wipe off excess residue with a clean cloth. **TEMPERATURE:** Where cooler temperatures prevail, make sure the molding is at room temperature. The recommended metal surface temperature of the vehicle should be at least 75°F/24°C for proper installation. If the surface is cold, use a heat gun to warm before proceeding with installation. **PROMOTER:** Supplied is a crush swab **Pro Bond** self-applicator. Squeeze the applicator until you feel the applicator "crush". When the applicator becomes wet on the end, it is ready for use. Quickly apply a thin coat of **Pro Bond** below the masking tape line, no further than 1/4" below the tape. Be careful not to go lower than 1/4" as **Pro Bond** could dull the paint surface. Wait for approximately 2 minutes for the coat of **Pro Bond** to dry before applying molding.

3. **INSTALLATION:**


BEFORE STARTING, peel back 3" of the red liner, removing the rest of the liner as you install. **DO NOT TOUCH THE EXPOSED ADHESIVE** with your fingers during the installation (**NOTE: excess skin oil will affect adhesion**).

APPLYING THE MOLDING: the top of the molding should follow along the bottom of your masking tape line, which is your guide; peel off the rest of the red liner as you go.

Continued on back →

Start adhering molding, installing in this order 14" first, 10" second, 6" third.

When installing 14", 10", 6" on front door, begin by starting 1/8" from edge of the front door.

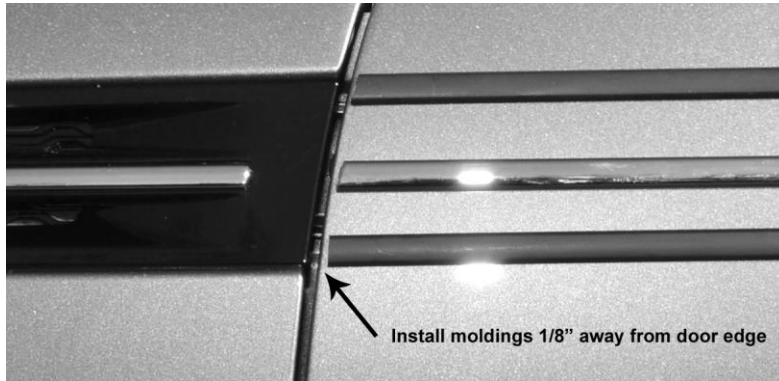

AFTER THE MOLDING has been installed, use a soft cloth and apply pressure along the entire length of the molding to insure proper adhesion. Remove masking tape.