

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 642-5505  
www.Dawn-Ent.com

## INSTALLATION INSTRUCTIONS

PART NUMBER: **CBM-300-10111213**  
FOR: EFFECTIVE: 8.18.15

### PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

**With the car & part in natural sunlight, check for paint match/flaws before installing.  
Once installed, parts are NOT returnable.**

#### PARTS INCLUDED WITH INSTALL LOCATION:

#310 (LABELED ON BACK OF PART) – 1 PIECE (DRIVER FRONT)  
#311 (LABELED ON BACK OF PART) – 1 PIECE (PASSENGER FRONT)  
#312 (LABELED ON BACK OF PART) – 1 PIECE (DRIVER REAR)  
#313 (LABELED ON BACK OF PART) – 1 PIECE (PASSENGER REAR)

1. **LOCATION** (See Diagram below):

Run masking tape, **as shown using the measurements in the diagram below**, from POINT A to POINT B. Press tape against the vehicle, making sure that the tape is straight from POINT A to POINT B. **Repeat on other side of vehicle.**


2. **CLEAN AND PREP:**

Clean the surface where the molding is to be installed using the alcohol pads enclosed for proper installation of Chrome Body Side Molding. Wipe off excess residue with a clean cloth. Next, apply the **Pro Bond** promoter.

**TEMPERATURE:** Where cooler temperatures prevail, make sure the molding is at room temperature. The recommended metal surface temperature of the vehicle should be at least 75°F/24°C for proper installation. If the surface is cold, use a heat gun to warm before proceeding with installation.

**PROMOTER:** Supplied is a crush swab **Pro Bond** self-applicator. Squeeze the applicator until you feel the applicator "crush". When the applicator becomes wet on the end, it is ready for use. Quickly apply a thin coat of **Pro Bond** below the masking tape line, no further than 1 ¼" below the tape. Be careful not to go lower than 1 ¼" as **Pro Bond** could dull the paint surface. Wait for the coat of **Pro Bond** to dry before applying molding.

**DIAGRAM B:**  
(Starting Point)

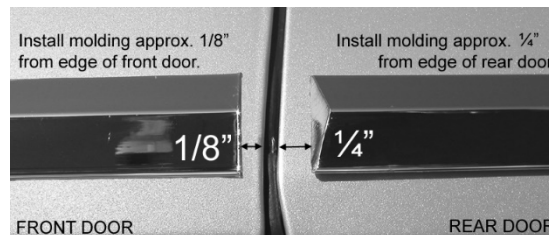

3. **INSTALLATION (IMPORTANT):**

**Before starting, see Diagram B** as to where to start applying molding. Next, completely peel off all of the liner from back of molding, making sure all red liner is removed from molding. **DO NOT TOUCH** the exposed adhesive with your fingers as the installation is being done.


4. **AFTER THE MOLDING** has been installed, use a soft cloth and apply pressure along the entire length of the molding to insure proper adhesion.

**! SEE REVERSE SIDE FOR MODEL-SPECIFIC DIAGRAMS !**

2015+ Chevrolet Colorado// GMC Canyon



2014+ Jeep Grand Cherokee

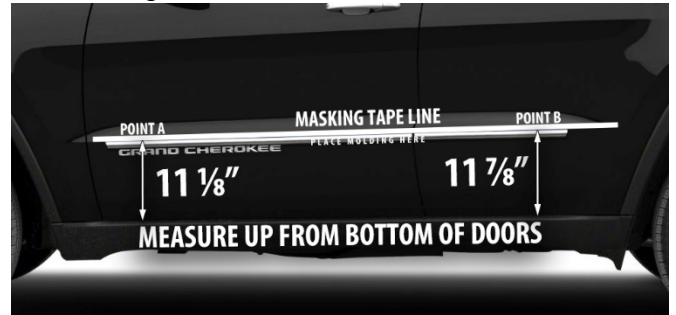


2009+ Toyota Venza



2008+ Infiniti QX50



2014+ Nissan Rogue

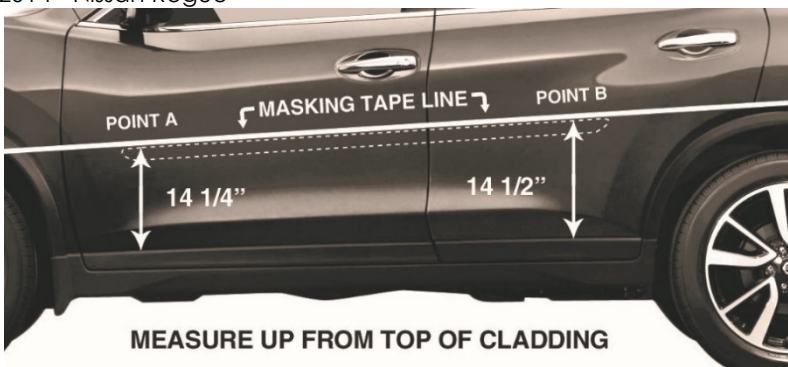

2007+ Infiniti Q40

