

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125

Phone: (216) 447-1777 or (800) 548-4867

Fax: (216) 642-5505

www.Dawn-Ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: **CBM-300-36-37-38-39**

EFFECTIVE: 11 April 2023

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

With the car & part in natural sunlight, check for paint match/flaws before installing.

Once installed, parts are NOT returnable.

PARTS INCLUDED WITH INSTALL LOCATION:

#336 (LABELED ON BACK OF PART) – 1 PIECE (DRIVER FRONT)

#337 (LABELED ON BACK OF PART) – 1 PIECE (PASSENGER FRONT)

#338 (LABELED ON BACK OF PART) – 1 PIECE (DRIVER REAR)

#339 (LABELED ON BACK OF PART) – 1 PIECE (PASSENGER REAR)

1. LOCATION (See Diagram below):

Run masking tape, **as shown using the measurements in the diagram below**, from POINT A to POINT B. Press tape against the vehicle, making sure that the tape is straight from POINT A to POINT B. **Repeat on other side of vehicle.**


2. CLEAN AND PREP:

Clean the surface where the molding is to be installed using the alcohol pads enclosed for proper installation of Chrome Body Side Molding. Wipe off excess residue with a clean cloth. Next, apply the **Pro Bond** promoter.

TEMPERATURE: Where cooler temperatures prevail, make sure the molding is at room temperature. The recommended metal surface temperature of the vehicle should be at least 75°F/24°C for proper installation. If the surface is cold, use a heat gun to warm before proceeding with installation.

PROMOTER: Supplied is a crush swab **Pro Bond** self-applicator. Squeeze the applicator until you feel the applicator "crush". When the applicator becomes wet on the end, it is ready for use. Quickly apply a thin coat of **Pro Bond** below the masking tape line, no further than 1 ¼" below the tape. Be careful not to go lower than 1 ¼" as **Pro Bond** could dull the paint surface. Wait for the coat of **Pro Bond** to dry before applying molding.

DIAGRAM B:
(Starting Point)

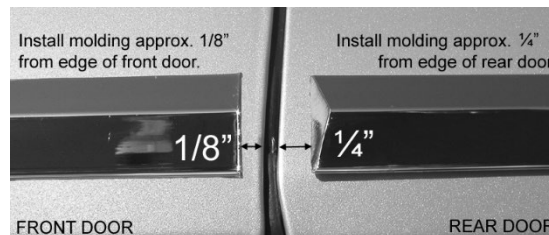


3. INSTALLATION (IMPORTANT):

Before starting, see Diagram B as to where to start applying molding. Next, completely peel off all of the liner from back of molding, making sure all red liner is removed from molding. **DO NOT TOUCH** the exposed adhesive with your fingers as the installation is being done.

4. AFTER THE MOLDING has been installed, use a soft cloth and apply pressure along the entire length of the molding to insure proper adhesion.

2010+ Lexus RX

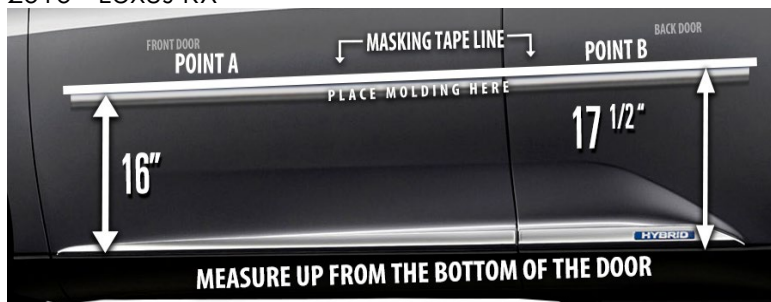

2016+ Kia Sorento



2012+ Buick Verano



2010+ Buick Lacrosse




2011+ Chevrolet Cruze




2013+ Toyota Prius C



2015+ Chrysler 200 & 2013+ Dodge Dart

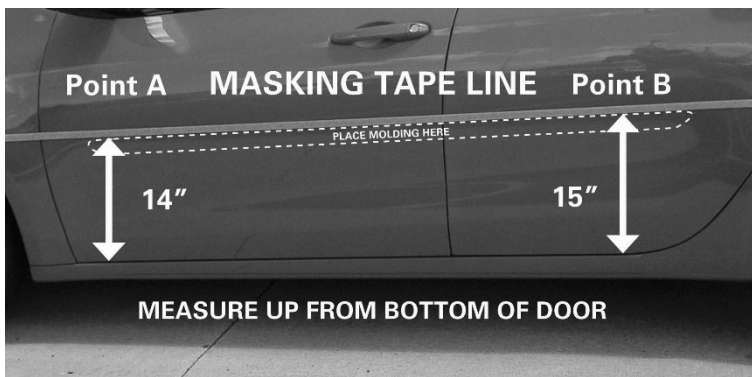

2015+ Ford Edge

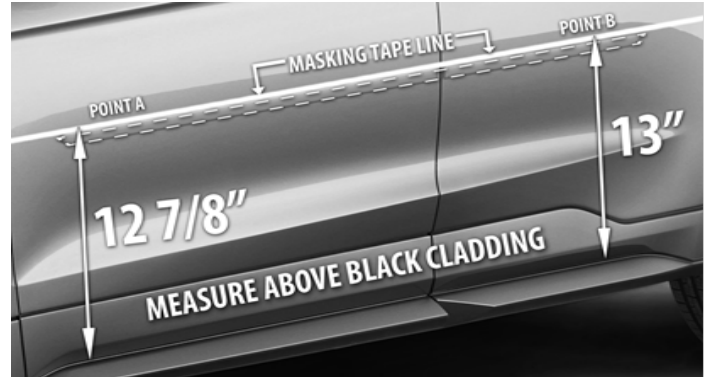


2012 & Up Ford Focus




2008-2011 Ford Focus



2013+ Ford Escape

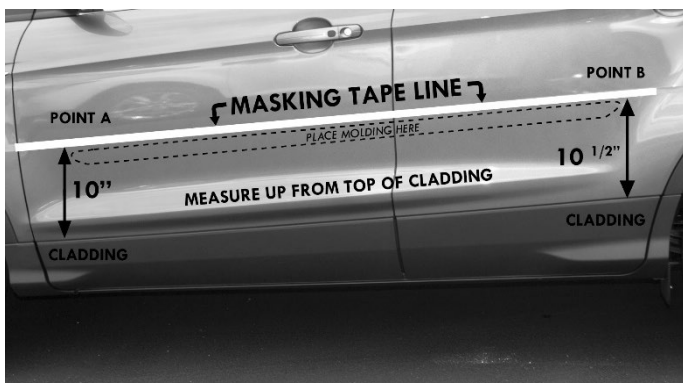


2007-2015 Ford Edge & Lincoln MKX

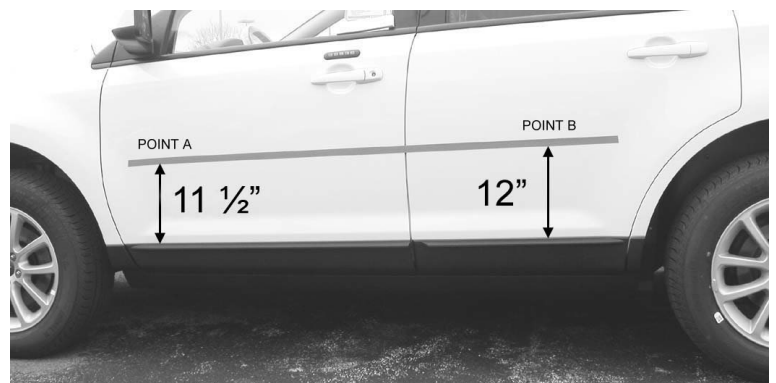

Hyundai Tucson 07-09




Hyundai Tucson 10+

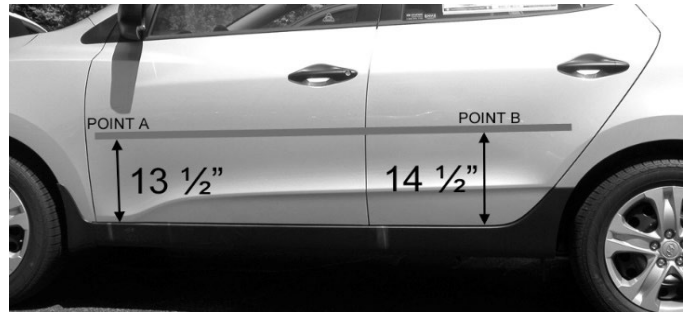

07+ Acura MDX




01-06 Acura MDX

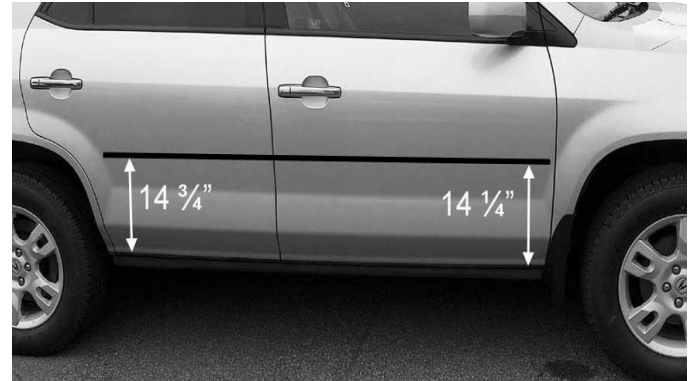

15+ Lincoln MKC



11-16 Chevrolet Volt

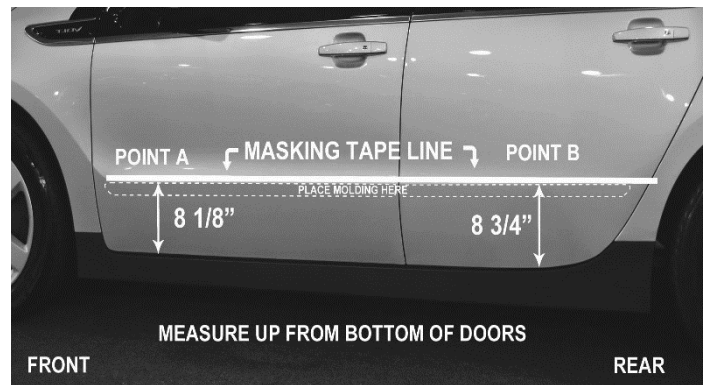

11+ Ford Explorer



17+ Chevrolet Volt



2020+ Nissan Sentra



13+ Ford C-Max



Honda Pilot 2023+

