

**DAWN ENTERPRISES INC.**

9155 Sweet Valley Dr. Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 447-3416  
www.Dawn-Ent.com

**INSTALLATION INSTRUCTIONS**

PART NUMBER: CIV16-2DR-PED  
FOR: 2016+ HONDA CIVIC 2 DR  
EFFECTIVE: 9/29/17

**INSTALLATION PACKAGE INCLUDES:**


- A) 4 – M6x5/8" Mounting Screws
- B) 4 – Flat Washers
- C) 4 – Paper Hole Locators

**EXTRA TOOLS NEEDED:** Masking Tape, Tape Measurer, Drill, 1/8" Drill Bit, Uni-Bit

**PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION**

1. Remove trunk liner.
2. Place the Sportwing® onto the deck lid and measure 5" from the tip on the trunk to the tip of the Sportwing® on both the driver and passenger sides. (As shown in **Diagram A** below).

(DIAGRAM A)

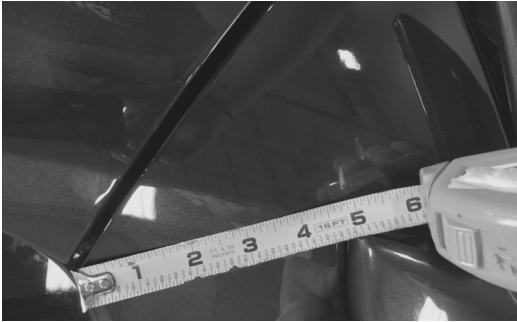

(DIAGRAM B)



3. Next, take a grease pencil and outline the edges of the Sportwing® on both the driver and passenger sides. Place the Sportwing® aside on a soft cloth to prevent scratching. Proceed to place a cover or blanket inside of the trunk to protect it from metal shavings from drilling. Place the 4 Hole Locators (provided) precisely over the 4 thread holes on the bottom of the pedestal feet (As shown in **Diagram B** Above).
4. Carefully flip the Sportwing® upside-down on a soft surface, leaving the Hole Locators still fastened to the mounting holes. Make sure that the Hole Locators have not moved off the holes. Place the Sportwing® back onto the outline marks that you made in the previous step. Next, after Sportwing® is aligned, tape the hole locators onto the deck lid using masking tape. After all 4 hole locators are fastened, carefully lift the Sportwing® up from the deck lid, leaving the Hole Locators taped onto the deck lid. Set the Sportwing® aside on a soft surface.
5. Using a 1/8" or similar drill bit, drill a 1/8" pilot hole in the exact center of each of the 4 hole locations. After drilling, remove the Hole Locators. Next, using a uni-bit, open the 4 pilot holes to 7/16".
6. Apply Zinc Chromate primer or touch-up paint on the edges of the 4, 7/16" holes that you drilled to prevent rusting.
7. Remove the paper liner off the adhesive tape. Next, align the Sportwing® with the grease pencil markings made in Step 3. Using provided Mounting Screws with lock washers and flat washers, install screws into the 4 mounting holes and partially tighten all 4 mounting screws. After all 4 are slightly tightened, tighten all evenly until they are tight. DO NOT OVER-TIGHTEN.
8. Clean up any metal shavings, and you are done. If you have any questions or would like more information about other quality Sportwing® products, please call the TOLL-FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.