

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 447-3416  
www.Dawn-Ent.com

## INSTALLATION INSTRUCTIONS

PART NUMBER: F250/350-SC/CC &  
F250/350-SC/CC-17  
FOR: 2005 + Ford F250/ F350 Super/Crew Cab  
EFFECTIVE: 16 AUG 2010

### PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

With the car and part in natural sunlight, check for paint match and flaws before installing!

1. **LOCATION** (See Diagram below):

Run masking tape **as seen in Diagram below** from POINT A to POINT B. Press tape against the vehicle, making sure that the tape is straight from POINT A to POINT B.

2. **CLEAN AND PREP:**

Clean the surface where the molding is to be installed using the alcohol pads enclosed for proper installation of Custom Body Side Molding. Wipe off excess residue with a clean cloth. Apply **PRO-BOND ADHESIVE PROMOTER** in the crush swab self-applicator. Squeeze the applicator until you feel the applicator "crush". The applicator will become wet on the end and is ready for use. Quickly apply a thin coat of **PRO-BOND** below the masking tape line, no further than 2 ½" below the tape. Be careful not to go lower than 2 ½" because **PRO-BOND** could dull the paint surface. The light coat of **PRO-BOND** will dry quickly. Where cooler temperatures prevail, make sure the molding is at room temperature. The recommended metal surface temperature of the vehicle should be at least 75°F/24°C for proper installation. If the surface is cold, use a heat gun to warm before proceeding with installation.

3. **INSTALLATION:**


**BEFORE STARTING**, peel back 12" of the red liner, removing the rest of the liner as you install. **DO NOT TOUCH THE EXPOSED ADHESIVE** with your fingers as the installation is being done (**NOTE: excess skin oil will affect adhesion**).

**Moldings have been made with either a bullet end or a slant end. If slant end, be sure to put long side on top. Start adhering moldings, front and rear with the straight cut edges first and the bullet/angle side directed toward the appropriate wheel well adhered last.**

APPLYING THE MOLDING using the bottom edge of the masking tape as your guide. Peel the rest of the red liner as you go.

AFTER THE MOLDING has been installed, use a soft cloth and apply pressure along the entire length of the molding to insure proper adhesion. Remove masking tape and you will have an OEM style Custom Body Side Molding that will give you many years of protection.

**! SEE DIAGRAMS ON REVERSE SIDE !**

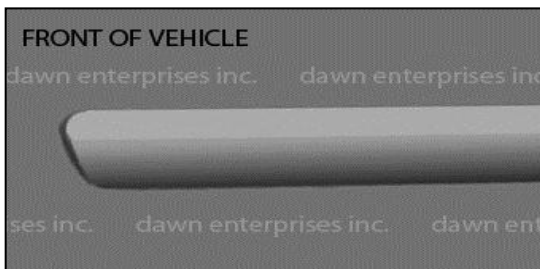

**2005 – 2016 SuperCab / Super Crew Cab Install Instructions**



**2017 + SuperCab / Super Crew Cab Install Instructions**

