

**DAWN ENTERPRISES INC.**


9155 Sweet Valley Dr., Valley View, OH  
44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 642-5505  
www.dawn-ent.com

**INSTALLATION INSTRUCTIONS**

**PART NUMBER: CSL-TAU10**  
**FOR: Ford Taurus 2010 & UP**  
**EFFECTIVE: 16 June 2015**

**PARTS INCLUDED:**


- 2) – 42 1/2" Chrome Pieces
- 2) – 35" Chrome Pieces
- 2) – 9" Chrome Pieces
- 2) – 6" Chrome Pieces
- 2) – Pro Bond sticks
- 2) – Alcohol Pads

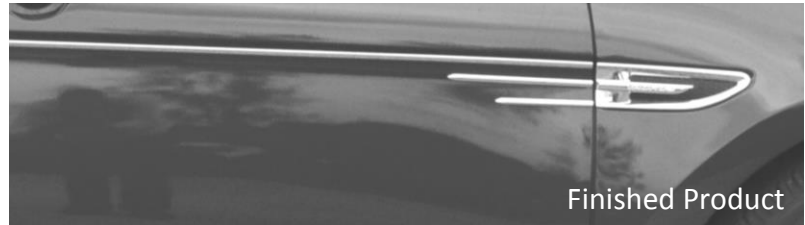

**\*NOTE:** Use only 3/4" Masking Tape when installing this product.\*

**PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION**  
**Parts are not returnable if installed.**

1. **LOCATION** (See Diagram below for measurements)  
Run masking tape **as shown in the diagram below** from POINT A to POINT B. Press tape against the vehicle, making sure that the tape is straight from POINT A to POINT B. **Repeat on other side of vehicle.**

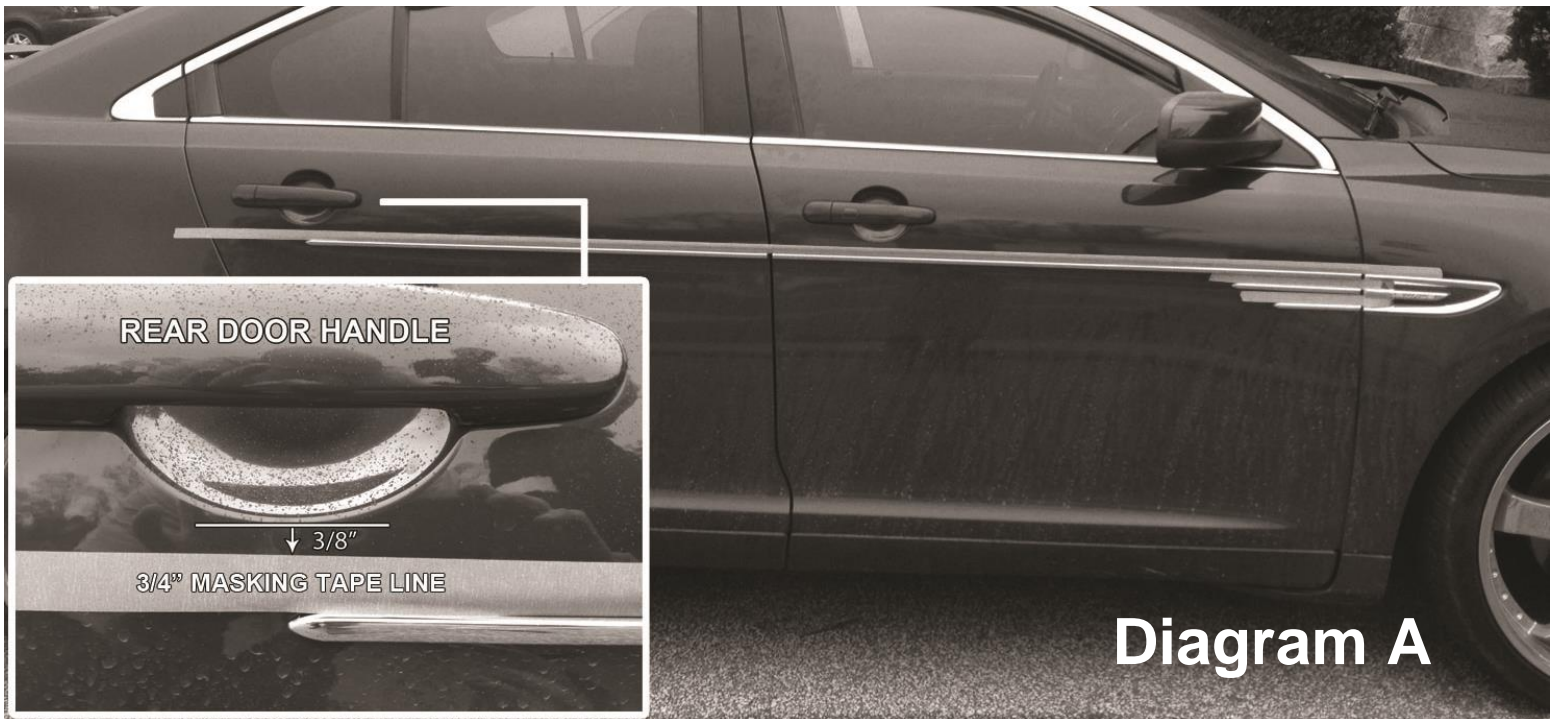

2. **CLEAN AND PREP:**  
For a proper installation, clean the surface where the molding is to be installed using the included alcohol pads. Wipe off excess residue with a clean cloth. **TEMPERATURE:** Where cooler temperatures prevail, make sure the molding is at room temperature. The recommended metal surface temperature of the vehicle should be at least 75°F/24°C for proper installation. If the surface is cold, use a heat gun to warm before proceeding with installation. **PROMOTER:** Supplied is a crush swab **Pro Bond** self-applicator. Squeeze the applicator until you feel the applicator "crush". When the applicator becomes wet on the end, it is ready for use. Quickly apply a thin coat of **Pro Bond** below the masking tape line, no further than 1/4" below the tape. Be careful not to go lower than 1/4" as **Pro Bond** could dull the paint surface. Wait for approximately 2 minutes for the coat of **Pro Bond** to dry before applying molding.
3. **INSTALLATION:**  
**BEFORE STARTING**, peel back 12" of the red liner, removing the rest of the liner as you install. **DO NOT TOUCH THE EXPOSED ADHESIVE** with your fingers during the installation (**NOTE: excess skin oil will affect adhesion**).

APPLYING THE MOLDING: the top of the molding should follow along the bottom of your masking tape line, which is your guide; peel off the rest of the red liner as you go.

Start adhering molding installing in order: 42½" front door first, 35" rear door second, 9" pointed end third, 6" pointed end fourth.

When installing 42½" front driver door first, begin by starting 1/8" from front edge of door and finishing 1/8" from end of driver's door.

Next, when installing 35" rear door begin by first installing the straight cut edge of molding 1/8" from edge of door and the bullet end directed towards the rear wheel well.

See Diagram B for installation of 9" bullet end piece and 6" bullet end piece.

AFTER THE MOLDING has been installed, use a soft cloth and apply pressure along the entire length of the molding to insure proper adhesion. Remove masking tape.

