

UNIVERSAL FITTING INSTRUCTION FOR BRP FENDER FLARES

Important Note: Please inspect your fender flares for proper fit before painting or mounting

Installation Instructions

Hardware Kit (Supplied on each set of fender flares)

Self Tapping Screws = 1 Package Chrome Bolts = 1 Package

Tool Required:-

1/8" Diameter Drill Bits / Phillip Screw Driver

1. Test fit the fender flares on the vehicle.
2. Wet a soft cloth or tissue paper with alcohol or cleaning solvent and clean the entire surface which will be taken up by the double sided adhesive tape. (See FIG 1, area marked xxx)
3. Peel about 2" of the vinyl backing away from one end of the double sided adhesive tape. (See FIG 2) Pulling the vinyl backing free and apply firm pressure to obtain a good adhesion. (See FIG 3) Use a 1/8" diameter drill bit or the provided self tapping screw and attach the flare at various points. (See FIG 3)
4. Press all 'chrome bolts' with pressure into the pocket holes with a 'click' sound. (See FIG 4)
Do not wash the vehicle until 24 hours past.

FIG 1

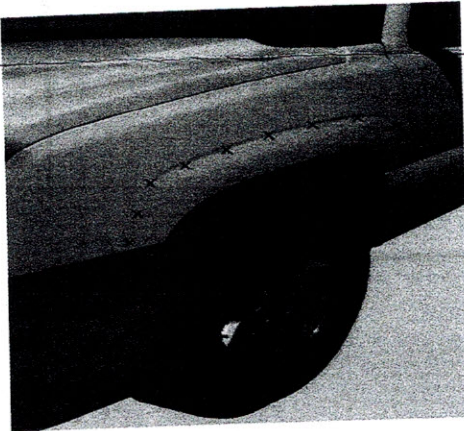


FIG 2

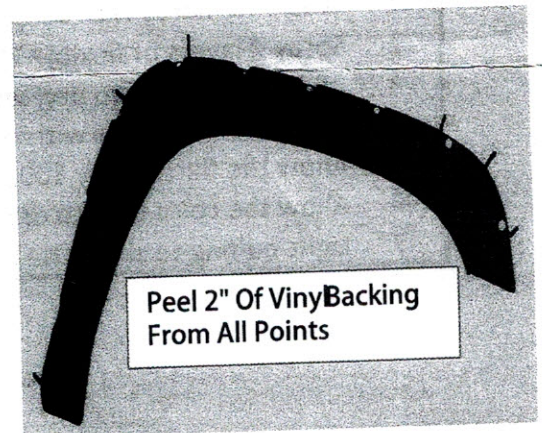


FIG 3



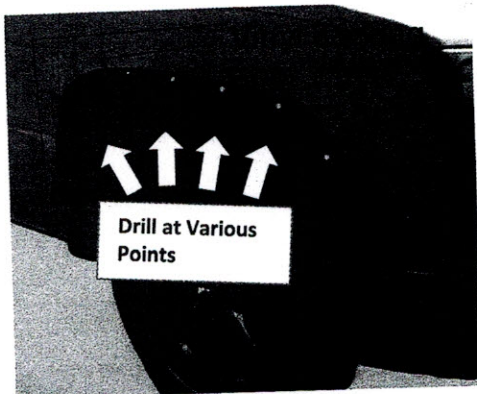


FIG 4

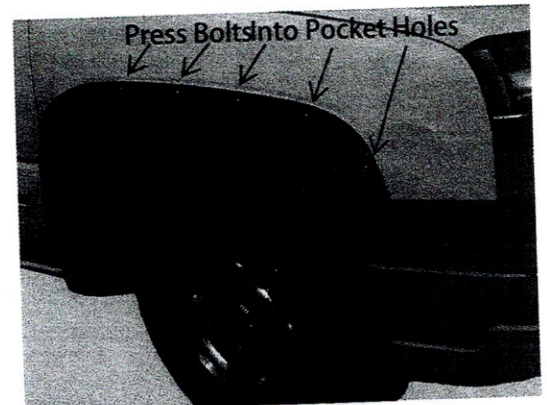

For RAM With Fender Moldings 1500/2500/3500 2009-2014

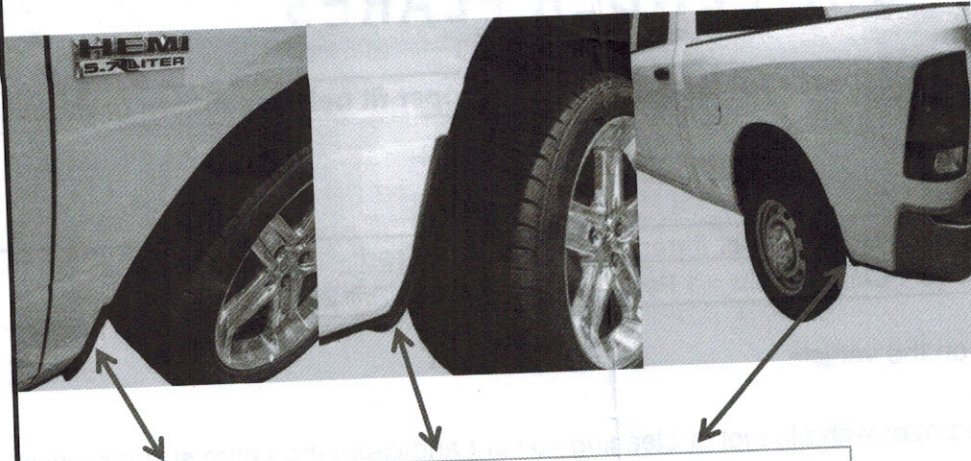

Both the side moldings for Front & Rear Fender need to be removed before installing the flares.

Painting Instructions for BRP Fender Flares:-

- 1 Wash the flares with soapy water & allow the flares to dry 100 %
- 2 Spray 2 layers of flexible 2K Primer (preferably grey color)
- 3 Allow the primer to dry; wet sanding the flares with 600 or 800 grit paper.
- 4 Wipe the wet flares with clean new towel.
- 5 Allow the flare to dry 100% before applying color coat.
- 6 Allow the color coat to dry 100% then apply the clear coat.
- 7 Light buffing to shine the flares.