

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 447-3416  
www.dawn-ent.com

## INSTALLATION INSTRUCTIONS


PART NUMBER: LCM-MAL08-123  
FOR: 2008 + Chevrolet Malibu  
EFFECTIVE: 01.05.10

### PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **LOCATION** (See Diagram below):

Using masking tape, run the tape **as shown using measurements in Diagram A below** from POINT A to POINT B. Press tape against the vehicle, making sure that the tape is straight from POINT A to POINT B.

DIAGRAM A

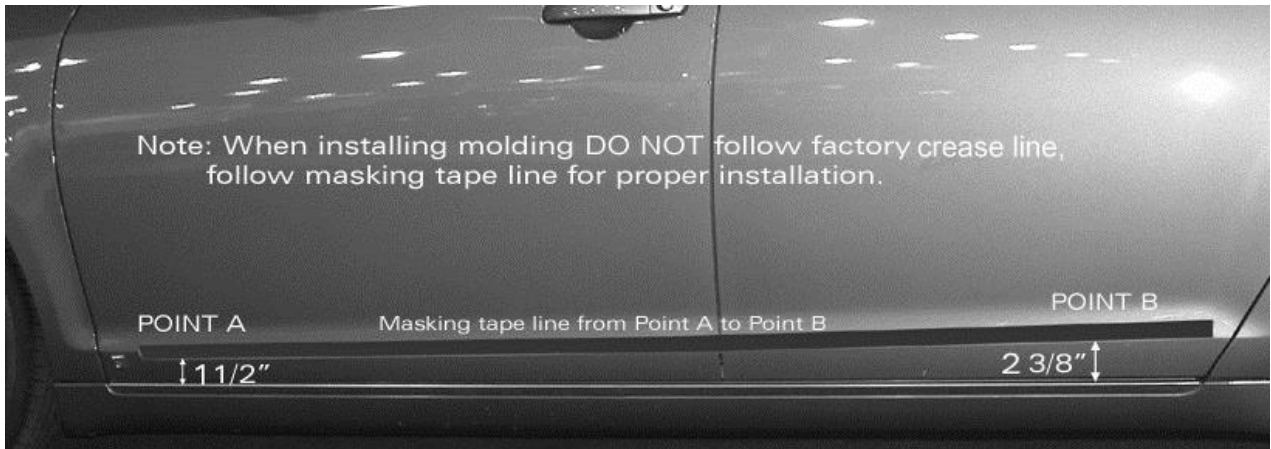


Measure up from the bottom of the doors to the bottom edge of the masking tape.

2. **CLEAN AND PREP:**

For proper installation of Lower Chrome Molding, clean the surface where the molding is to be installed using the alcohol pads enclosed. Wipe off excess residue with a clean cloth. Next, apply **PRO-BOND ADHESIVE PROMOTOR** in the crush swab self-applicator. Squeeze the applicator until you feel the applicator “crush”. The applicator will become wet on the end and is ready for use. Apply a thin coat of **PRO-BOND** below the masking tape line, only on the shaded area, **as shown in Diagram B**. Do not apply **PRO-BOND** in any area that the molding will not cover, as **PRO-BOND** could dull the paint surface. The light coat of **PRO-BOND** will dry quickly. Where cooler temperatures prevail, make sure the molding is at room temperature. The recommended metal surface temperature of the vehicle should be at least 75°F/24°C for proper installation. If the surface is cold, use a heat gun or hair dryer to warm before proceeding with installation.


DIAGRAM B

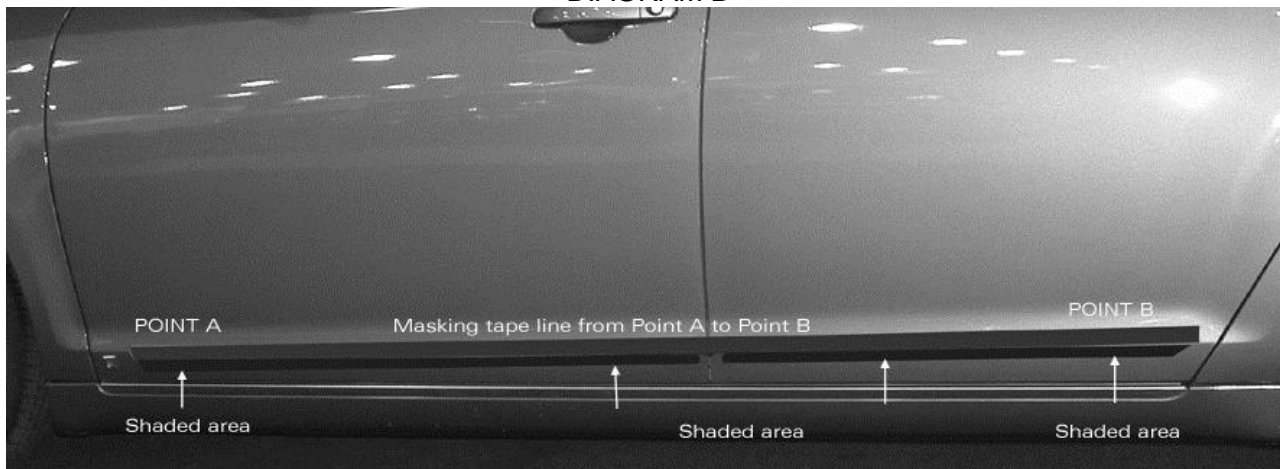

NOTE: For center of door application, see other side.

3. **INSTALLATION (IMPORTANT):**  
**Before starting, see Diagram C** as to where to start applying molding. Next, completely peel off all of the liner from back of molding, making sure die cut ends of red liner are also removed from molding. **DO NOT TOUCH** the exposed adhesive with your fingers as the installation is being done.

Since these moldings have been pre-cut, start adhering moldings rear piece first with the angle or bevel cut first and the finished end directed toward the rear wheel well. Next, install front door molding following **Diagram C** measurements.

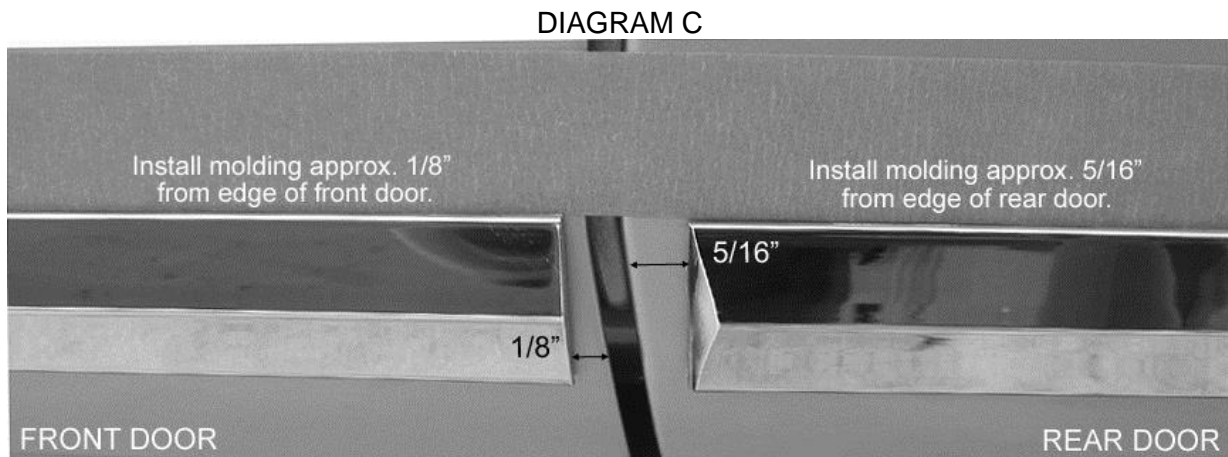

4. **AFTER THE MOLDING** has been installed, use a soft cloth and apply pressure along the entire length of the molding to insure proper adhesion.

**Also use LCM Molding as a Protective Bodyside Molding, just follow these easy instructions.**

**Location** (See Diagram below):

Using masking tape, run the tape **as seen in Diagram below** from POINT A to POINT B. Press tape against the vehicle, making sure that the tape is straight from POINT A to POINT B.

**Follow instruction Steps 2, 3, and 4 for installation.**



**NOTE:** Apply PRO-BOND below masking tape line, as instructed in Diagram B.