

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: 300-11-SRT
FOR: 2011-2012 Chrysler 300 SRT
EFFECTIVE: October 5, 2012

INSTALLATION PACKAGE INCLUDES:

- A. 3 – m6 x 1/4" Screws
- B. 3 – Flat Washers
- C. 3 – Paper Hole Locators

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

Steps:

1. CLEAN AND PREP

For proper installation of Sportwing®, clean the surface where the Sportwing® is to be installed using car wash soap and water. Before you install the part, please examine the spoiler against the car in natural sunlight. Check to make sure the paint colors match and that there are no paint flaws. If the Sportwing® is defective in any way, contact us and do not proceed with the installation.


2. **REMOVE TRUNK LINER**, then close trunk.

3. Measure down 12 5/8" from the front corner of the trunk lid where it meets the rear window glass and make a mark with a grease pencil. See diagram below.



4. Place Sportwing® on trunk and align tips of spoiler with the marks you just made in the previous step, center spoiler, and outline the spoiler using your grease pencil for placement later in installation.

5. Place Sportwing® upside down on soft cloth surface and apply paper hole locators precisely over the screw holes as shown.

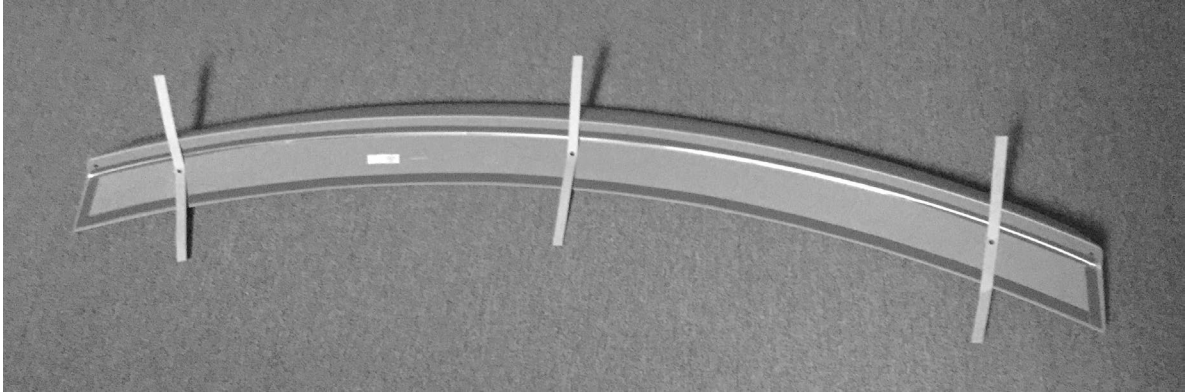

6. Place Sportwing® onto trunk in the outlines you made in step 4, make sure it is centered. Tape down paper hole locators once spoiler is in place, then lift Sportwing® away from the hole locators, leaving them in place where they were taped down.
7. Then, using a 1/8" drill bit, drill holes directly through the center of the locators. After that, using a unibit, open the holes to 7/16".
8. Apply zinc chromate primer or touch up paint on the edges of the three (3) 7/16" holes on the deck lid.
9. Once paint has dried, remove red liner and carefully place Sportwing® in grease pencil outline and center from side to side. When placed in desired location, press down firmly until spoiler is stuck onto trunk. Then, open trunk and screw in spoiler using screws and washers provided. Be sure to hold onto the spoiler during this step to ensure it does not fall.
10. Re-install trunk liner, clean up any metal shavings, and you are done. If you have any questions, or if you would like information about other quality Sportwing® products, please call the TOLL-FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.