

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: CAMARO14-HW
FOR: 2014-2015 Chevrolet Camaro
EFFECTIVE: 07.08.14

INSTALLATION PACKAGE INCLUDES:

- A) Alcohol Wipes
- B) 6 — Paper Hole Locators (used in Step #4)
- C) 6 — M-6 5/8" Metal Screws
- D) 6 --- Lock Washers
- E) 6 --- Flat Washers
- F) 6 — Tape Gaskets – to be placed over mounting holes made in Step #6
- G) Instruction Sheet

EXTRA TOOLS NEEDED:

- A) 1 — Grease pencil (*China Marker*)
- B) 1/8" (or similar) Drill Bit
- C) Uni-bit – Makes for a cleaner cut

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Clean area of deck lid where Sportwing® is to be installed using the provided alcohol wipes. Open Trunk and place a protective cover inside the trunk to capture any metal shavings.
2. Starting on the driver's side, measure down 15.5" from the front corner of the trunk lid where it meets the rear window glass and make a mark. Repeat on passenger side. **See Diagram A on back of sheet.**
3. Place the Sportwing® on the marks made in Step #2 so that as you face the rear of the car, the front edge of the Sportwing® rests on the marks. Center the Sportwing® exactly from left to right. Using a grease pencil, outline each outer mounting area. You will use these outlines later in the installation to guide the placement of the spoiler back into the correct position.
4. Place the Sportwing® upside down on a soft cloth that will not scratch the painted surface. Find the six (6) provided paper hole locators and remove their paper backing to expose the adhesive. Locate the six (6) OUTERMOST mounting holes on the bottom of the Sportwing® and place the cut out hole locator centered exactly over these six fastening holes. **See Diagram B on back of sheet.** A piece of masking tape can hold the hole locators in place. Making sure the hole locators do not move, flip the Sportwing® over and place it back onto the grease pencil marks you made in Step #2.
5. When the Sportwing® is centered on the outline marks from Step #2, and making sure the six (6) paper hole locators did not move, tape all six (6) paper hole locators to the deck lid using masking tape. Next, carefully lift the spoiler off the deck lid, leaving the hole locators taped to the deck lid.
6. Using the 1/8" drill bit, and holding the drill straight down at a 90° angle to the deck lid, drill a 1/8" hole through the top panel of the deck lid and continue drilling through the secondary panel if needed. Remove the hole locators. The six pilot holes need to be opened to 3/8" (**NOTE:** we suggest using a uni-bit for a cleaner cut).
7. Apply touch-up paint or zinc chromate primer to the edges of the six (6) 3/8" holes in the top panel.
8. Place the Sportwing® back onto the deck lid, holding it tight as you open the truck to check to make sure that the six (6) holes are in their correct place (we recommend having one person hold the Sportwing® and the other check the holes). If the holes line up, close the trunk and peel off the red liner from the tape on the back of the Sportwing®. After removing tape, firmly place the spoiler onto the deck lid within the outline made in step #3, making sure the holes line up. Next, open the trunk and tightly fasten the screws into the Sportwing® to secure it.
9. Close the trunk and wipe off any grease marks made in the installation process.
10. If you have any questions, or if you would like information about other quality Sportwing® products, please call the toll free number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

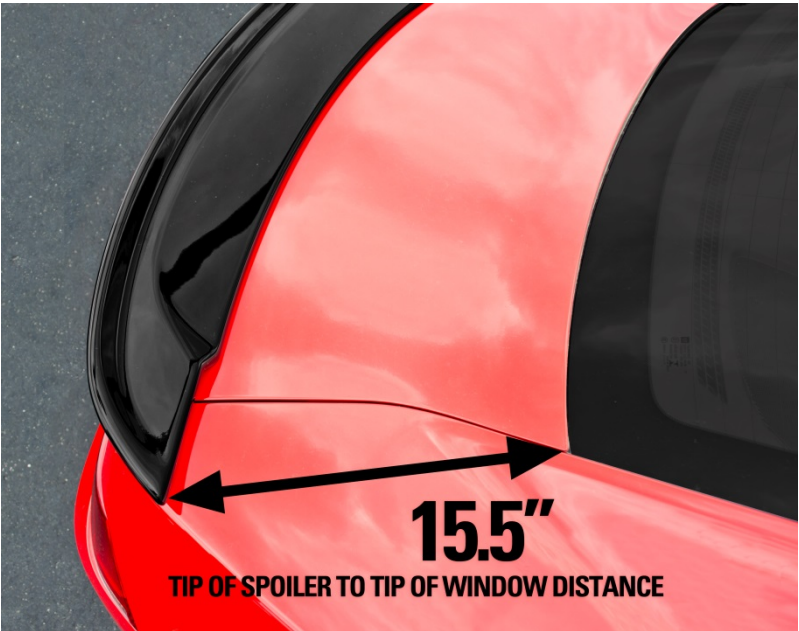


DIAGRAM B



DIAGRAM C – Finished Product

