

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr. Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.Dawn-Ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: CAMARO16-PED
FOR: 2016 + Chevrolet Camaro
EFFECTIVE: 01.17.17

INSTALLATION PACKAGE INCLUDES:

- 6 M6 x 5/8" Screws
- 6 Flat Washers
- 6 Hole Locators

TOOLS NEEDED:

- 1/8" Drill bit and drill
- Unibit
- Panel Puller
- Screw Driver
- T30 Torx Bit
- Ratchet (For Torx Bit Use)

STEPS:

1. Open the deck lid and, using your panel puller, remove the carpet trunk liner.
2. Remove all black caps that are on the edges of the trunk.
3. Carefully remove the Sportwing® from the packaging and place it upside down on a soft cloth surface.
4. Place the 6 hole locators precisely over the installation holes on the bottom of the Sportwing® pedestal feet.
5. Then, close the trunk and place the Sportwing® on the deck lid.
6. Measure from the tip of the trunk on each side and make sure both measurements come to 10 ¾" (See **Diagram A**).
7. Tape down the hole locators, then carefully lift the Sportwing® off the deck lid, leaving the hole locators taped down stuck to the deck lid (See **Diagram B**). Place the Sportwing® on a soft cloth surface.
8. Using a 1/8" drill bit, drill all 6 holes in the center of the hole locators.
9. Once completed, using a Unibit, open all 6 holes up to 7/16".
10. Open the trunk and remove the trunk latch with your T30 Torx bit. You will use holes located behind the latch to install top center screw.
11. Once completed, find some help. With the trunk open, you will have to hold the Sportwing® up while you and a friend put one screw in on each side. DO NOT TIGHTEN the bolt too much, you want to be able to move the Sportwing® to the precise position if needed.
12. Close the trunk, check your measurements to ensure from tip to tip is still 10 ¾".

13. Once that's completed, open the trunk and install the remaining 4 screws/washers.
14. Reinstall trunk latch, and carpet liner. Reinstall all black caps that were removed. Clean up any metal shavings, and you are done. If you have any questions, or would like more information about other quality Sportwing® products, please call the TOLL-FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

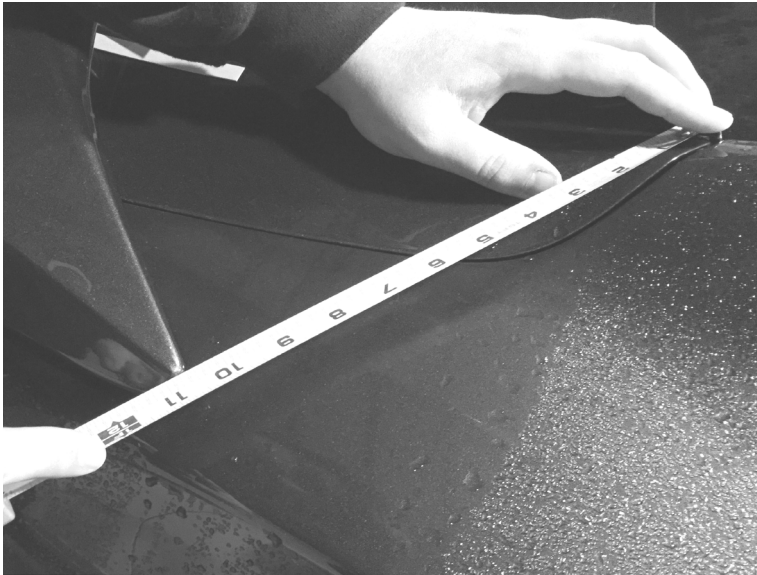


DIAGRAM B



2 of 6 of the opened, drilled holes.

